

Essential Active Stool




No Tools
Required




Holds up to
250 lb (113.4 kg)

vari®

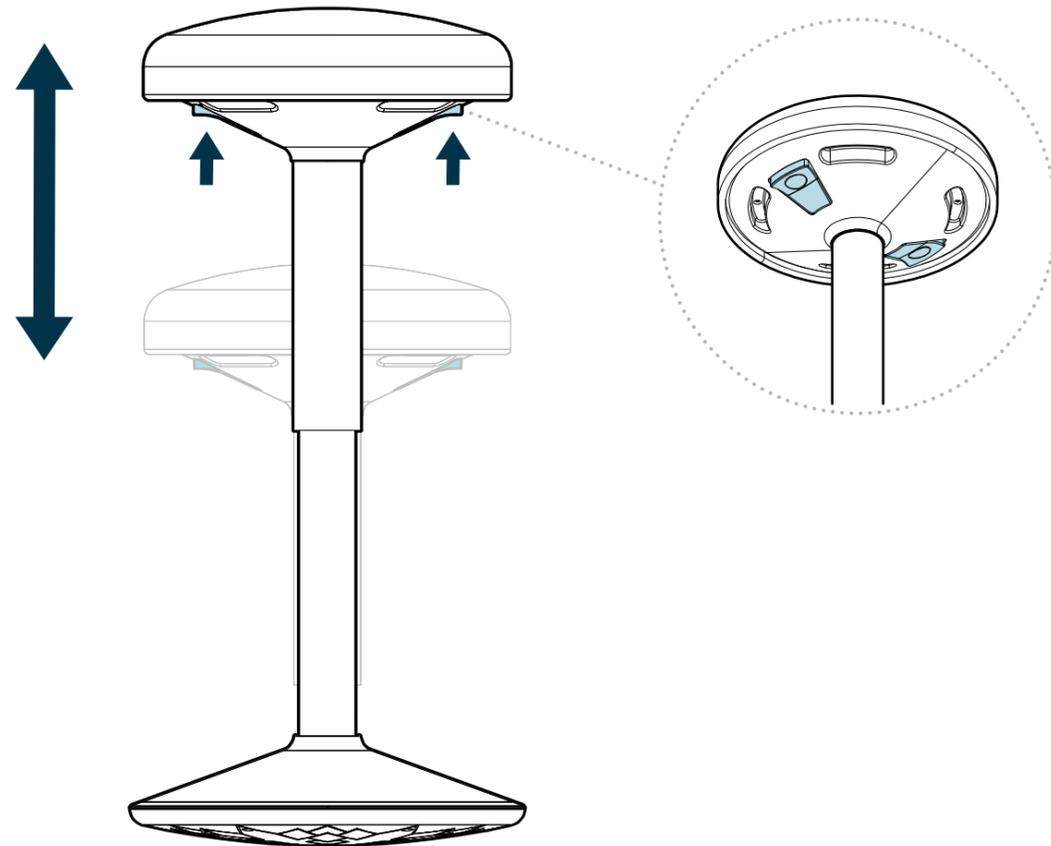

To raise or lower the seat, press and hold one or both buttons under the seat cushion, and release when the stool is at the desired height.

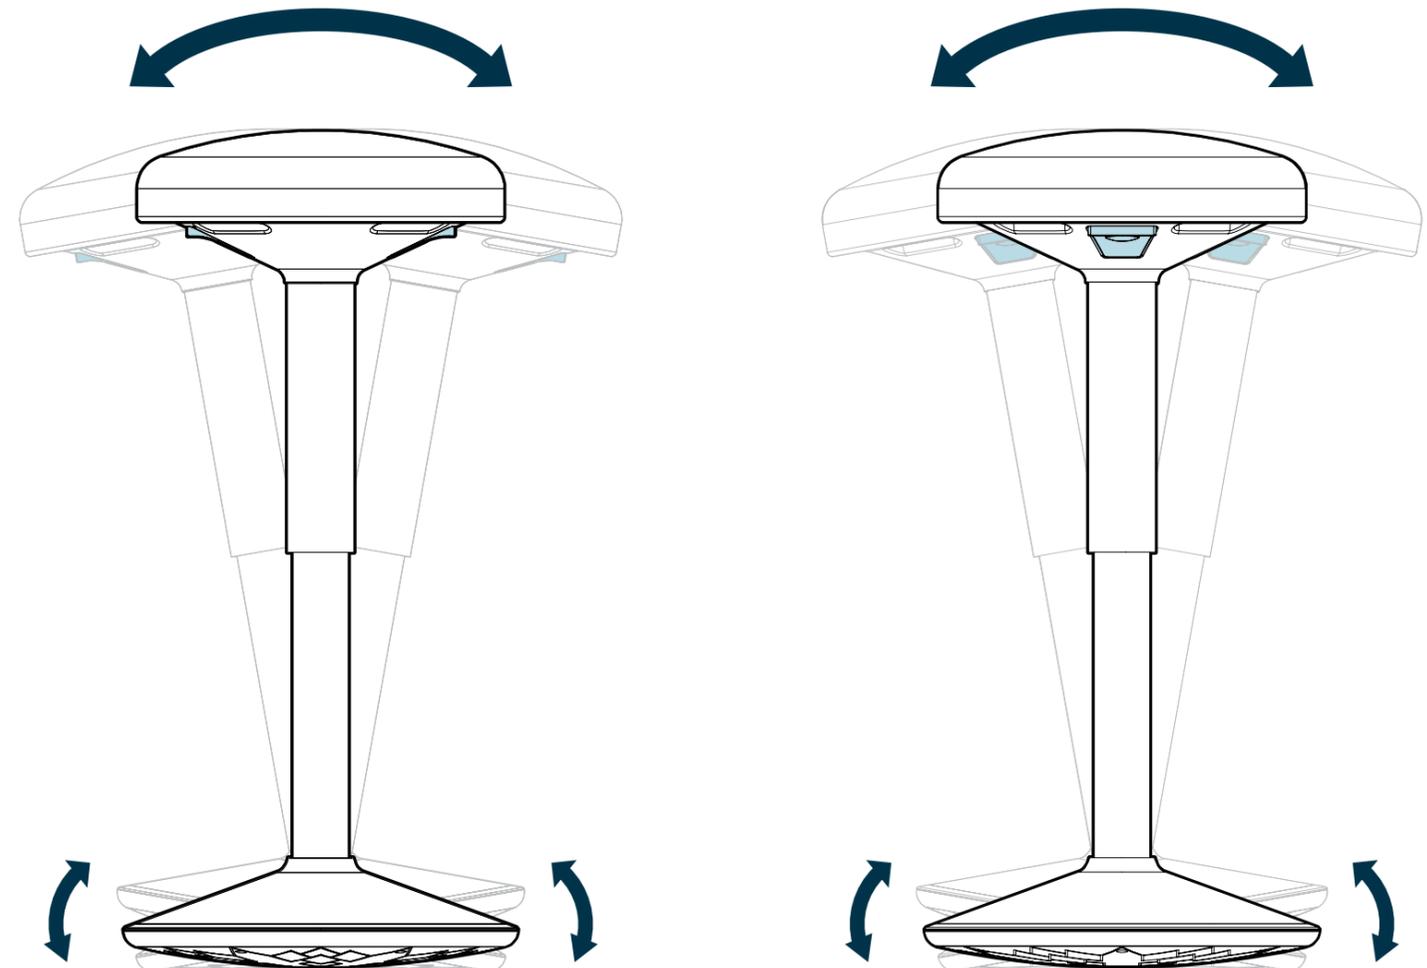

Able to tilt in all directions, the Essential Active Stool allows for a full range of motion to ensure comfort while sitting or standing.



CAUTION: This product is intended for office use, limited to sitting and/or leaning only. Misuse may void warranty or cause injury.

NOTICE: CLEANING AND CARE – Use a damp cloth to wipe down the product, and then dry completely using a soft towel. For stain removal, a mild, diluted dish soap may be used sparingly. Do not use harsh or chlorinated detergents or immerse completely in water.

NOTICE: Do not attempt to repair any part of this product. Contact our customer service department during business hours to report any issues. Our service technicians will provide a replacement if necessary.

NOTICE: WEIGHT LIMIT – To avoid damage to the product, do not exceed the 250 lb (113.4 kg) weight limit.

