# **Foundation Chair**












Holds up to 275 lb (124.74 kg)

## **Components**



CHAIR BACK

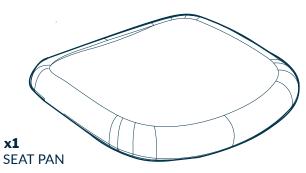




**x1** RIGHT ARMREST




**x1** LEFT ARMREST

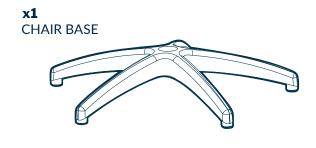



**x5** CASTERS

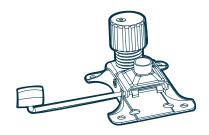

**x1** MECHANISM



**x1**PISTON
Remove cap prior to assembly





**x4**<sup>1</sup>/<sub>4</sub>" X 1 <sup>3</sup>/<sub>4</sub>" SCREWS



**x2**½" X 1½" SCREWS




**x8**½" X 1" SCREWS




**x14** 16MM X 6.5MM X 1MM WASHER



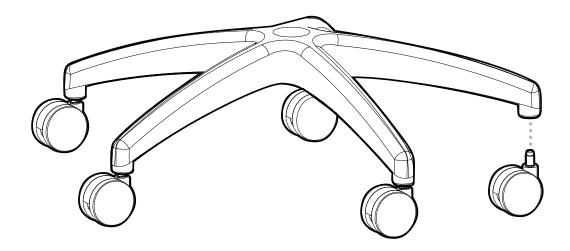


Insert the five **CASTERS** into the **CHAIR BASE** until they snap into place. Once attached, flip the base over.

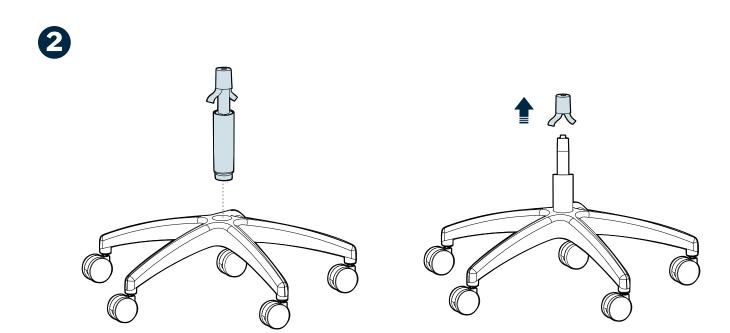

Lower the larger end of the **PISTON** into the center of the base until it is secure, then remove the **PISTON'S PROTECTIVE CAP**.


NOTE: Remove the PROTECTIVE CAP from the smaller end of the PISTON. Once the piston is installed, the cap is no longer needed and should be discarded.



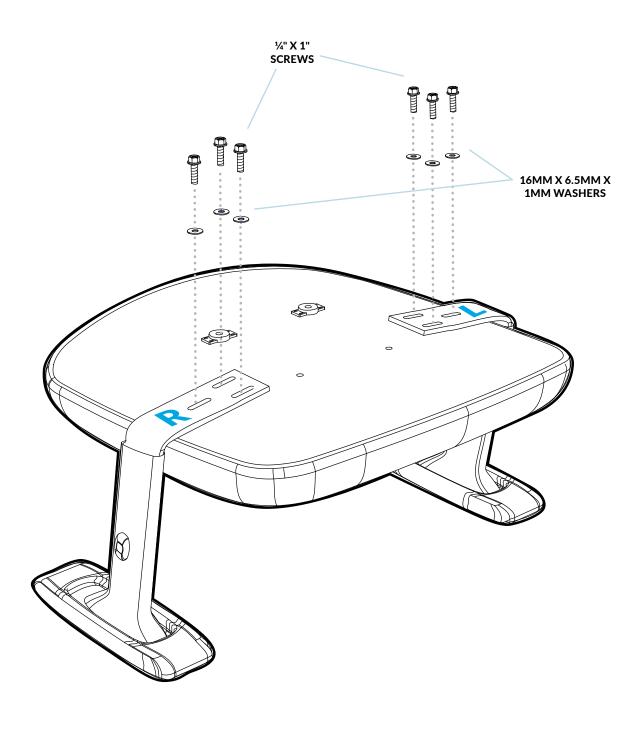


With the **SEAT PAN** upside down, align the **ARMREST** holes with the seat pan, ensuring the **L and R** marks match. Place **SIX** (6) **16MM X 6.5MM X 1MM WASHERS** onto **SIX** (6) ¼" **X 1" SCREWS**, forming six (6) sets. Insert the screw into the mounting holes and secure them in place using the included **5MM ALLEN KEY**.



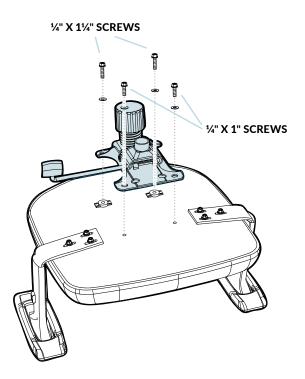


Line up the mounting holes to connect the assembled **MECHANISM** to the seat. Place **two** (2) 16MM X 6.5MM X 1MM WASHERS onto **two** (2) ½" X 1½" SCREWS and insert them into the <u>front</u> mounting holes of the mechanism. Place **two** (2) 16MM X 6.5MM X 1MM WASHERS onto **two** (2) ½" X 1" SCREWS and insert them into the <u>rear</u> mounting holes of the mechanism. Tighten all screw sets securely using the included **ALLEN KEY**.

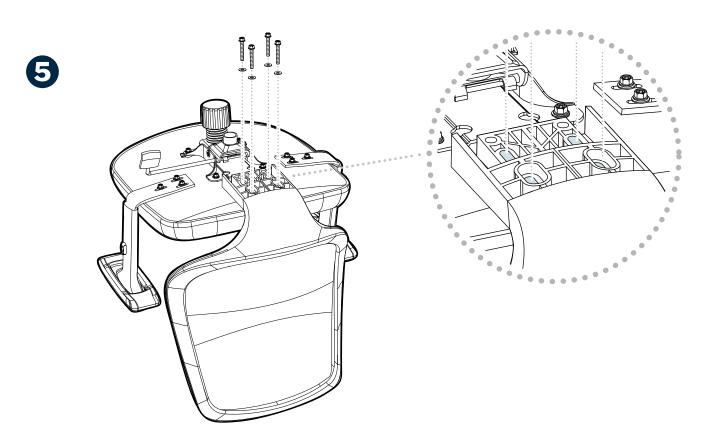

Secure the **CHAIR BACK** to the **SEAT PAN** by placing **four (4) 16MM X 6.5MM X 1MM WASHERS** onto **four (4) ½" X 1¾" SCREWS** and insert them into the mounting holes shown. Tighten the screw sets securely using the included **ALLEN KEY**.



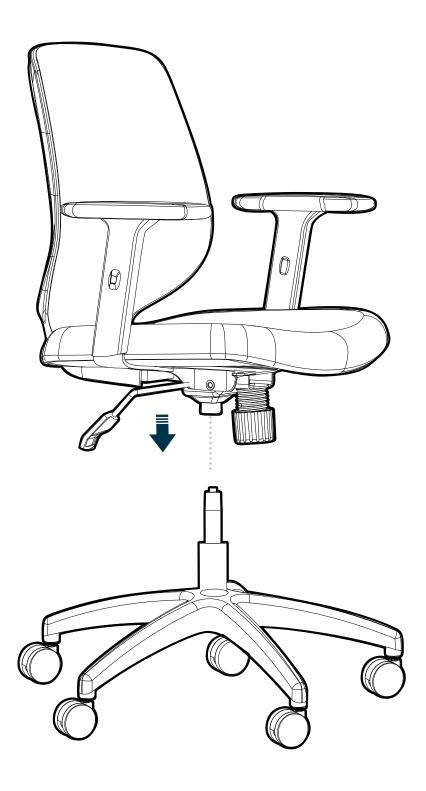

With assistance, carefully lower the chair seat onto the **PISTON**. Press down evenly on the seat cushion a few times to ensure it's fully secured.


CAUTION: Once assembled, do not attempt to dissemble the chair, as doing so could damage the product.

### **Adjustment Options**




#### **SEAT HEIGHT ADJUSTMENT**

To adjust seat height, lift the lever under the right side of the chair seat. Release the lever to lock the seat height in place.

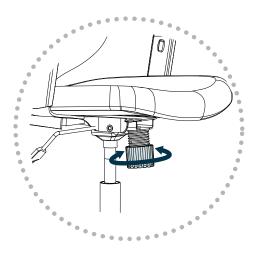


#### **CHAIR BACK TILT ADJUSTMENT**

To adjust how easily the backrest reclines, turn the knob clockwise to increase tension and counterclockwise to decrease tension.

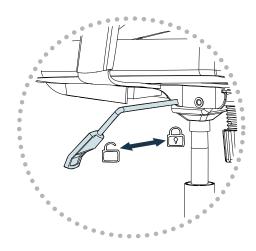

#### **CHAIR BACK RECLINE LOCK & UNLOCK**

To unlock and recline the chair back, pull the right-side lever outward. Push the lever inward to lock the chair back in place.

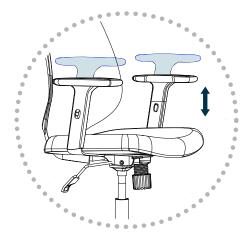

#### **ARMREST HEIGHT ADJUSTMENT**

To adjust the arm height, press and hold button on the outside of the arms. Lift or lower the arms and release the button once at the desired height.



**WARNING:** To prevent injuries and product failure, do not use this chair for standing, climbing, or leaning. Do not use if the chair is damaged or incorrectly assembled.

