



Summit & High Back Summit Chair

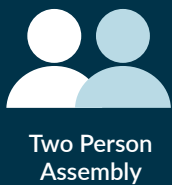


vari®

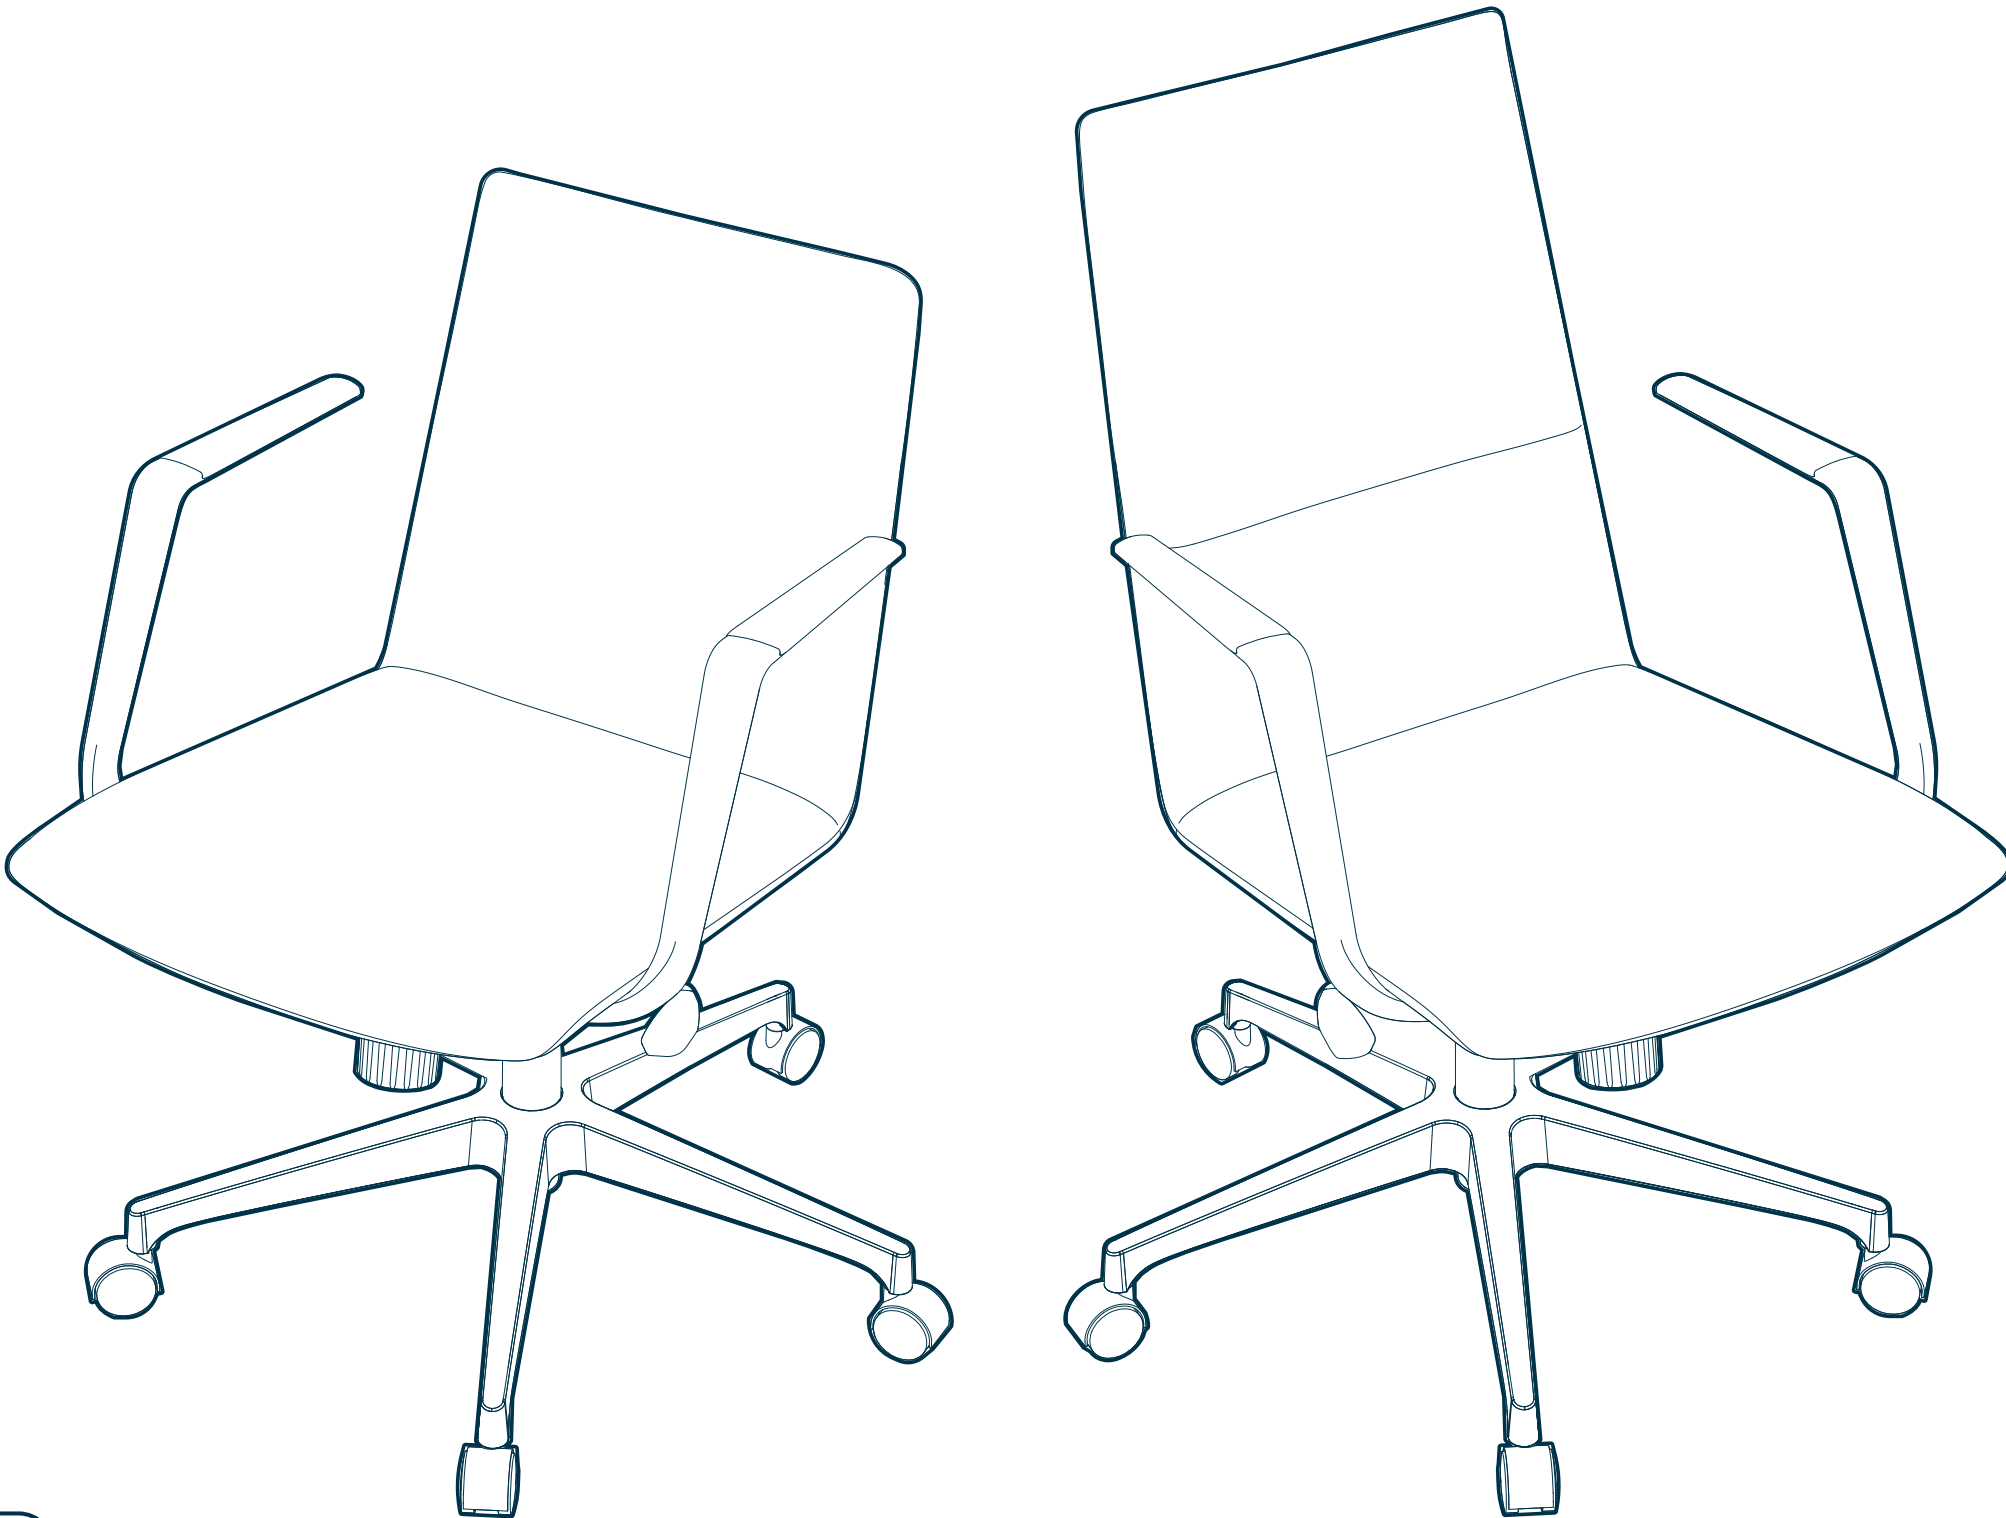


(800) 207-2587


COMPONENTS

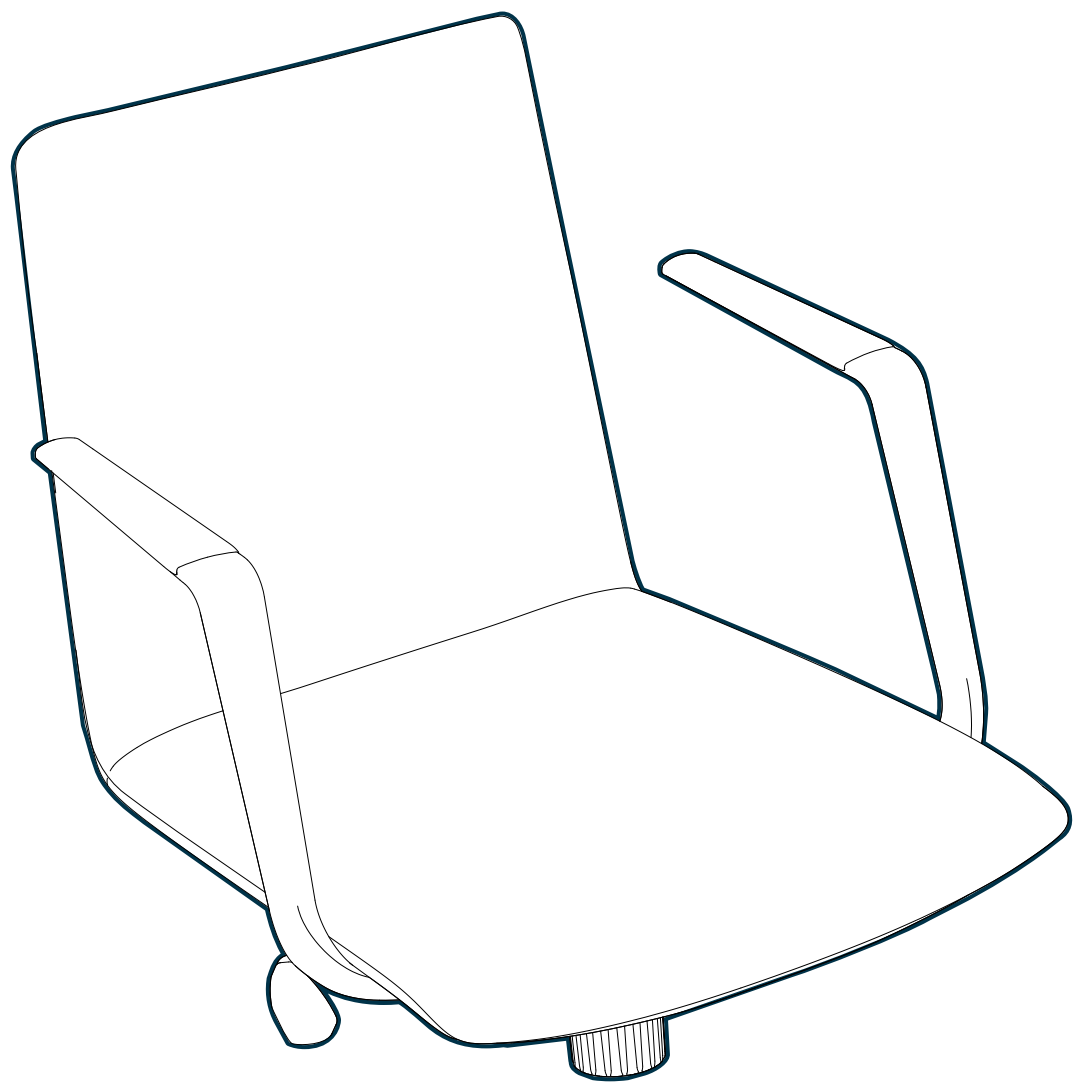

SEAT
x1

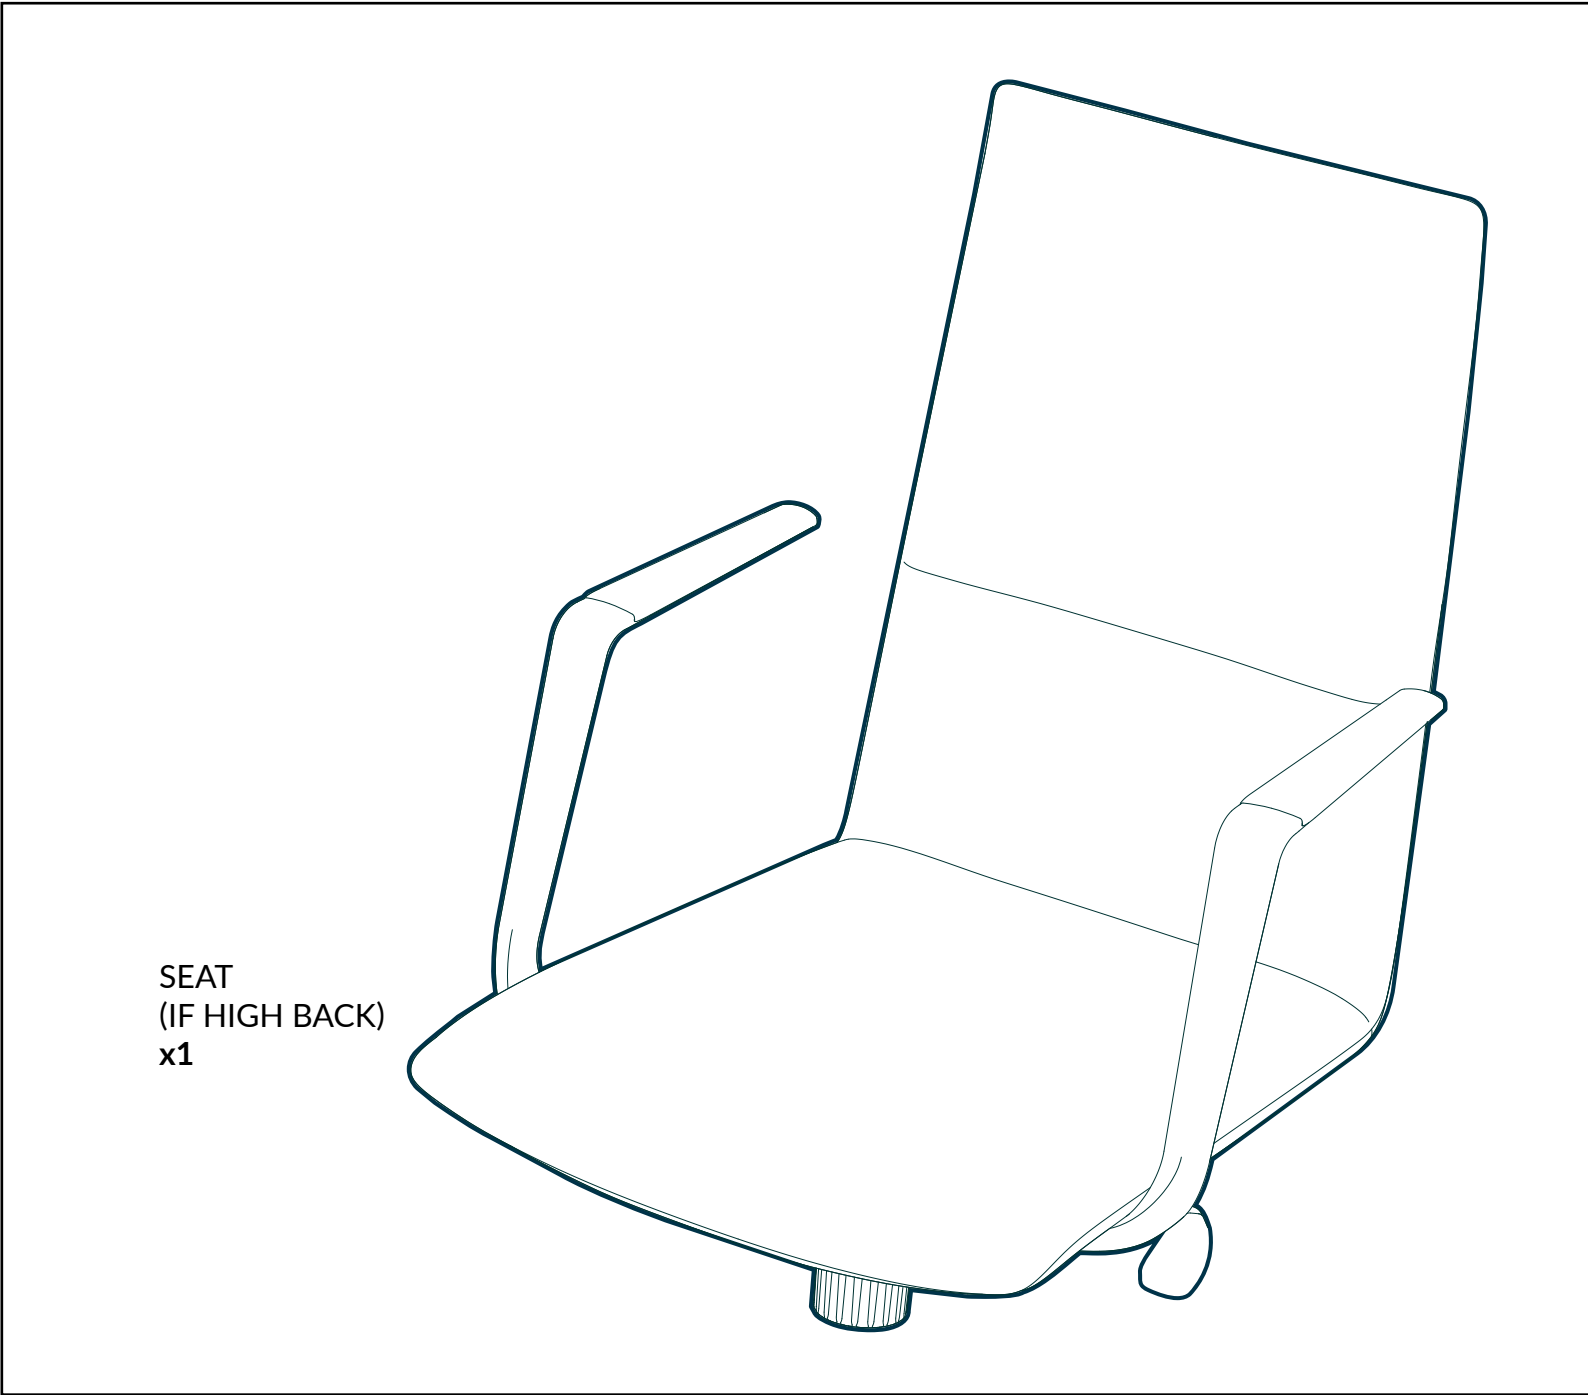


SEAT
(IF HIGH BACK)
x1

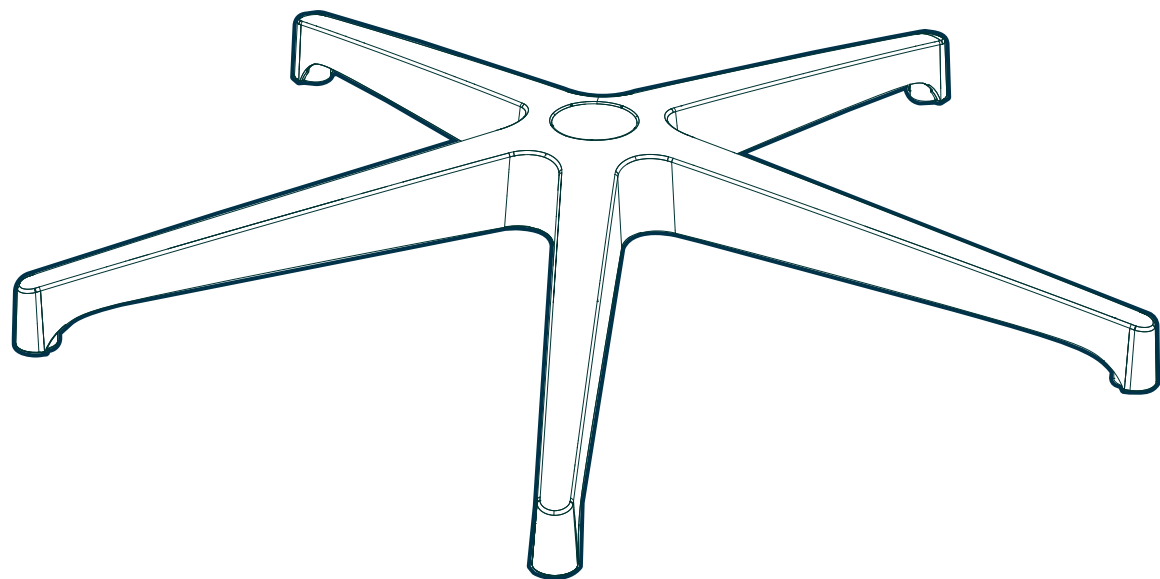

CHAIR BASE
x1




PISTON
x1

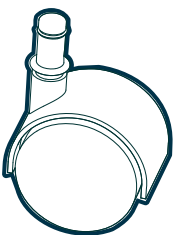


CASTERS
x5

1

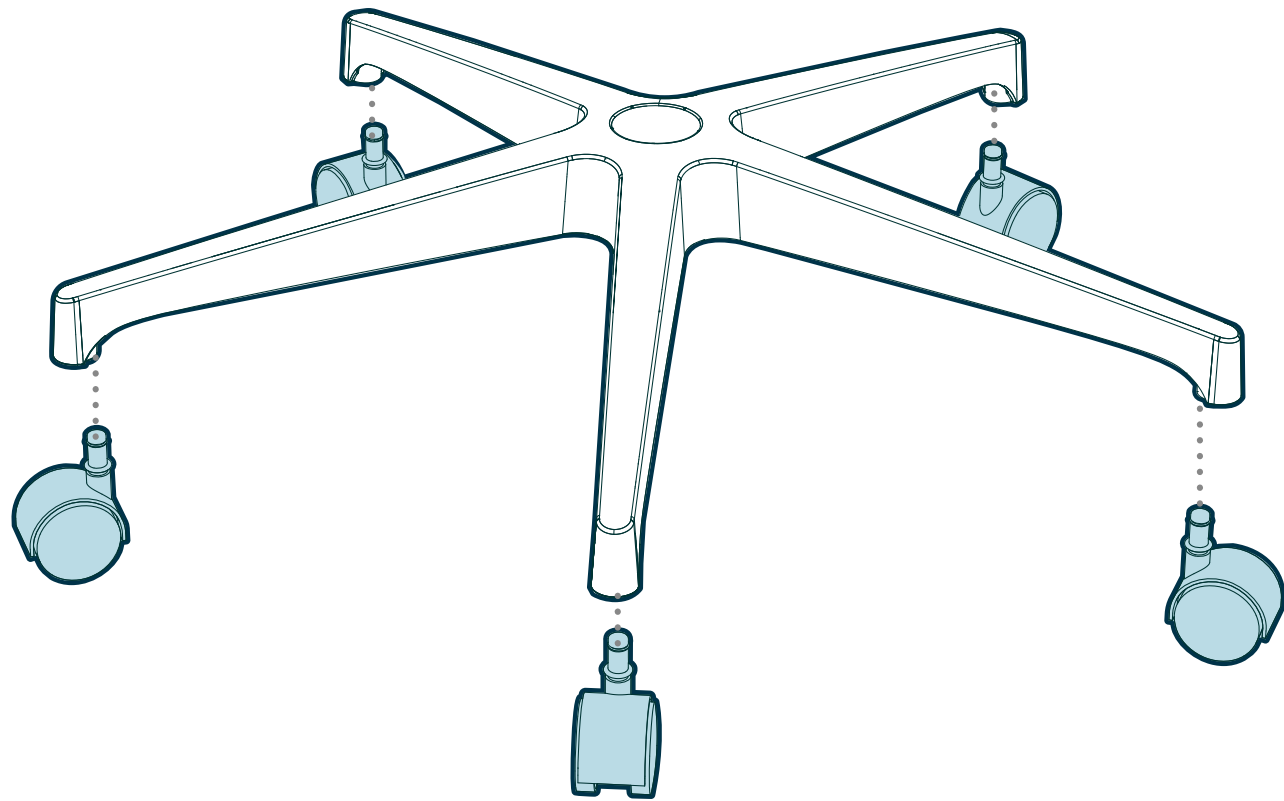

Insert the five **CASTERS** into the **CHAIR BASE** until they snap into place.
Once attached, flip the base over.


2

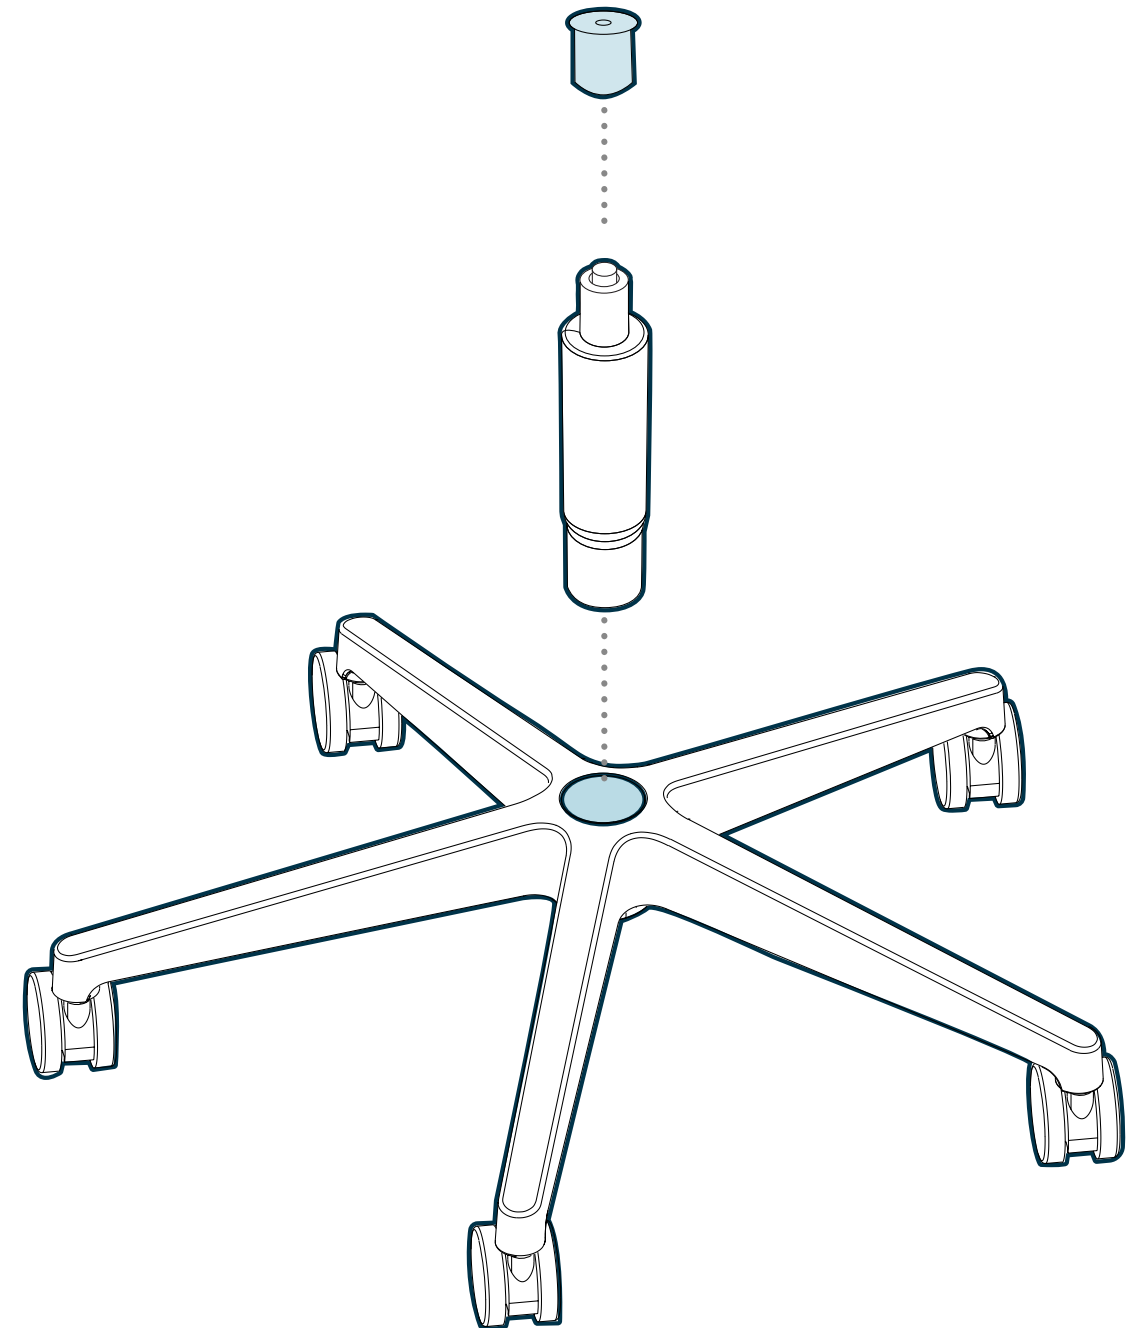

Lower the larger end of the **PISTON** into the center of the base until it is secured.

***NOTE:** Remove the **PROTECTIVE CAP** from the smaller end of the **PISTON**. Once the chair is assembled, the cap is no longer needed and can be discarded.*

3

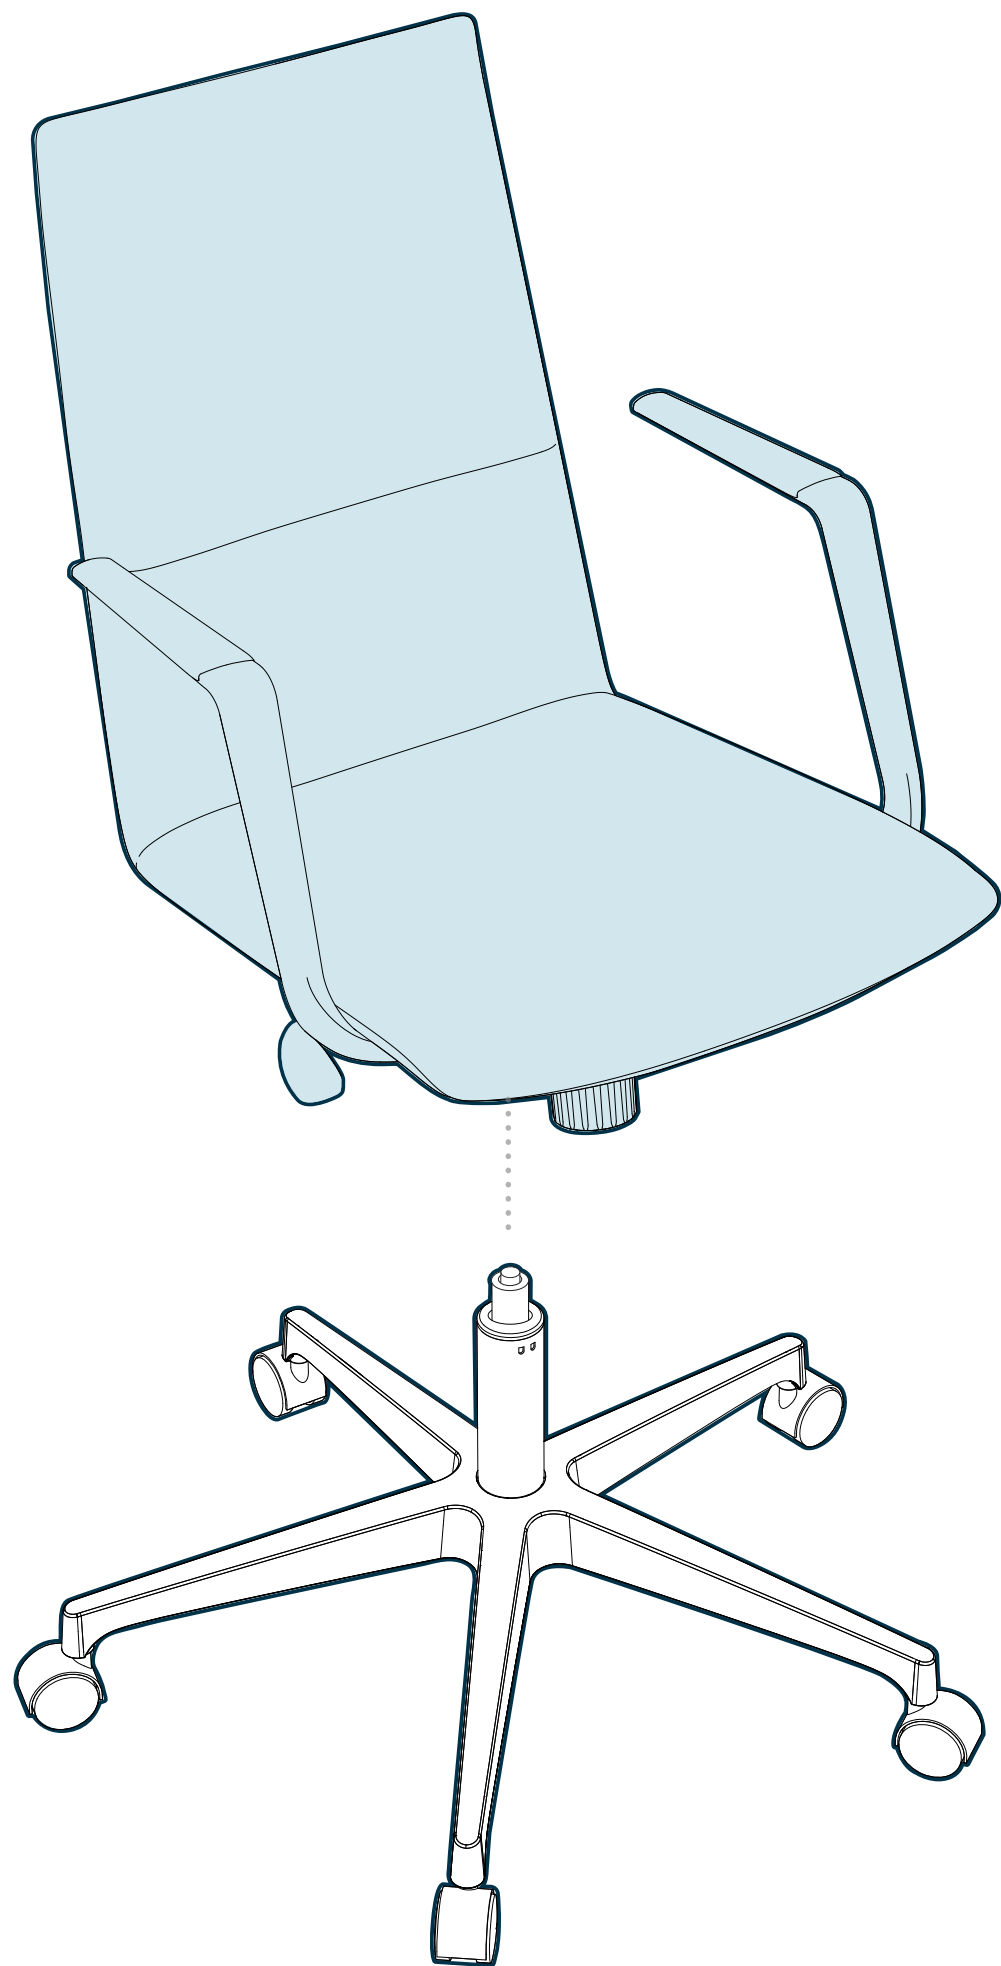

Take the **CHAIR SEAT** and place it onto the **PISTON** that is attached to the **CHAIR BASE**. Push down firmly to secure it in place.
CAUTION: Once assembled, do not attempt to disassemble the chair, as doing so could damage the product.

ADJUSTMENT OPTIONS



To adjust seat height, use the lever under the right side of the chair seat.

To adjust how easily the seat reclines, turn the knob under the front of the seat clockwise to increase the tension and counter clockwise to decrease the tension.



WARNING: To prevent injuries and product failure, do not use this chair for standing, climbing or leaning. Do not use if the chair is damaged or incorrectly assembled.