Performance Task Chair












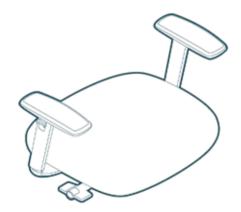

SEAT **x1**



PISTON **x1**




CHAIR BASE **x1**




M8x30mm BOLTS **x5**



ALLEN KEY **x1**

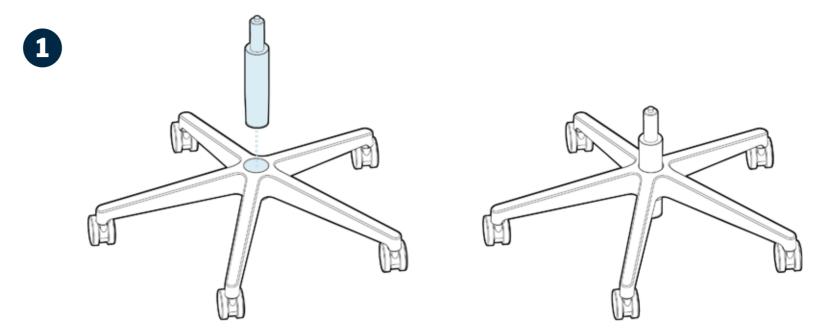


Place the piston into the chair base with the smaller side pointed up.

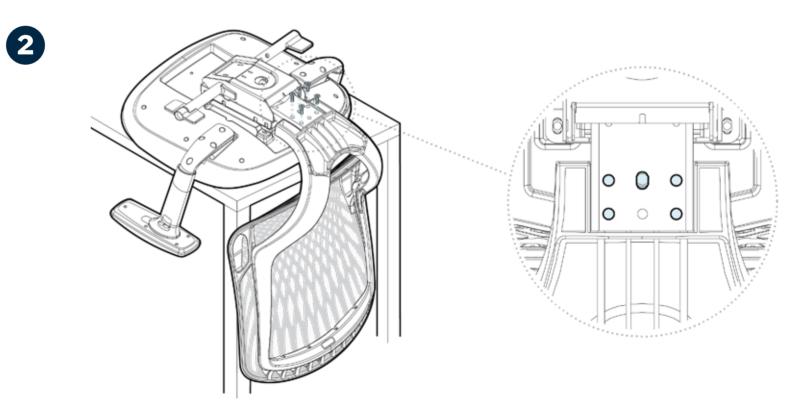

Place the seat onto a table, and then line up the holes to connect the seat back to the seat. Then, insert the bolts into the highlighted holes above, and use the Allen key to tighten them into place.




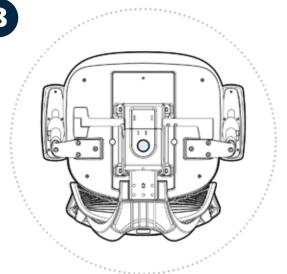



With assistance, take the assembled seat, and place the highlighted section of the mechanism onto the highlighted section of the piston.

Performance Task Chair Adjustments

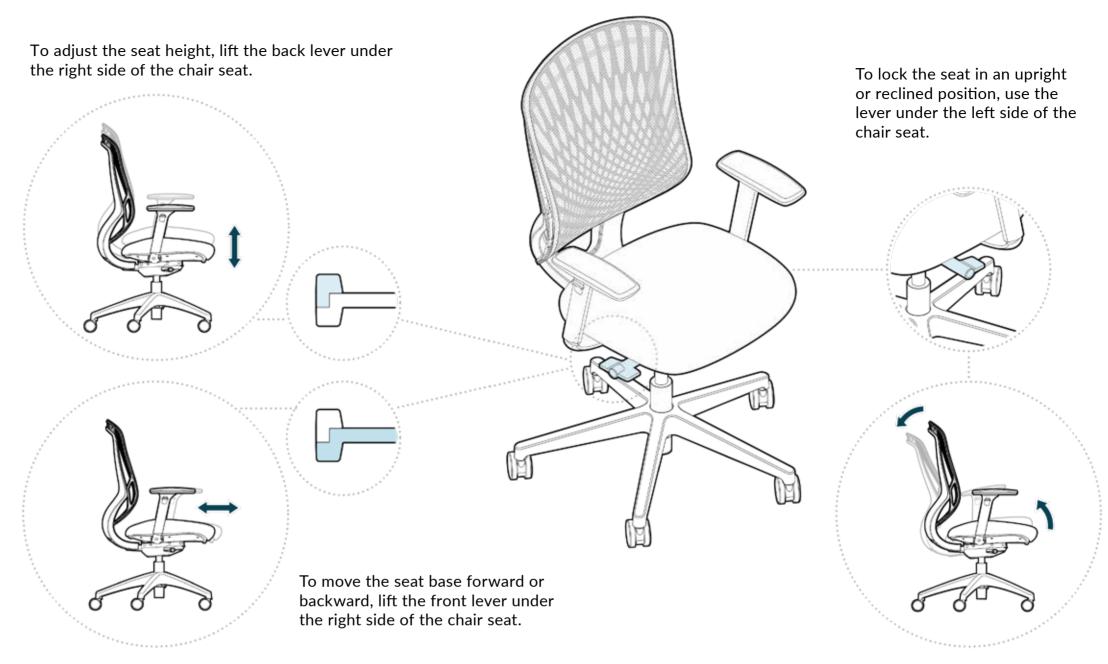

4D Arm Adjustments



To adjust the arm height, press and hold the button on the outside of the arms. Lift or lower the arms, and release the button once at the desired height.



To adjust the front-to-back position of the armrest, gently grab the center of the armrest, and slide forward or backward into the desired position.



To adjust the side-to-side position of the armrest, gently grab the center of the armrest, and slide inward or outward into the desired position.



To adjust the angle of the armrest, gently grab the front or back of the armrest, and twist laterally into the desired position.