

# VariDesk® Laptop Stand




## WEIGHT CAPACITY


Fits most laptops, tablets,  
and books from 10" to 17"  
and up to 9 lbs (4 kg)

# vari®

## COMPONENTS

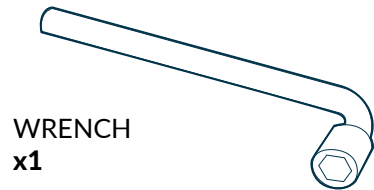


WRENCH  
x1

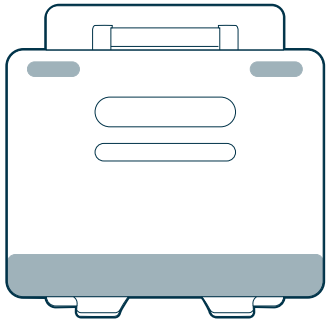

LAPTOP STAND  
x1



## TENSION ADJUSTMENT:

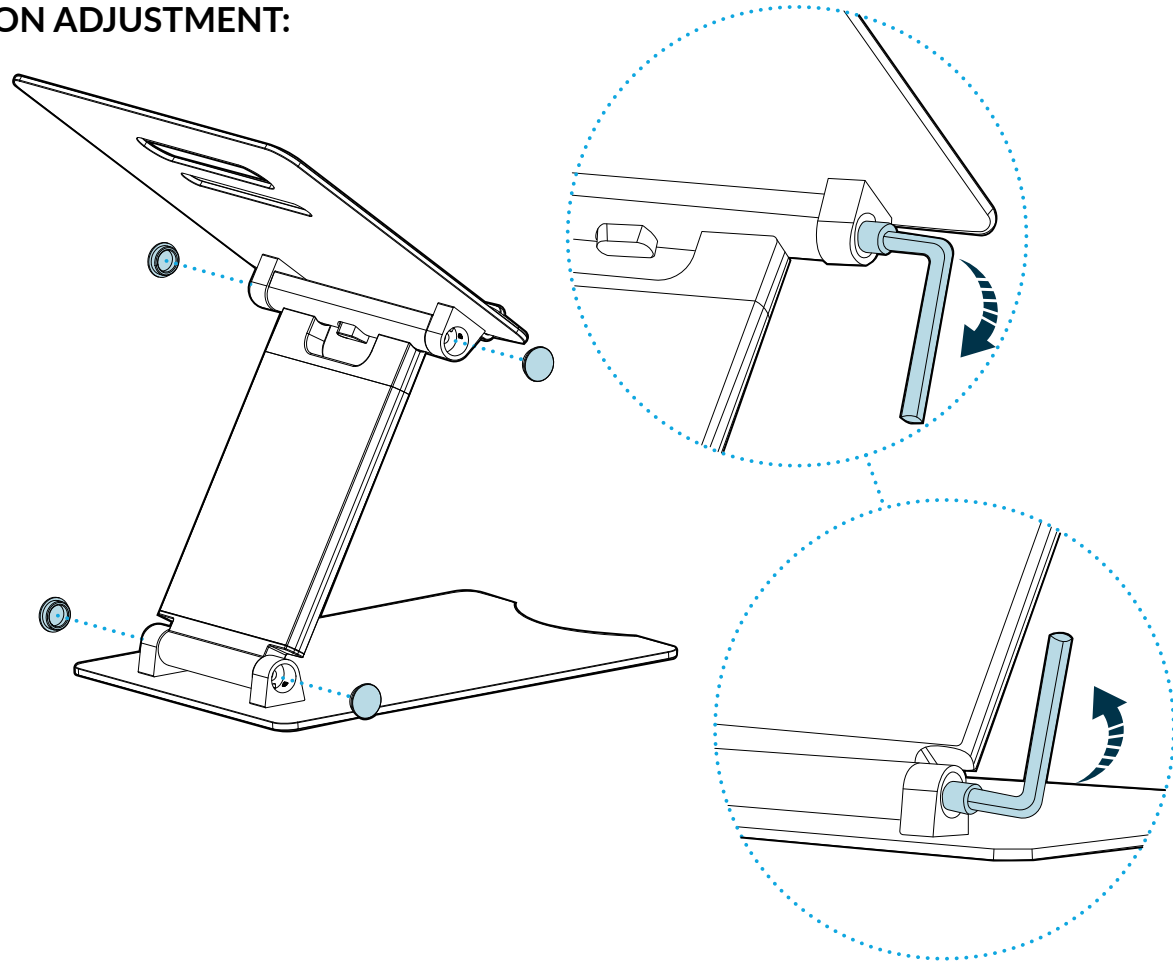

By adjusting the tension, you can control how easily the stand and worksurface move during use. To loosen or tighten the mechanisms:

1. Remove the rubber caps to expose the tension screws.
2. Use the included wrench and turn clockwise to tighten or counterclockwise to loosen.

## HEIGHT ADJUSTMENT:

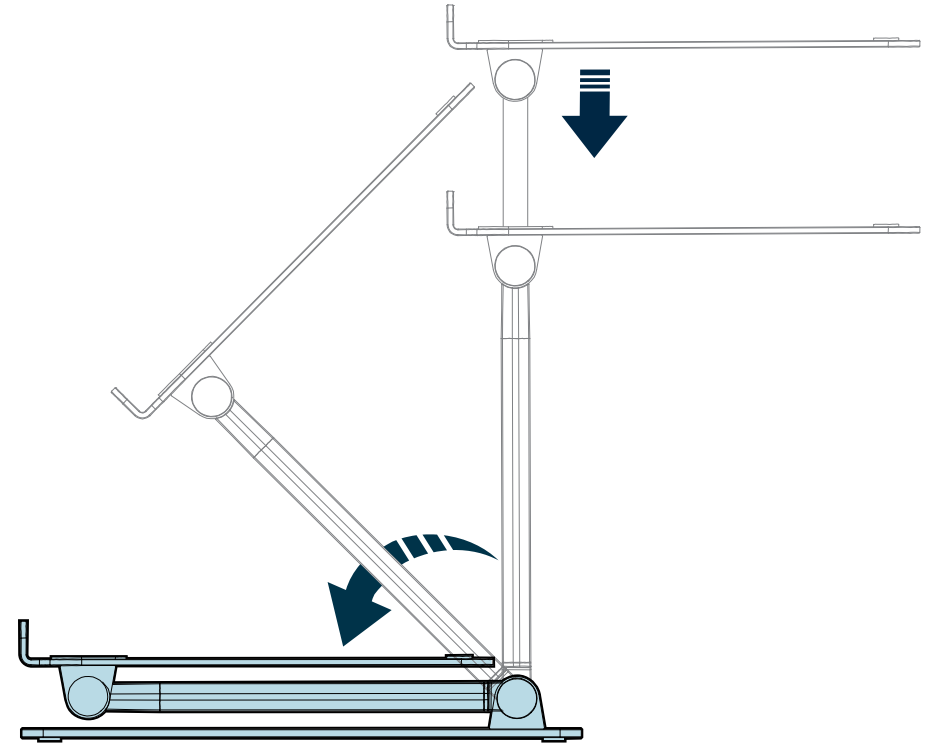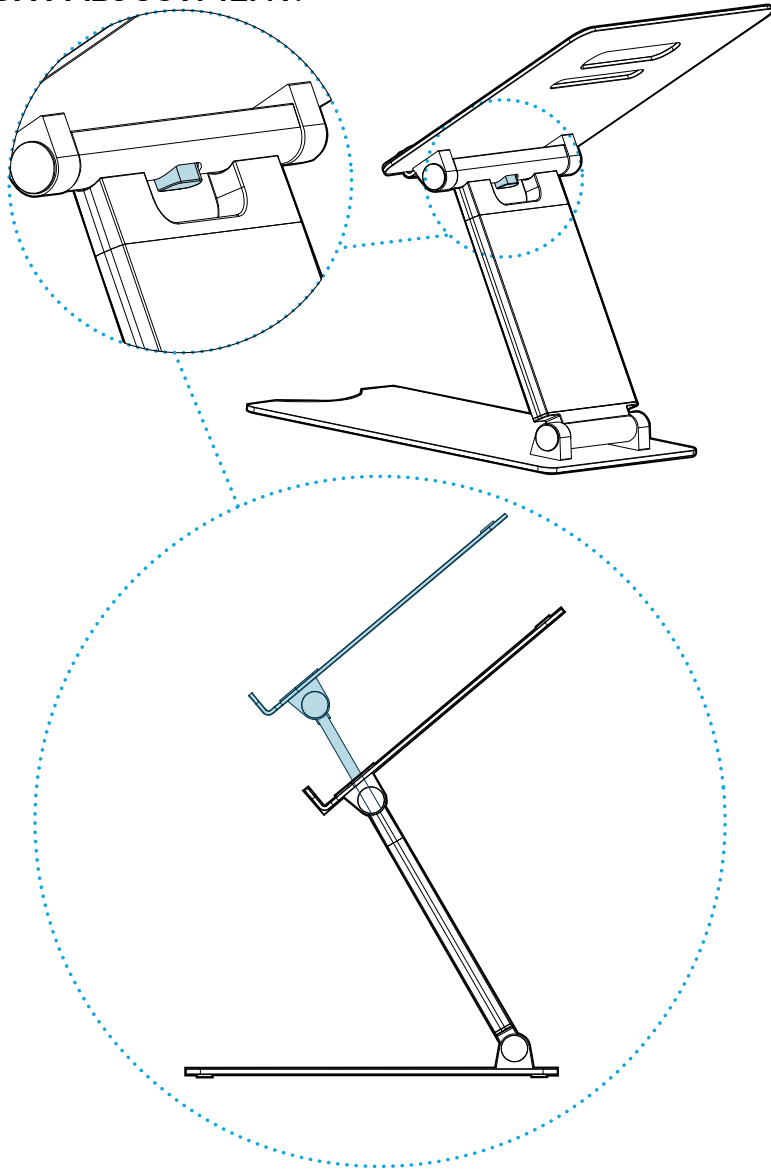

To adjust up or down, press and hold the center button underneath the work surface and lift or lower the stand to your desired position.



**WARNING:** To prevent injuries or product failure, do not use VariDesk Laptop Stand for standing, climbing, or leaning. Do not use if riser is damaged.



**WARNING:** Pinch point. Keep hands, fingers, and cords away from moving parts and pinch points during adjustment and use. Risk of injury or cable damage.



**(800) 207-2587**

Patent and trademark information: [vari.com/patents](https://vari.com/patents) | ©2026 Varidesk, LLC All rights reserved.