## **Drafting Chair**









No Tools Required




Holds up to 300 lb (136 kg)




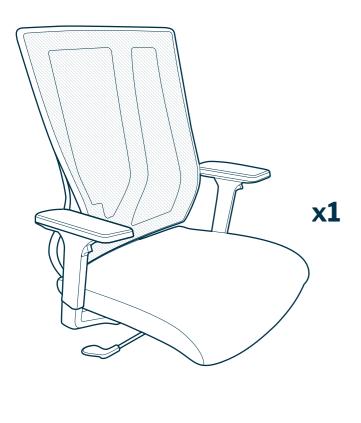

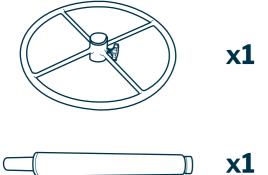

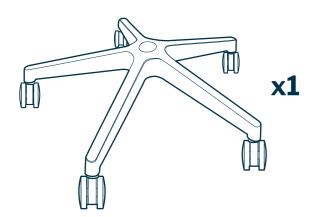




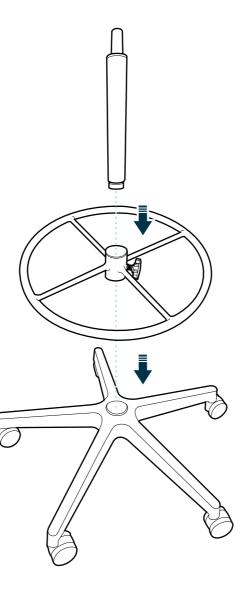

Remove chair, air piston, foot ring, and base from the packaging. With the large end down, insert the piston through the foot ring (holes facing down) and into the base. With the piston firmly in place, slide the foot ring to the desired position, and turn the attached knob to the right to secure in place.



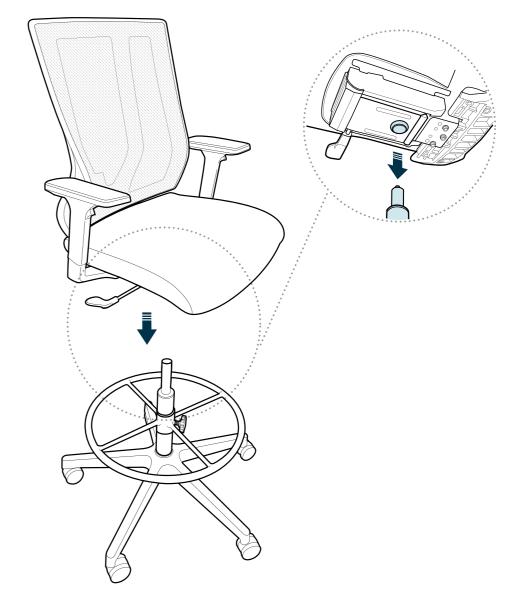


If the piston has a protective cap on the top, remove it before proceeding. Line up the hole underneath the seat with the top of the piston and base assembly. With another person's assistance, carefully lower the chair back onto the piston. Using even pressure, press down firmly on the seat cushion a few times to ensure the seat is fully engaged with the piston.

Once assembled, do not attempt to disassemble the chair, as doing so could damage the product.



## **Adjustment Settings**

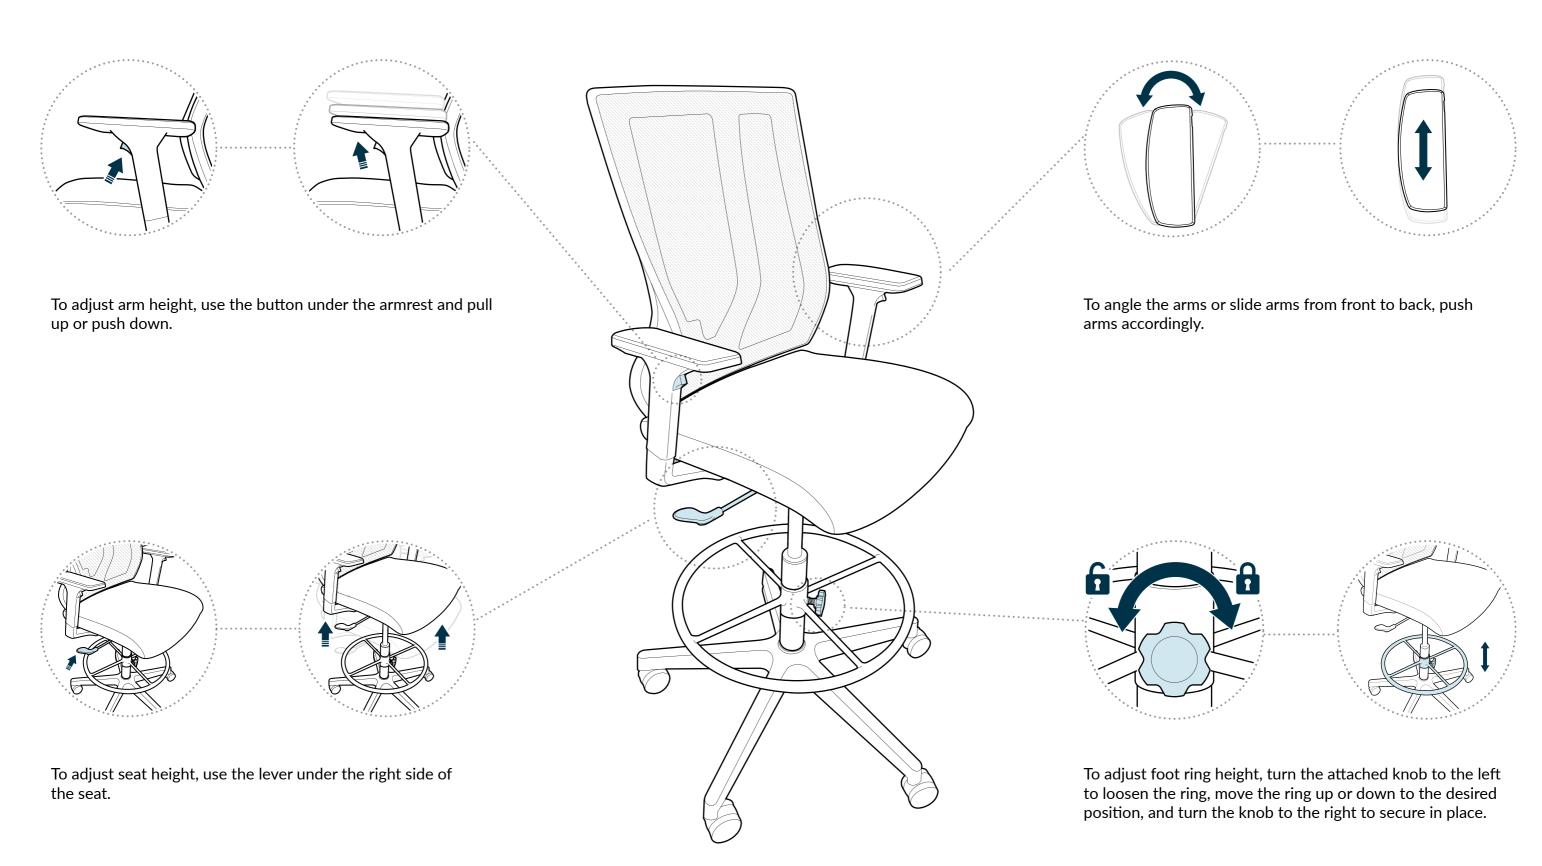

(800) 207-2587