


Align Office Chair

Two Person
Assembly


250 lbs
(113.4 kg)

vari®


COMPONENTS

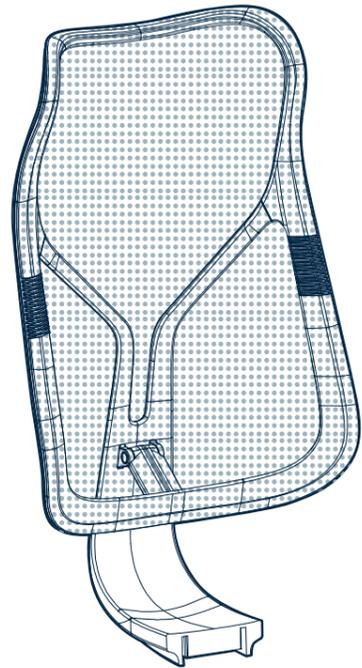


CHAIR BACK
x1

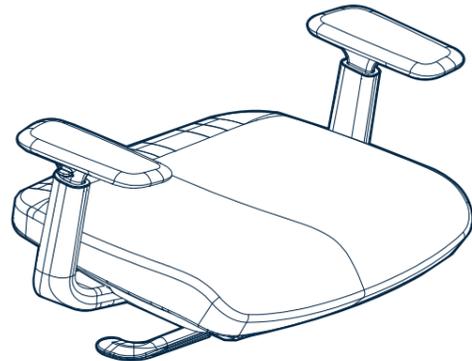

SEAT PAN
x1

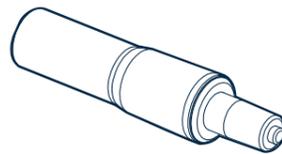


PISTON
x1

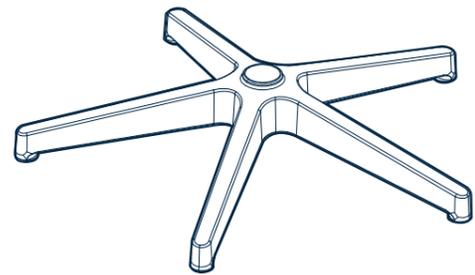

CHAIR BASE
x1



CASTERS
x5

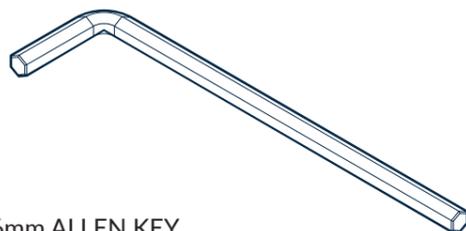


6mm ALLEN KEY
x1




M8 x 25MM SCREW SETS
x3

1

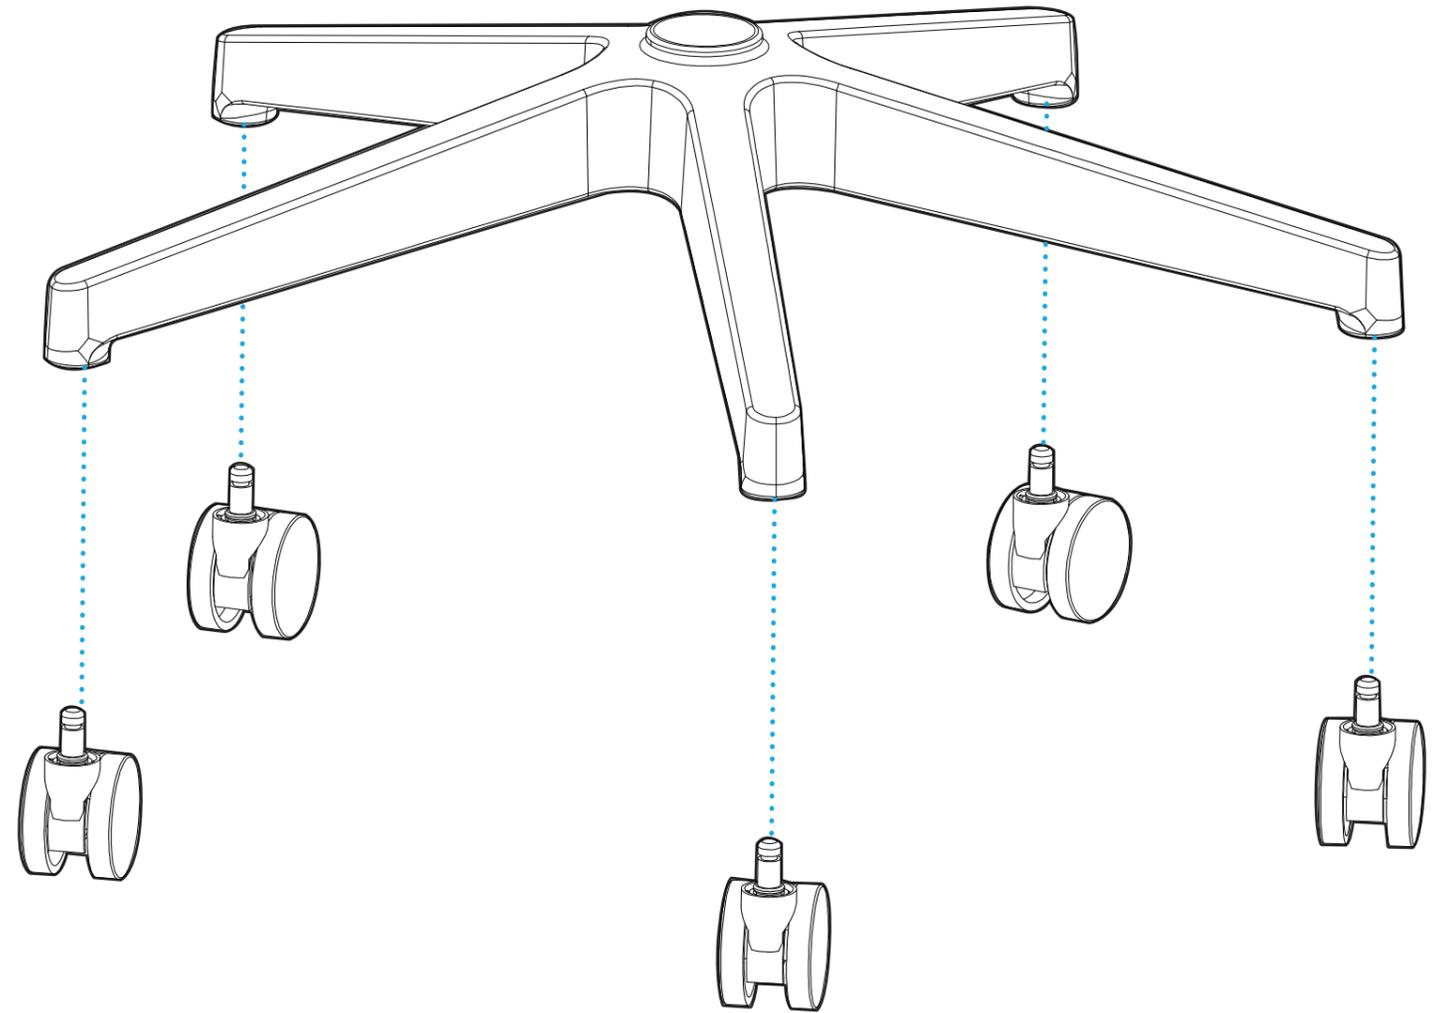


STEP 1

Insert the five **(5) CASTERS** into the **CHAIR BASE** until each caster snaps securely into place. Once all casters are attached, carefully turn the base upright.

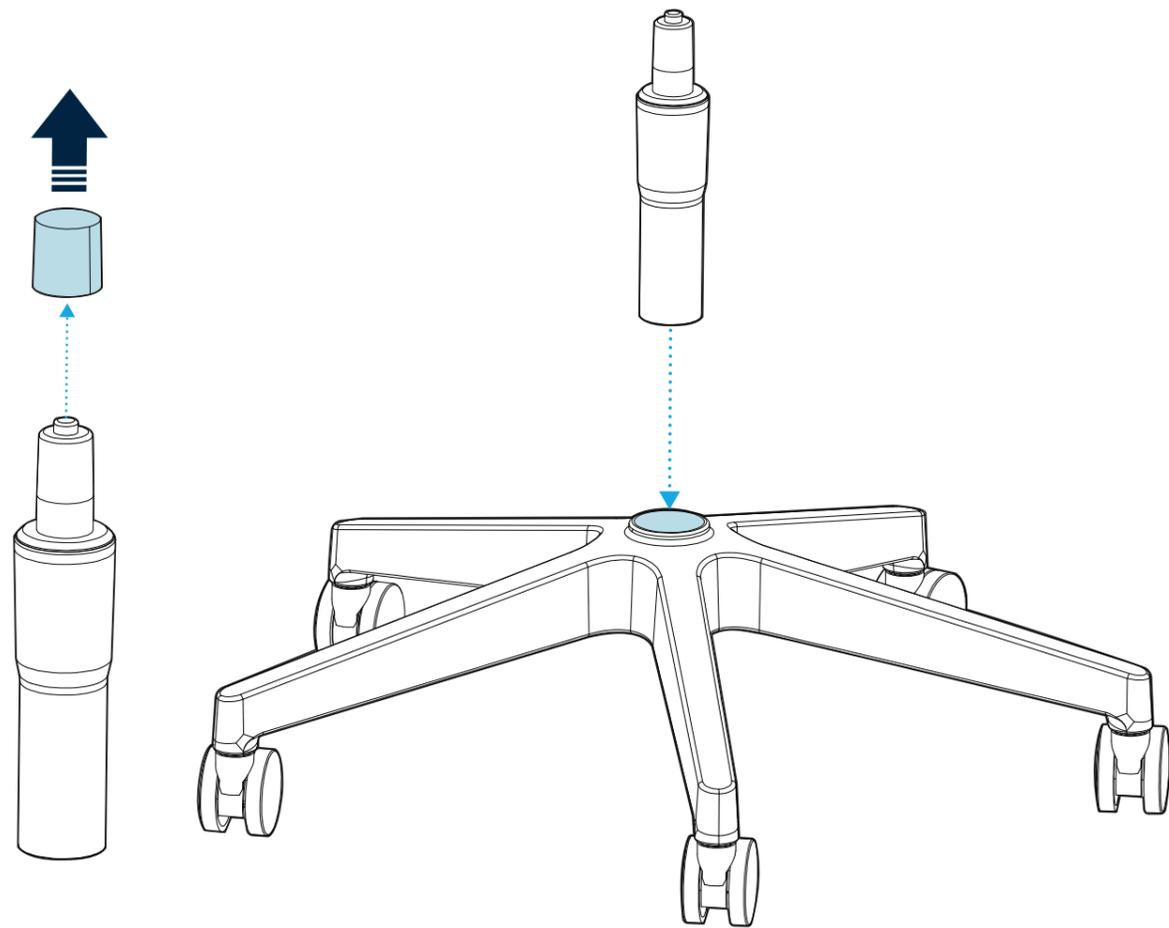2**STEP 2**

NOTE: Remove the **PROTECTIVE CAP** from the smaller end of the **PISTON**. This cap is not needed after assembly and may be discarded.

After removing the **CAP**, insert the larger end of the **PISTON** into the center opening of the **CHAIR BASE**. Press down firmly until it is securely seated.

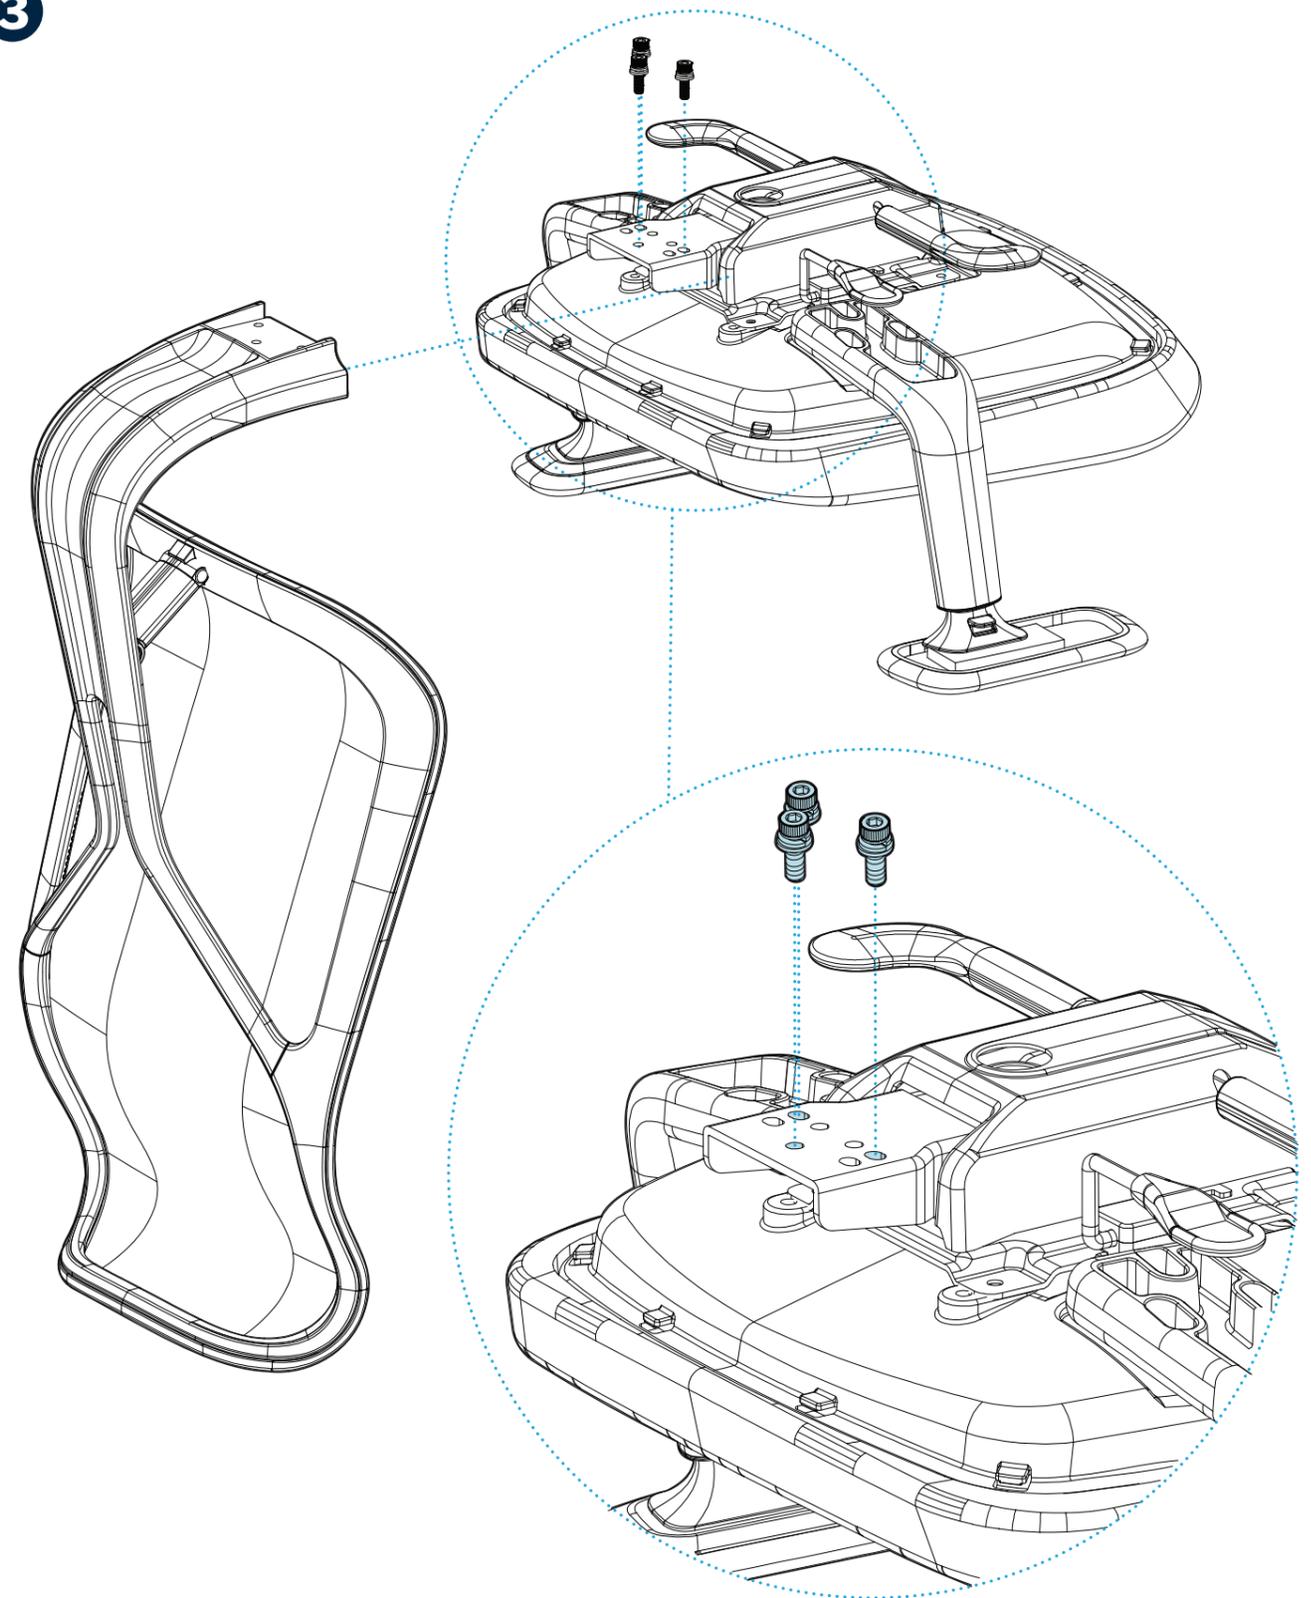
3**STEP 3**

Align the **CHAIR BACK** with the **SEAT PAN**.

Insert the three **(3) M8 x 25mm SCREWS** into the mounting holes as shown in the illustration.

Tighten the screws securely using the included **6mm ALLEN KEY**.

4


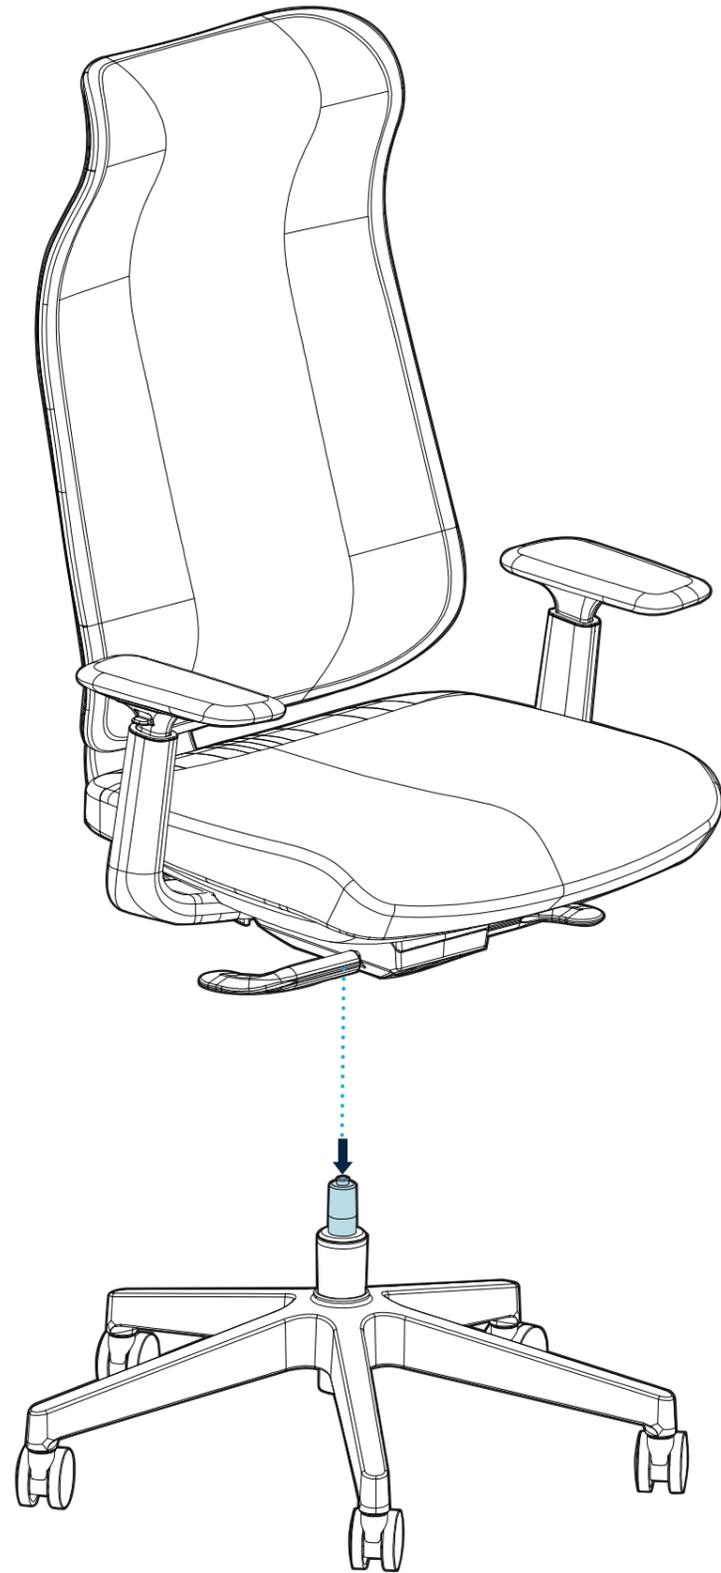


STEP 4

With assistance, carefully lower the assembled seat onto the **PISTON**. Press down firmly on the seat cushion several times to ensure it is fully secured.


CAUTION: Once assembled, do not attempt to disassemble the chair, as this may damage the product.

ADJUSTMENT OPTIONS

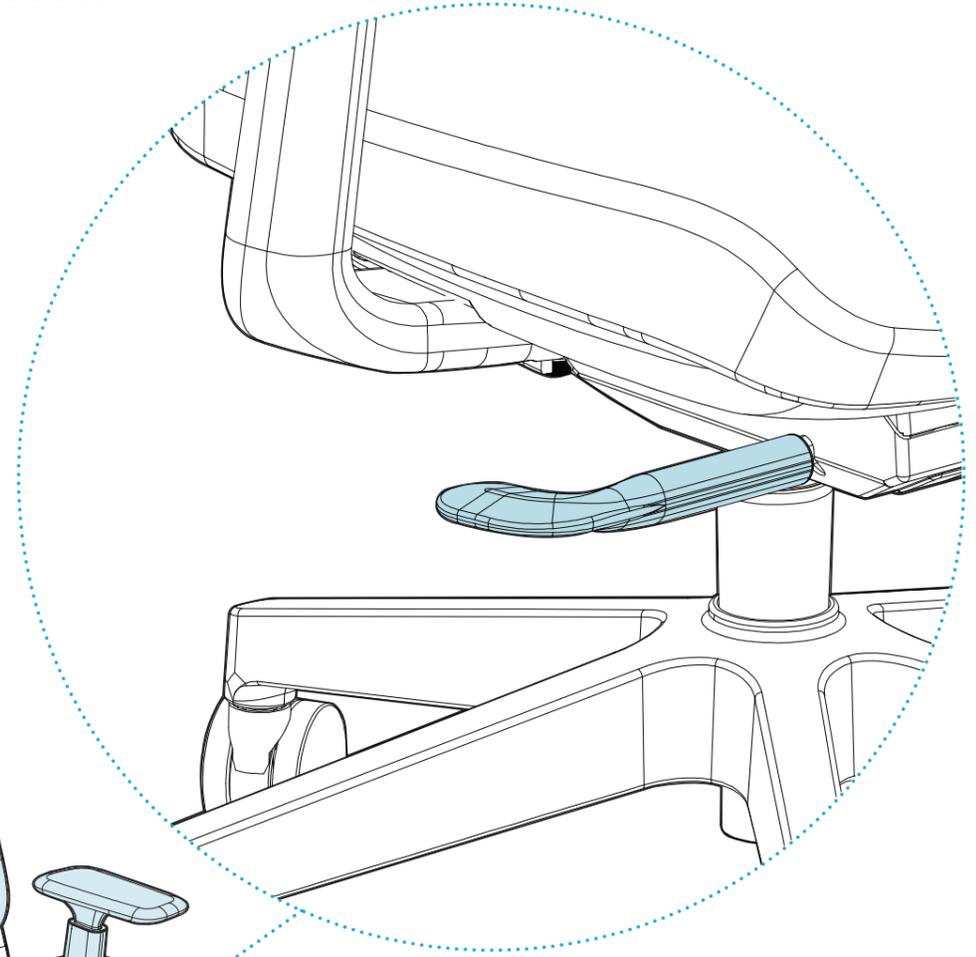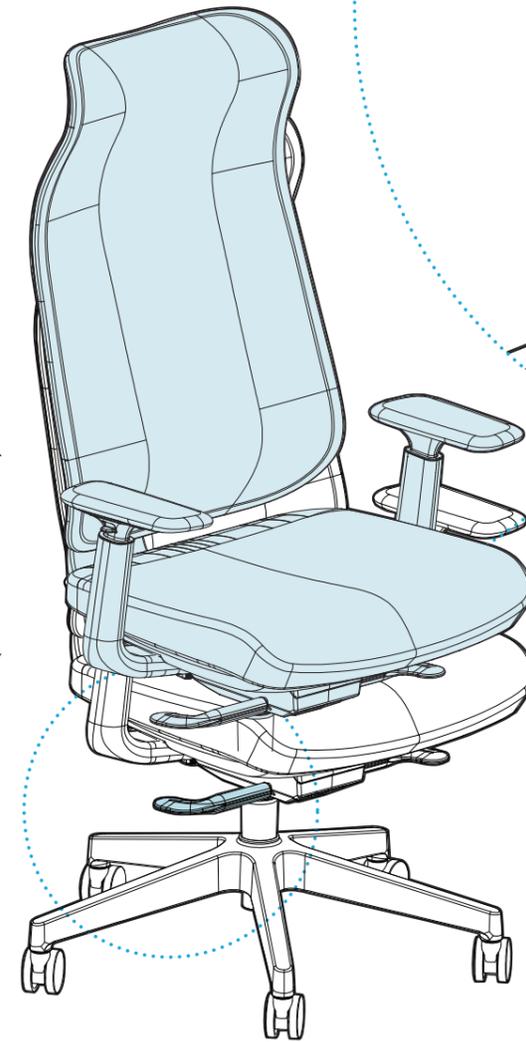

SEAT HEIGHT

To adjust the seat height, lift the lever located under the right side of the seat. Release the lever to lock the seat at the desired height.

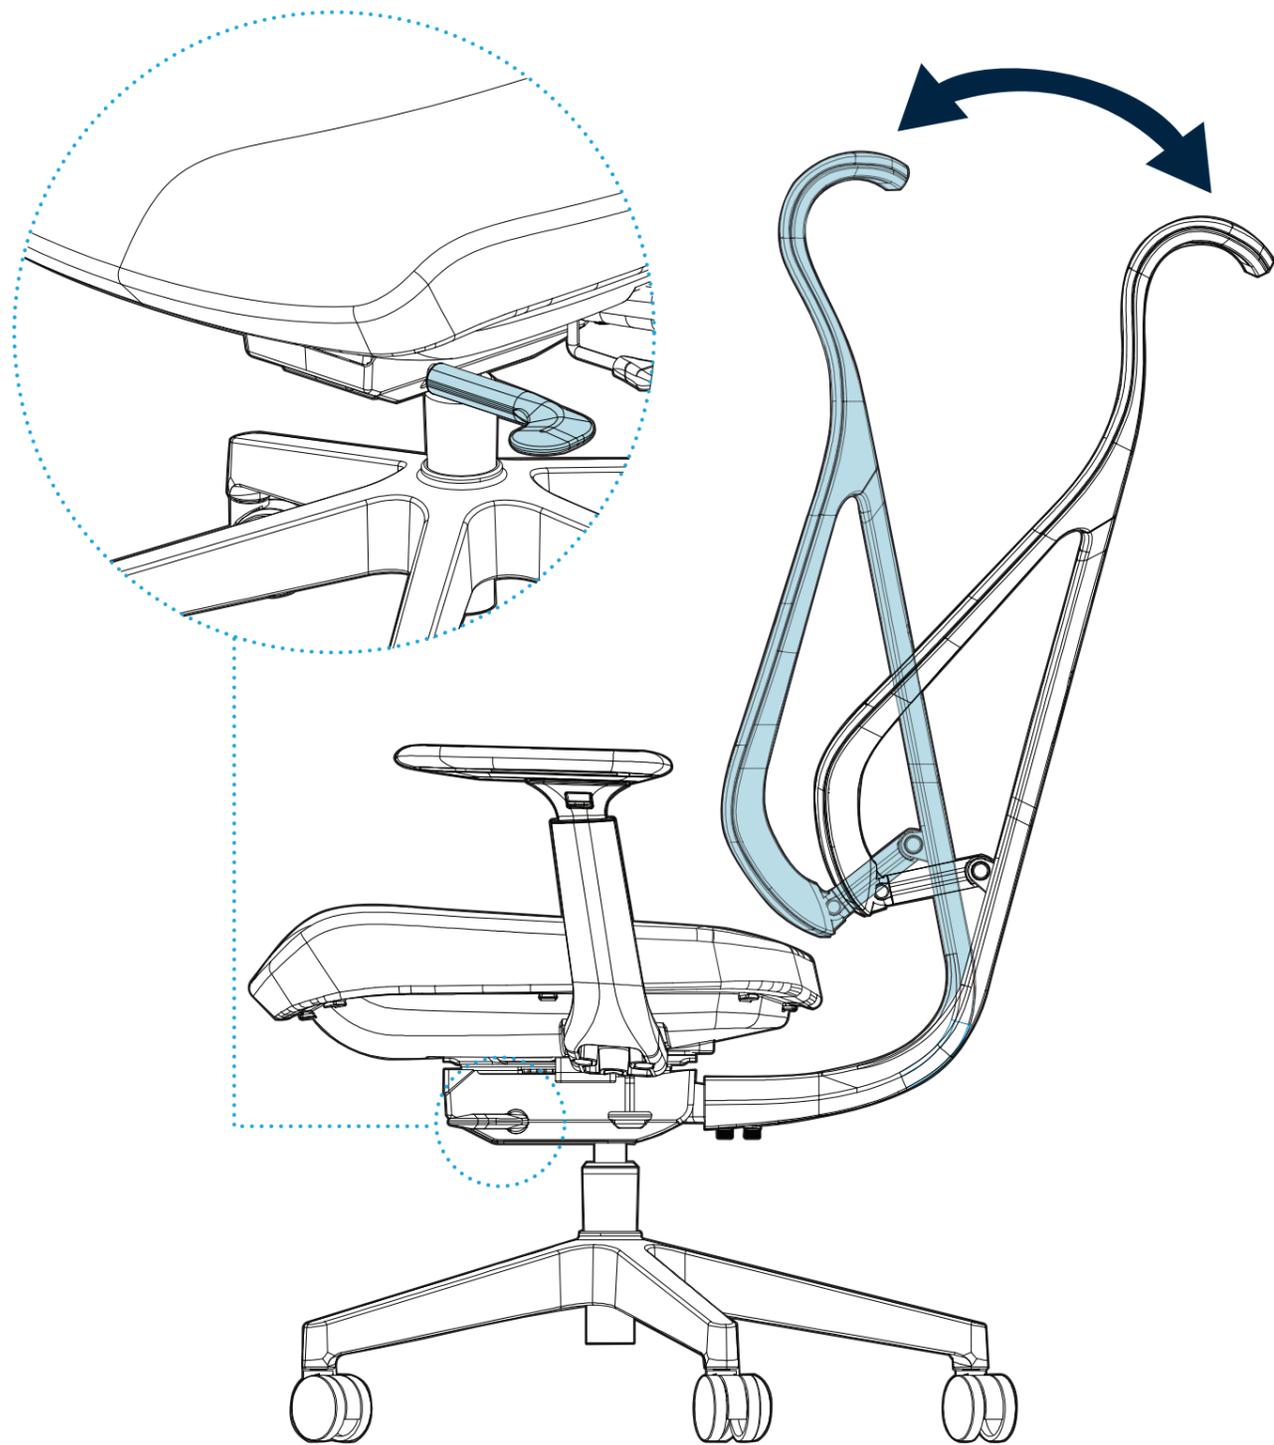


CHAIR BACK RECLINE LOCK

To recline, push the lever on the left side downward.

To lock the backrest in your desired position, recline to the preferred angle and pull the lever upward to lock.


To release the backrest lock, push the lever downward again.

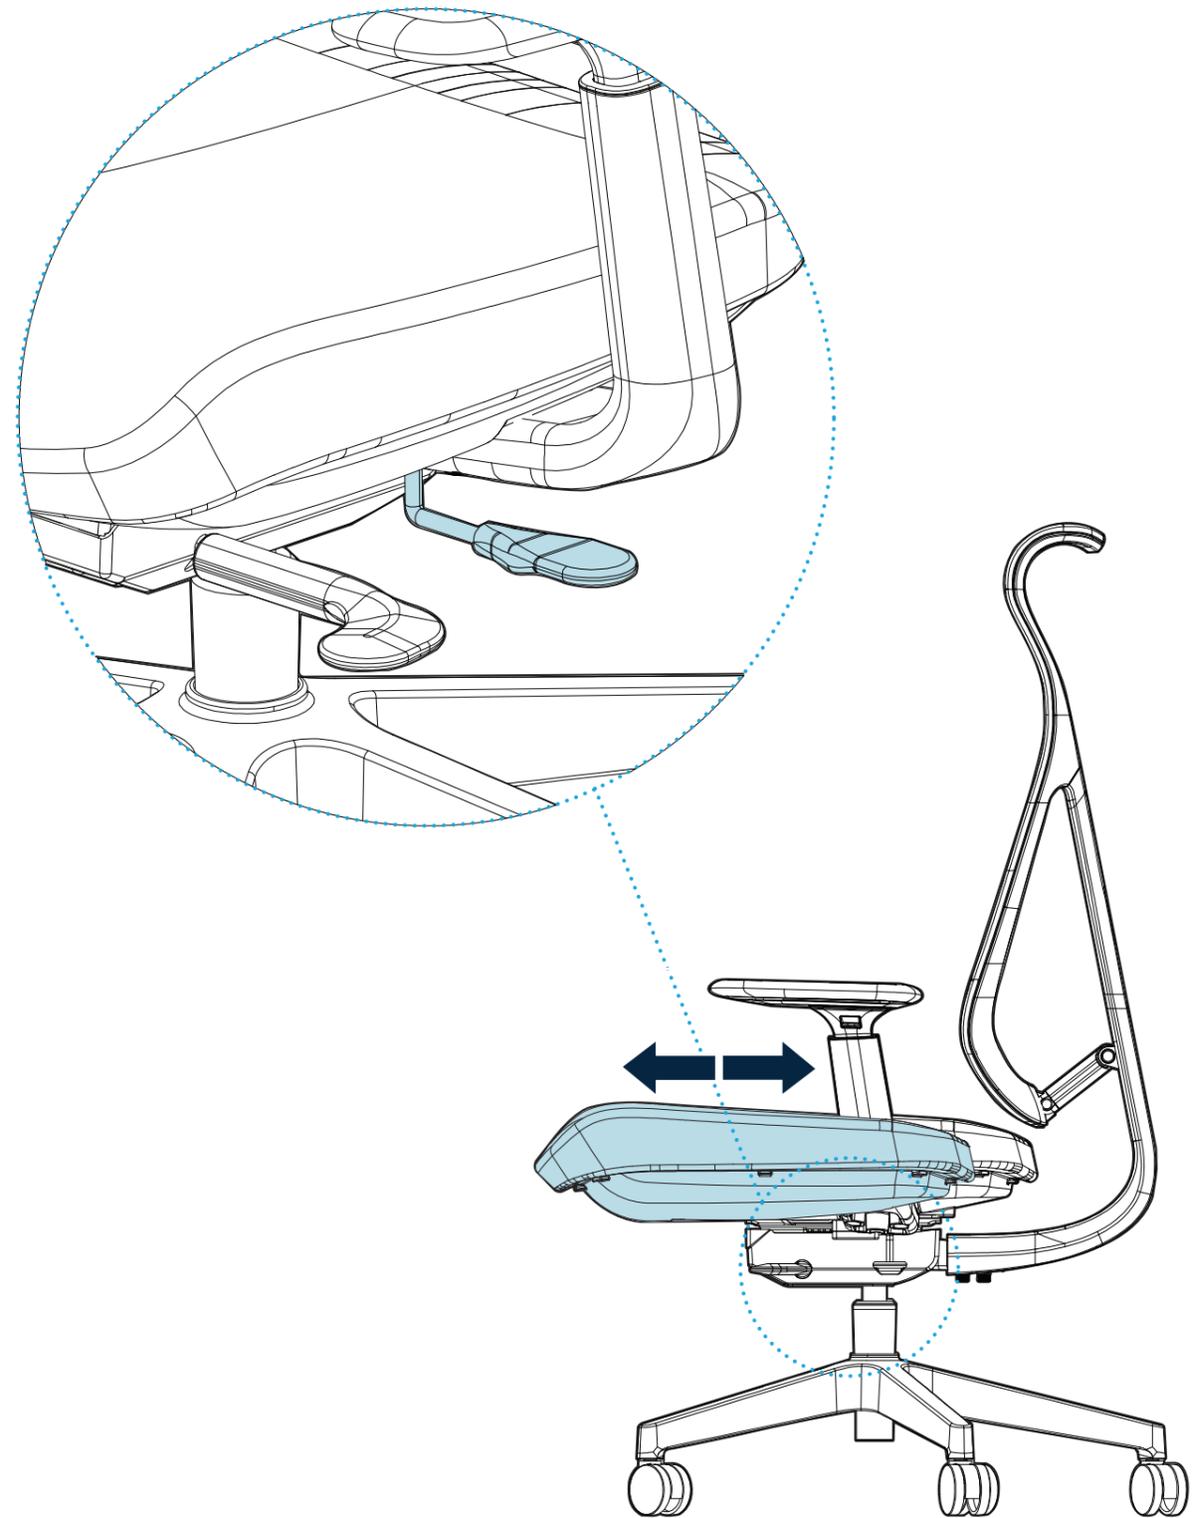

SEAT DEPTH

To adjust seat depth, lift the lever located at the back left side of the seat. Slide the seat forward or backward to the desired position, then release the lever to lock in place.

ADJUSTMENT OPTIONS

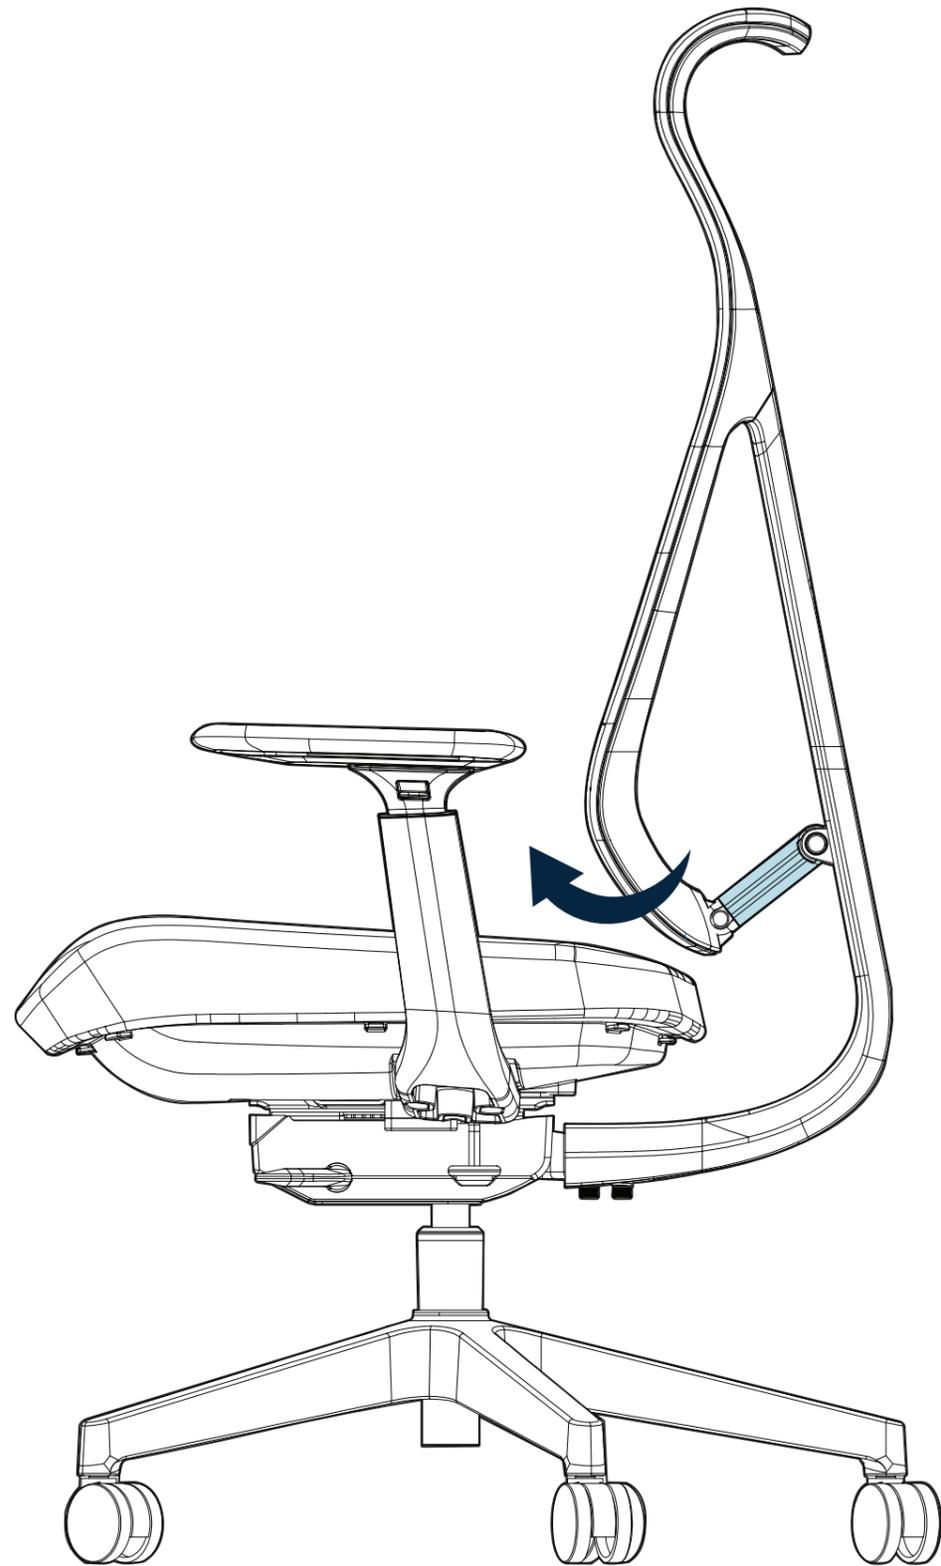

LUMBAR SUPPORT ADJUSTMENT


To adjust lumbar support, pull the lower portion of the backrest forward until you hear a “click.” There are five (5) adjustable positions.

To reset, pull the lower backrest fully forward, release, and gently push it back into its original position.




HEIGHT:

Press and hold the button on the outside of the armrest. Raise or lower the armrest to the desired height, then release the button to lock in place.

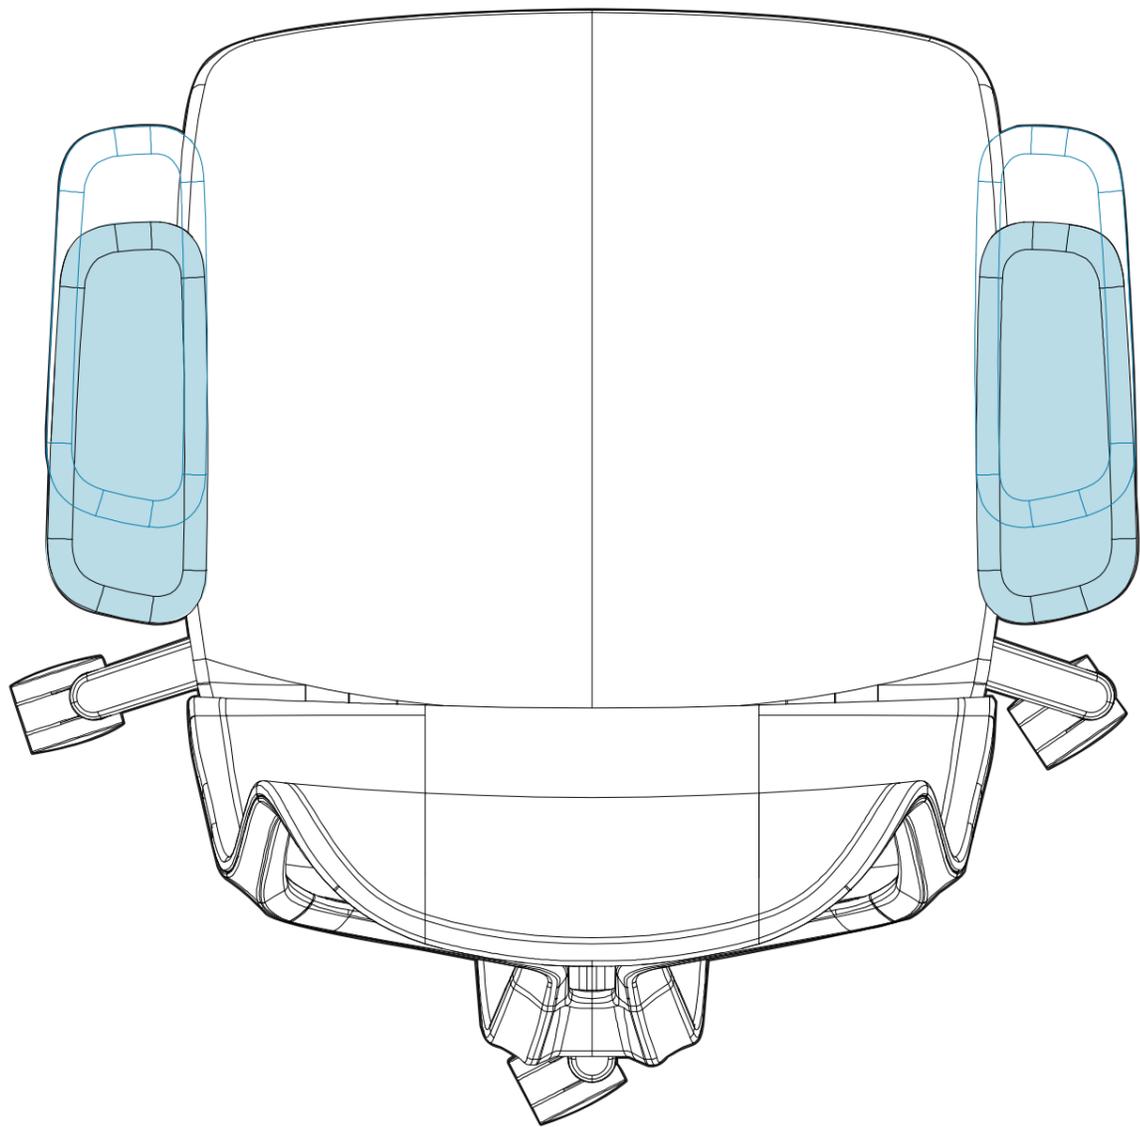


FORWARD / BACKWARD POSITION:

Hold the center of the armrest and slide it forward or backward to the desired position.

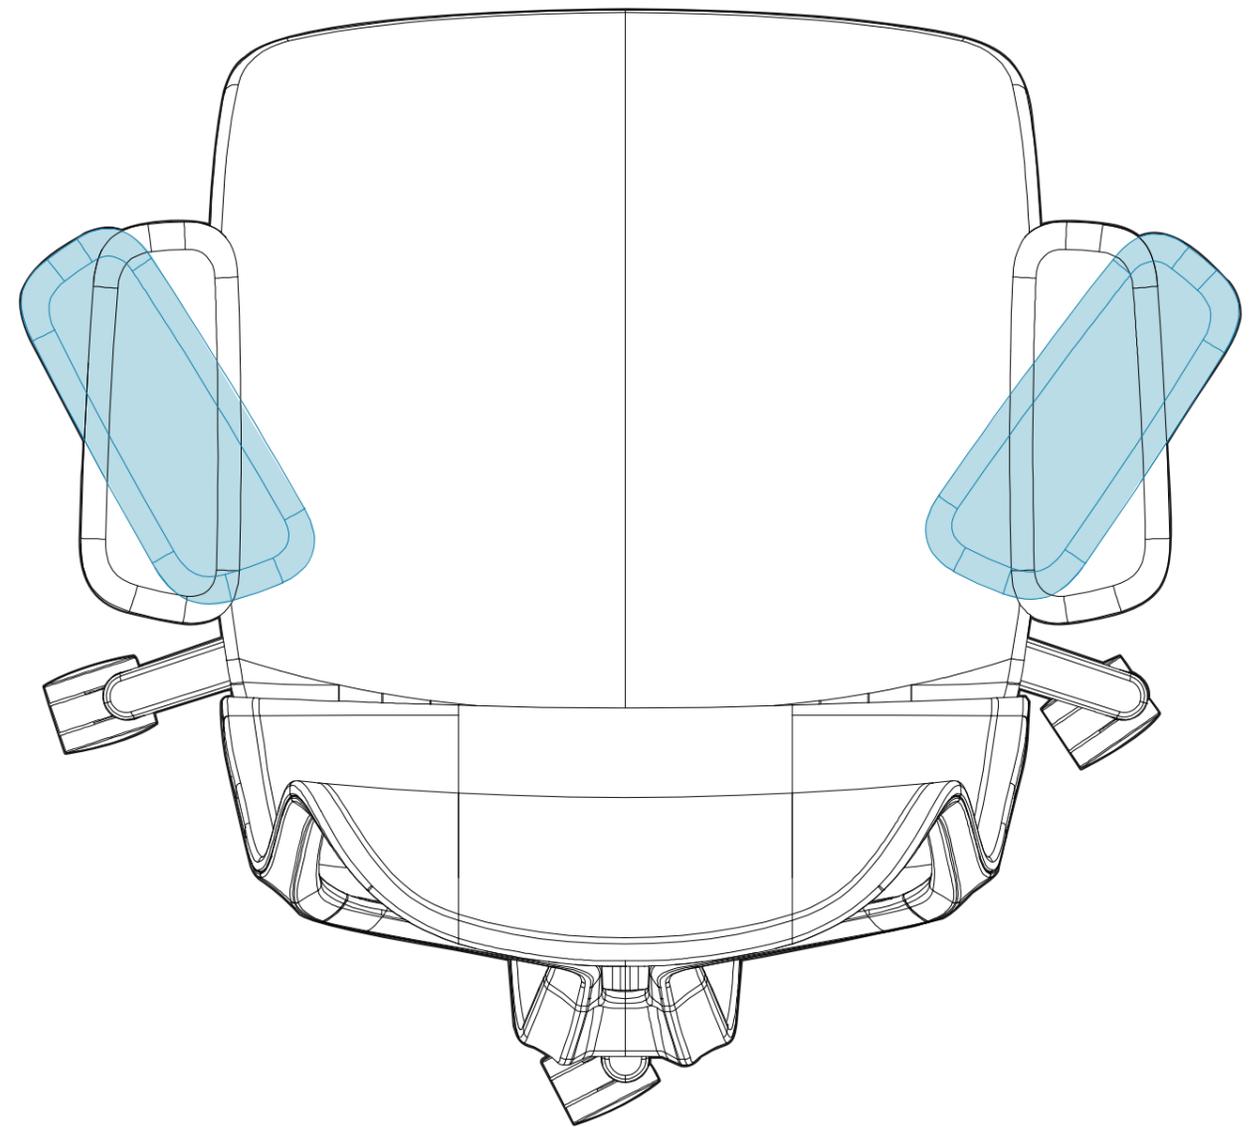

ANGLE (PIVOT):

Hold the front or back of the armrest and rotate it inward or outward to the desired angle.

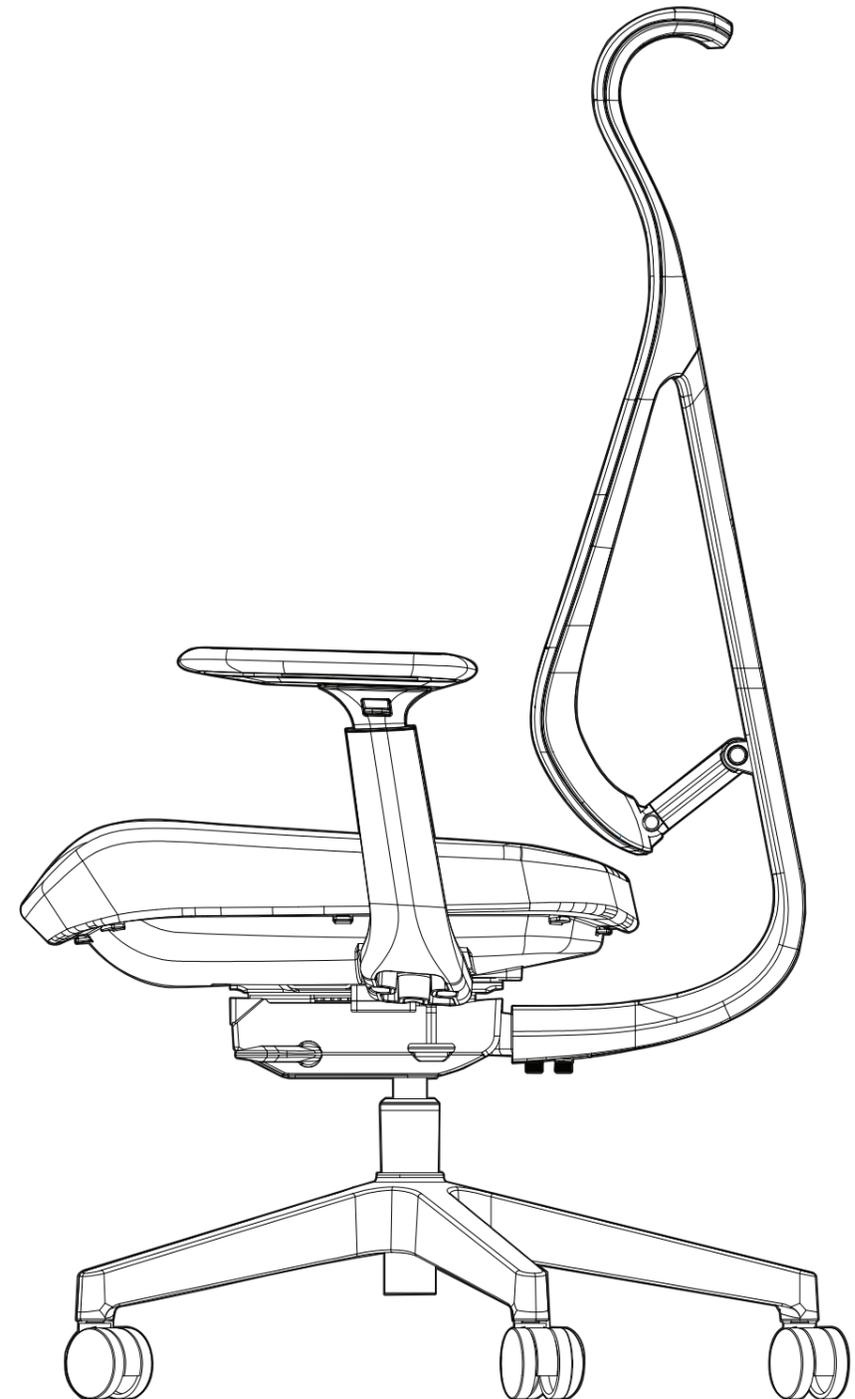

WARNING: To prevent injuries and product failure, do not use this chair for standing, climbing, or leaning.

Do not use if the chair is damaged or incorrectly assembled.



(800) 207-2587