


Acrylic Privacy Panel




vari®

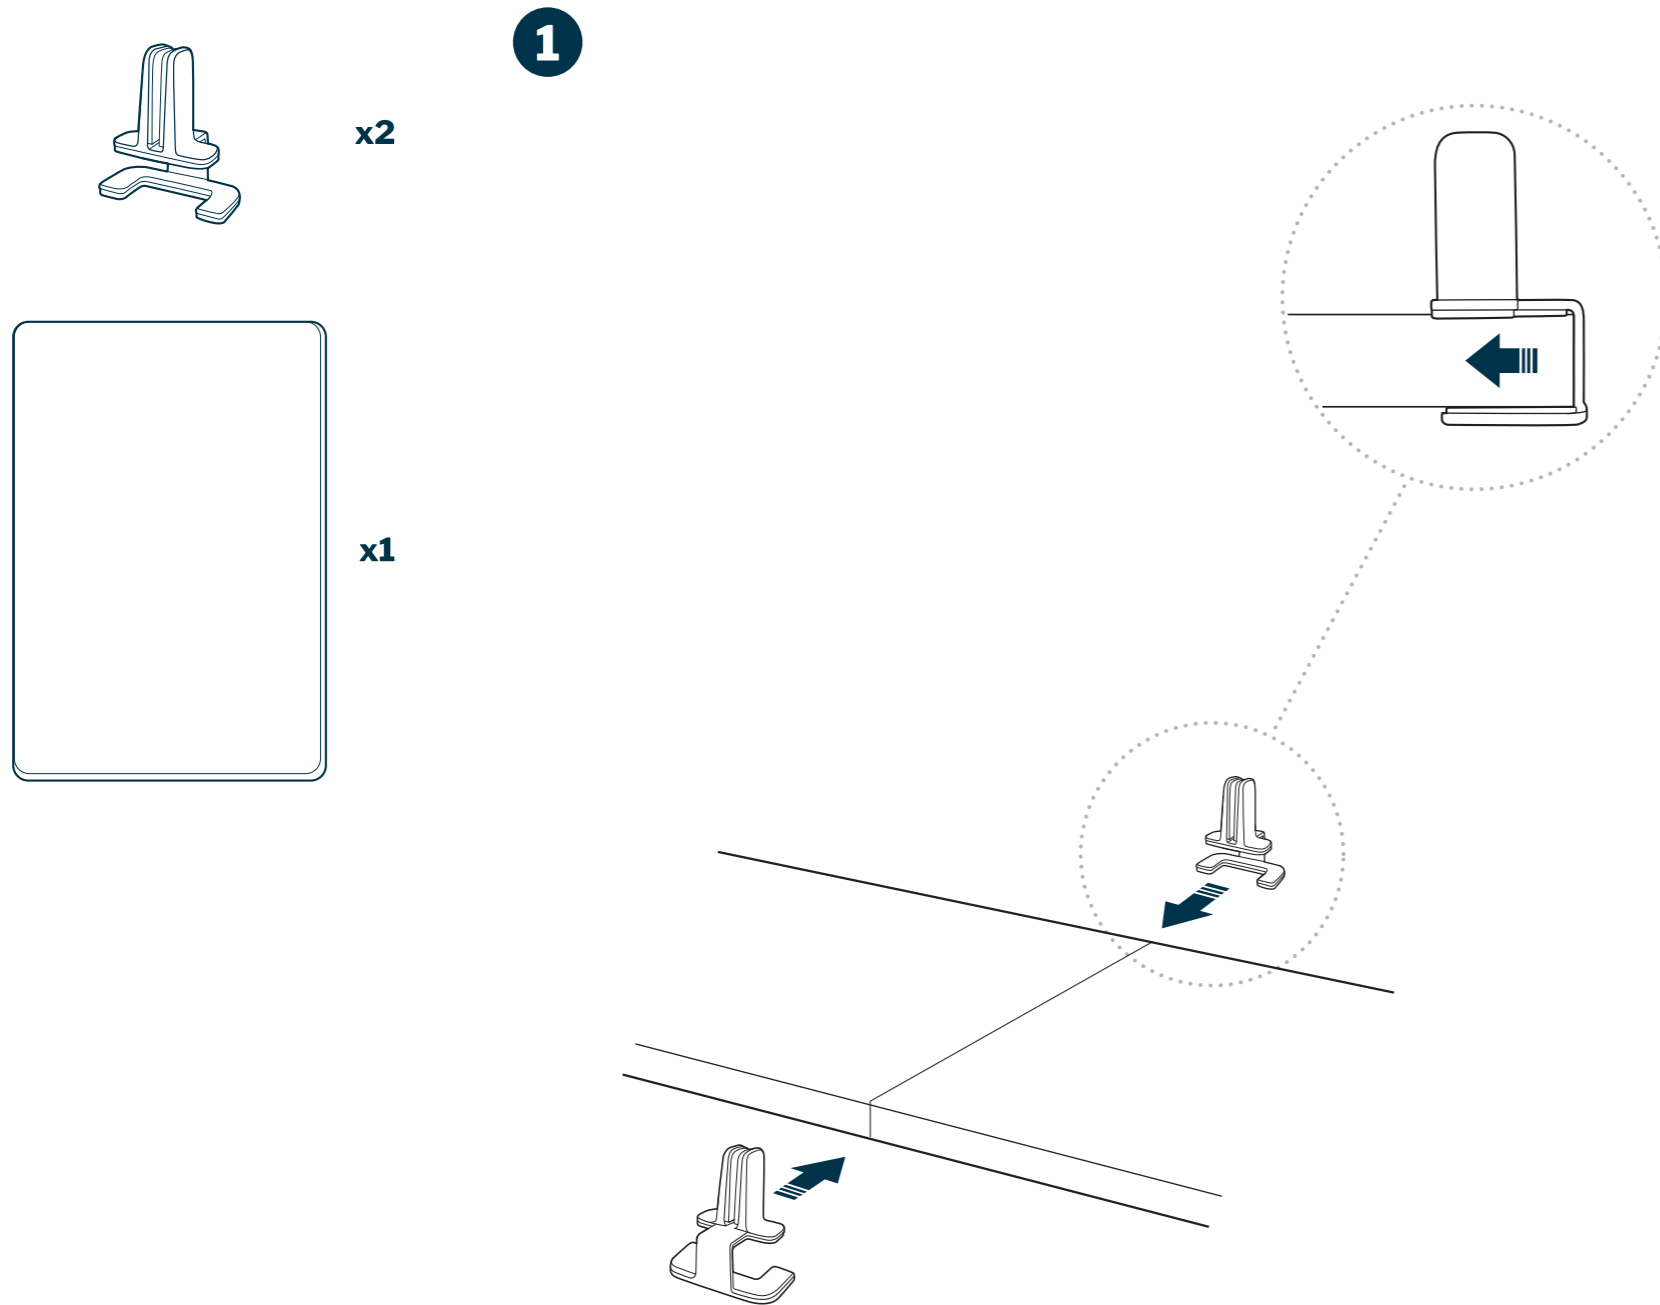

1

2

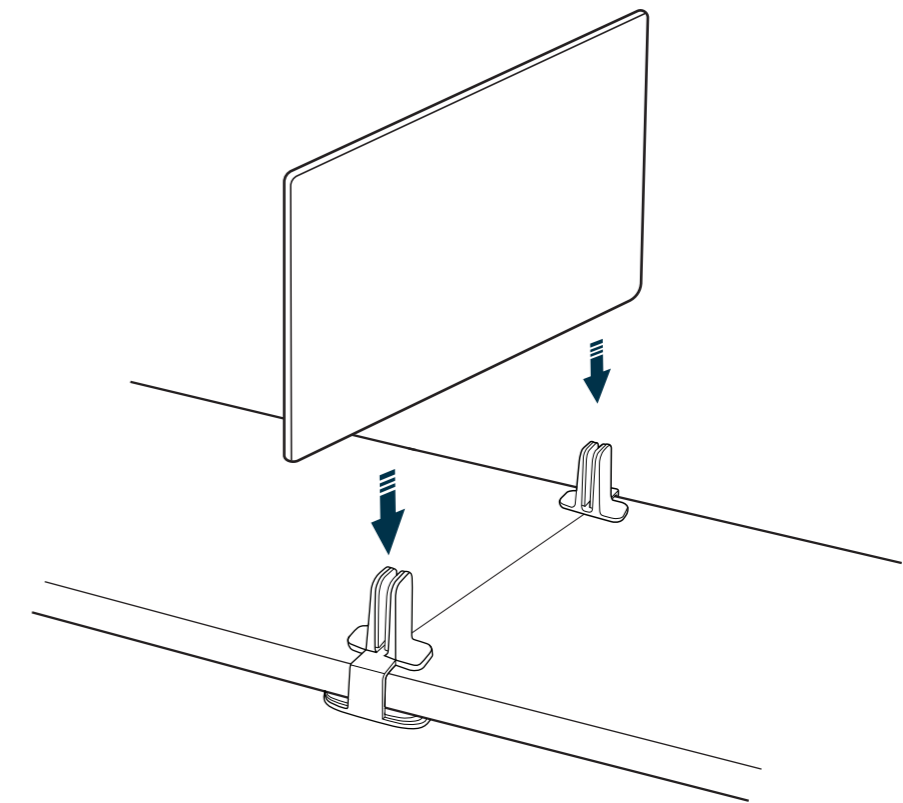

Slide the clamps onto the edge of the desk directly across from each other. Please note that the clamps are designed to fit around the desk legs if necessary.

Carefully slide the acrylic panel all the way down into the brackets.

 (800) 207-2587