


Arm Chair




Holds up to 300 lbs
(136.08 kg)

vari®


SEAT
x1

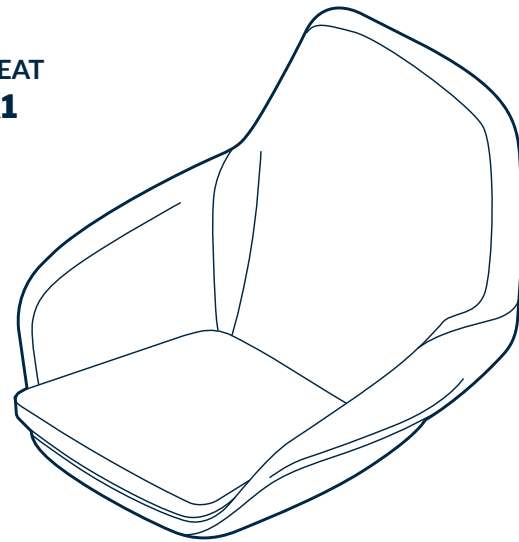


REAR BASE
x1

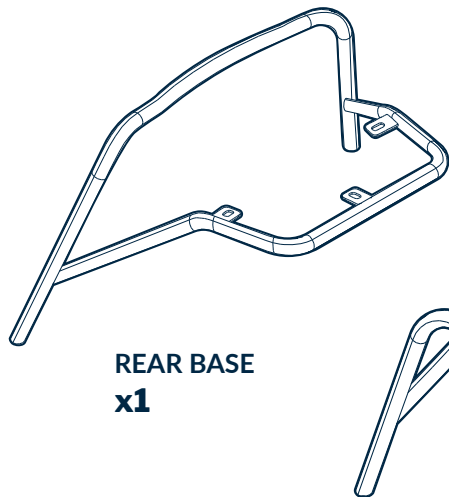


FRONT BASE
x1

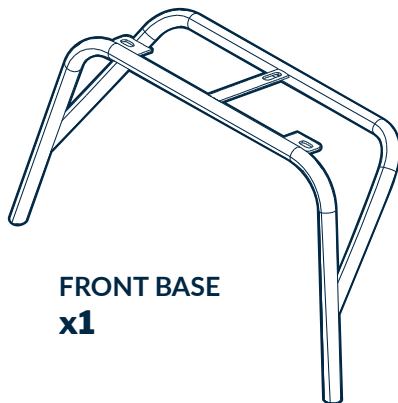


M8 X 25MM SCREW
x6



5MM ALLEN KEY
x1

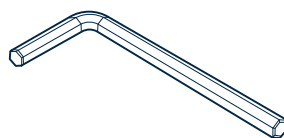


1

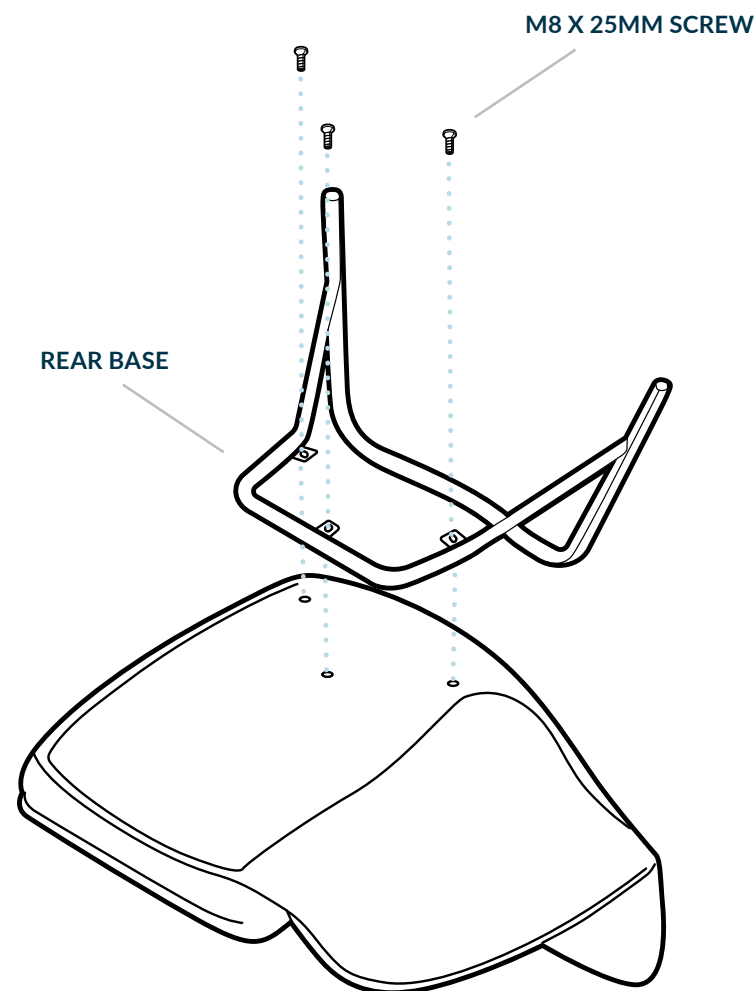

Place the Arm Chair on a clean surface with the bottom of the seat facing up. Place the **REAR BASE** onto the **SEAT**, aligning the screw holes with the insert nuts in the **SEAT**.

Insert **(3) M8 X 25MM SCREWS** into the **REAR BASE** and secure it to the **SEAT** using the included **5MM ALLEN KEY**.

2

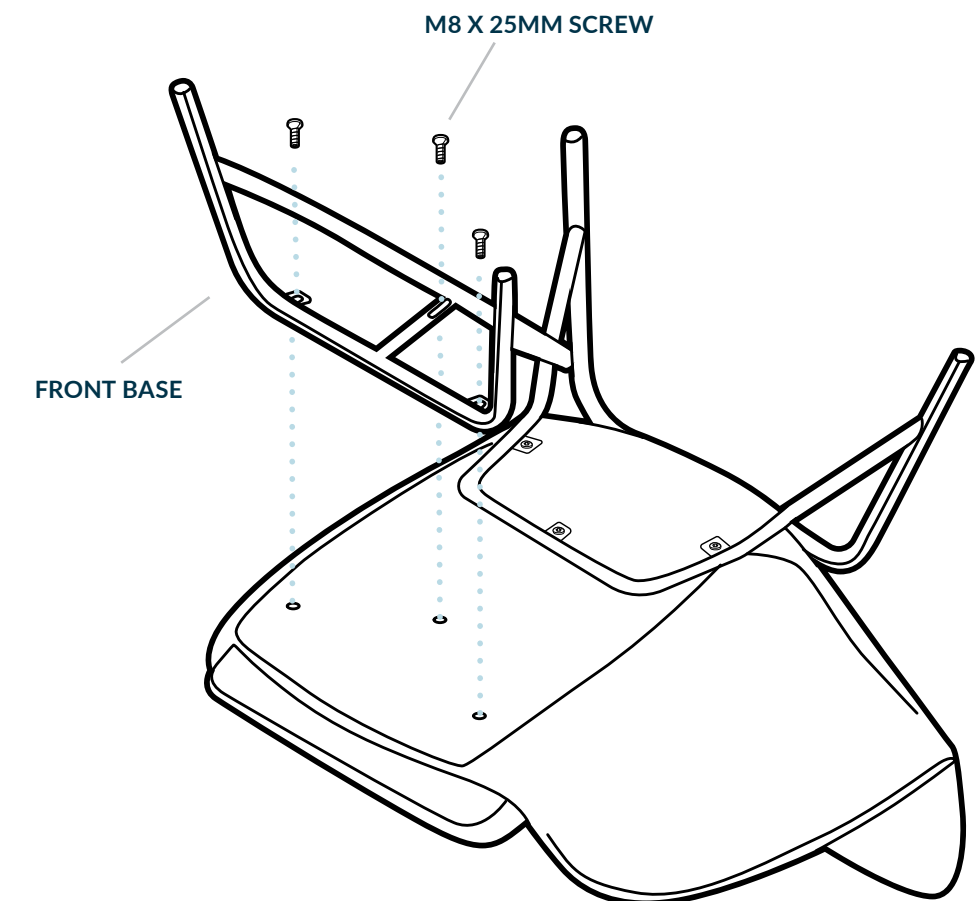

Place the **FRONT BASE** onto the **SEAT**, aligning the screw holes with the insert nuts in the **SEAT**.

Insert **(3) M8 X 25MM SCREWS** into the **FRONT BASE** and secure it to the **SEAT** using the included **5MM ALLEN KEY**.



(800) 207-2587