


Privacy Desk Surrounds

Privacy Desk Surround 60
Tall Privacy Desk Surround 60
Privacy Desk Surround 72




2 People Required
for Assembly

vari.®

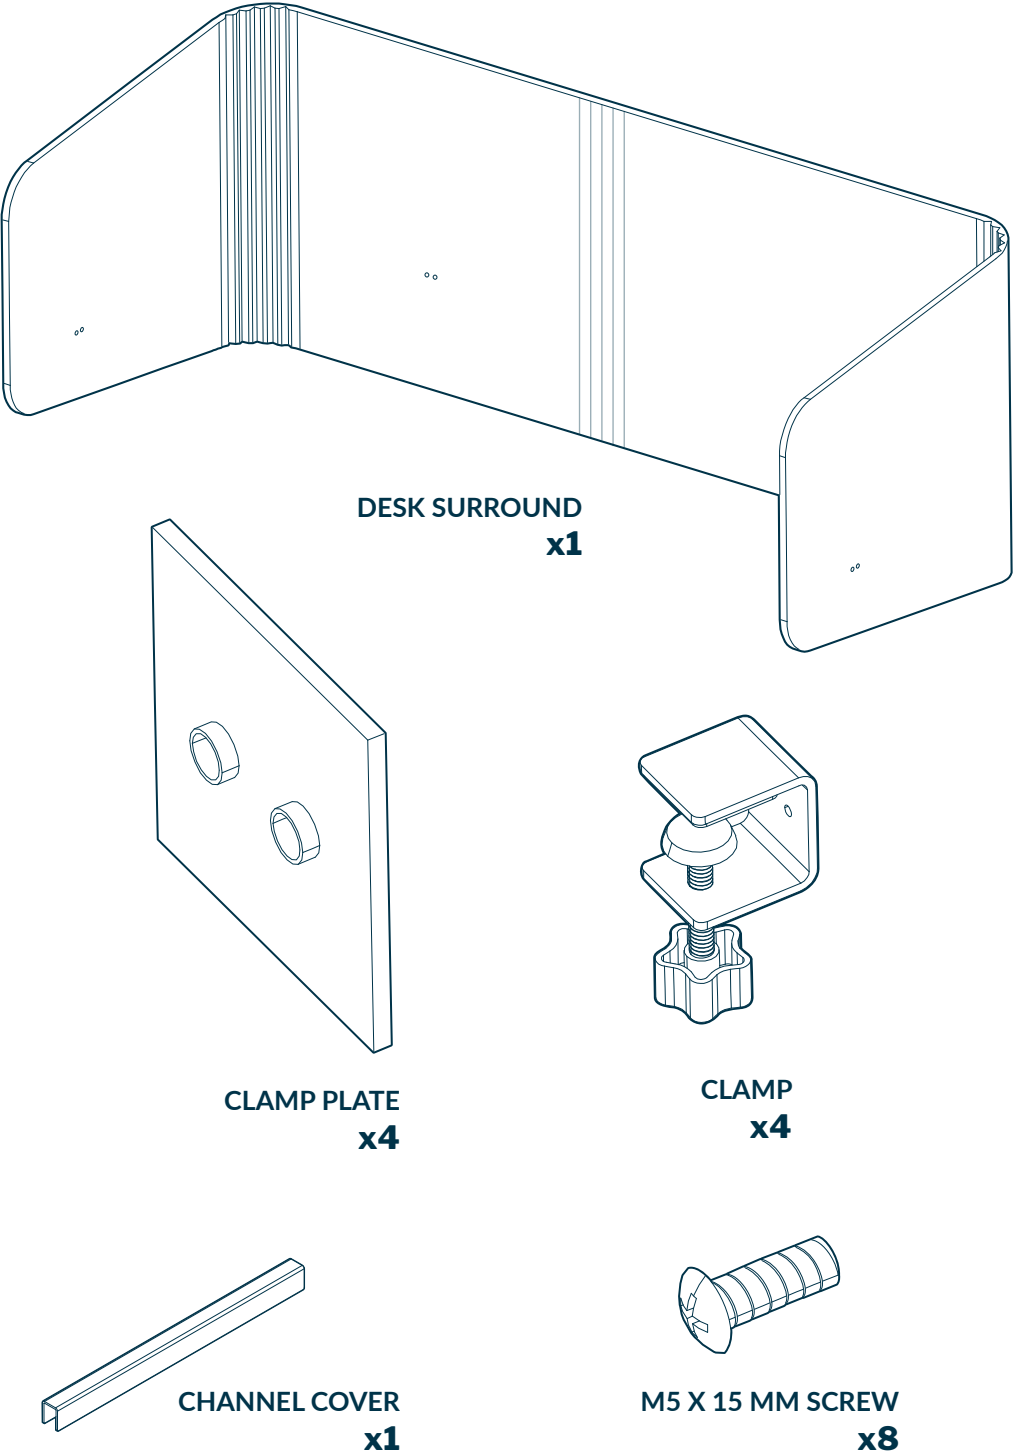

1

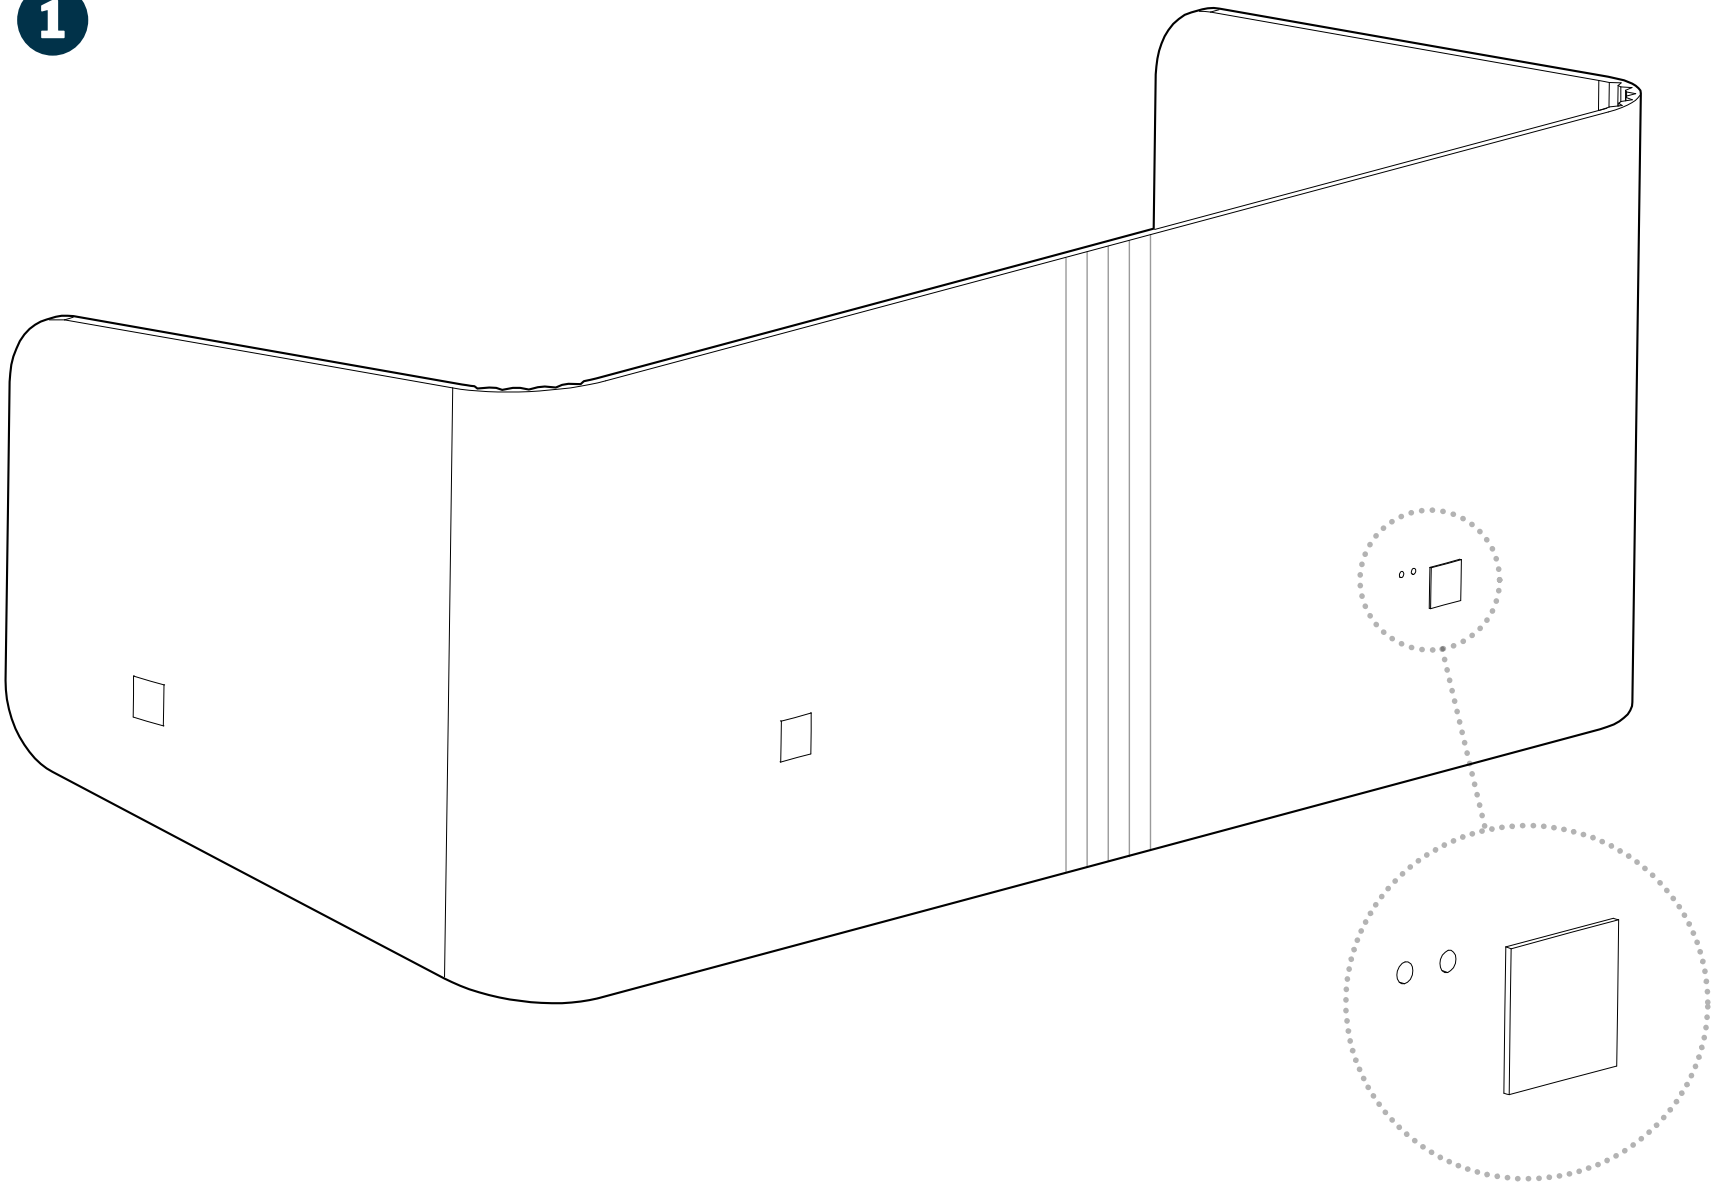


Remove the surround from the box and unfold it. Push the protruding edges of the **CLAMP PLATE** into the holes in the desk surround. Use two **CLAMP PLATES** on the back and one on each side.

Note: The Privacy Desk Surround 60 and Tall Privacy Desk Surround are only compatible with Vari Electric Standing Desks 60" x 30" and 60" x 24". The Privacy Desk Surround 72 is only compatible with Vari Electric Standing Desk 72" x 30".

Tools Needed (Not Included)


- PHILLIPS SCREWDRIVER

2

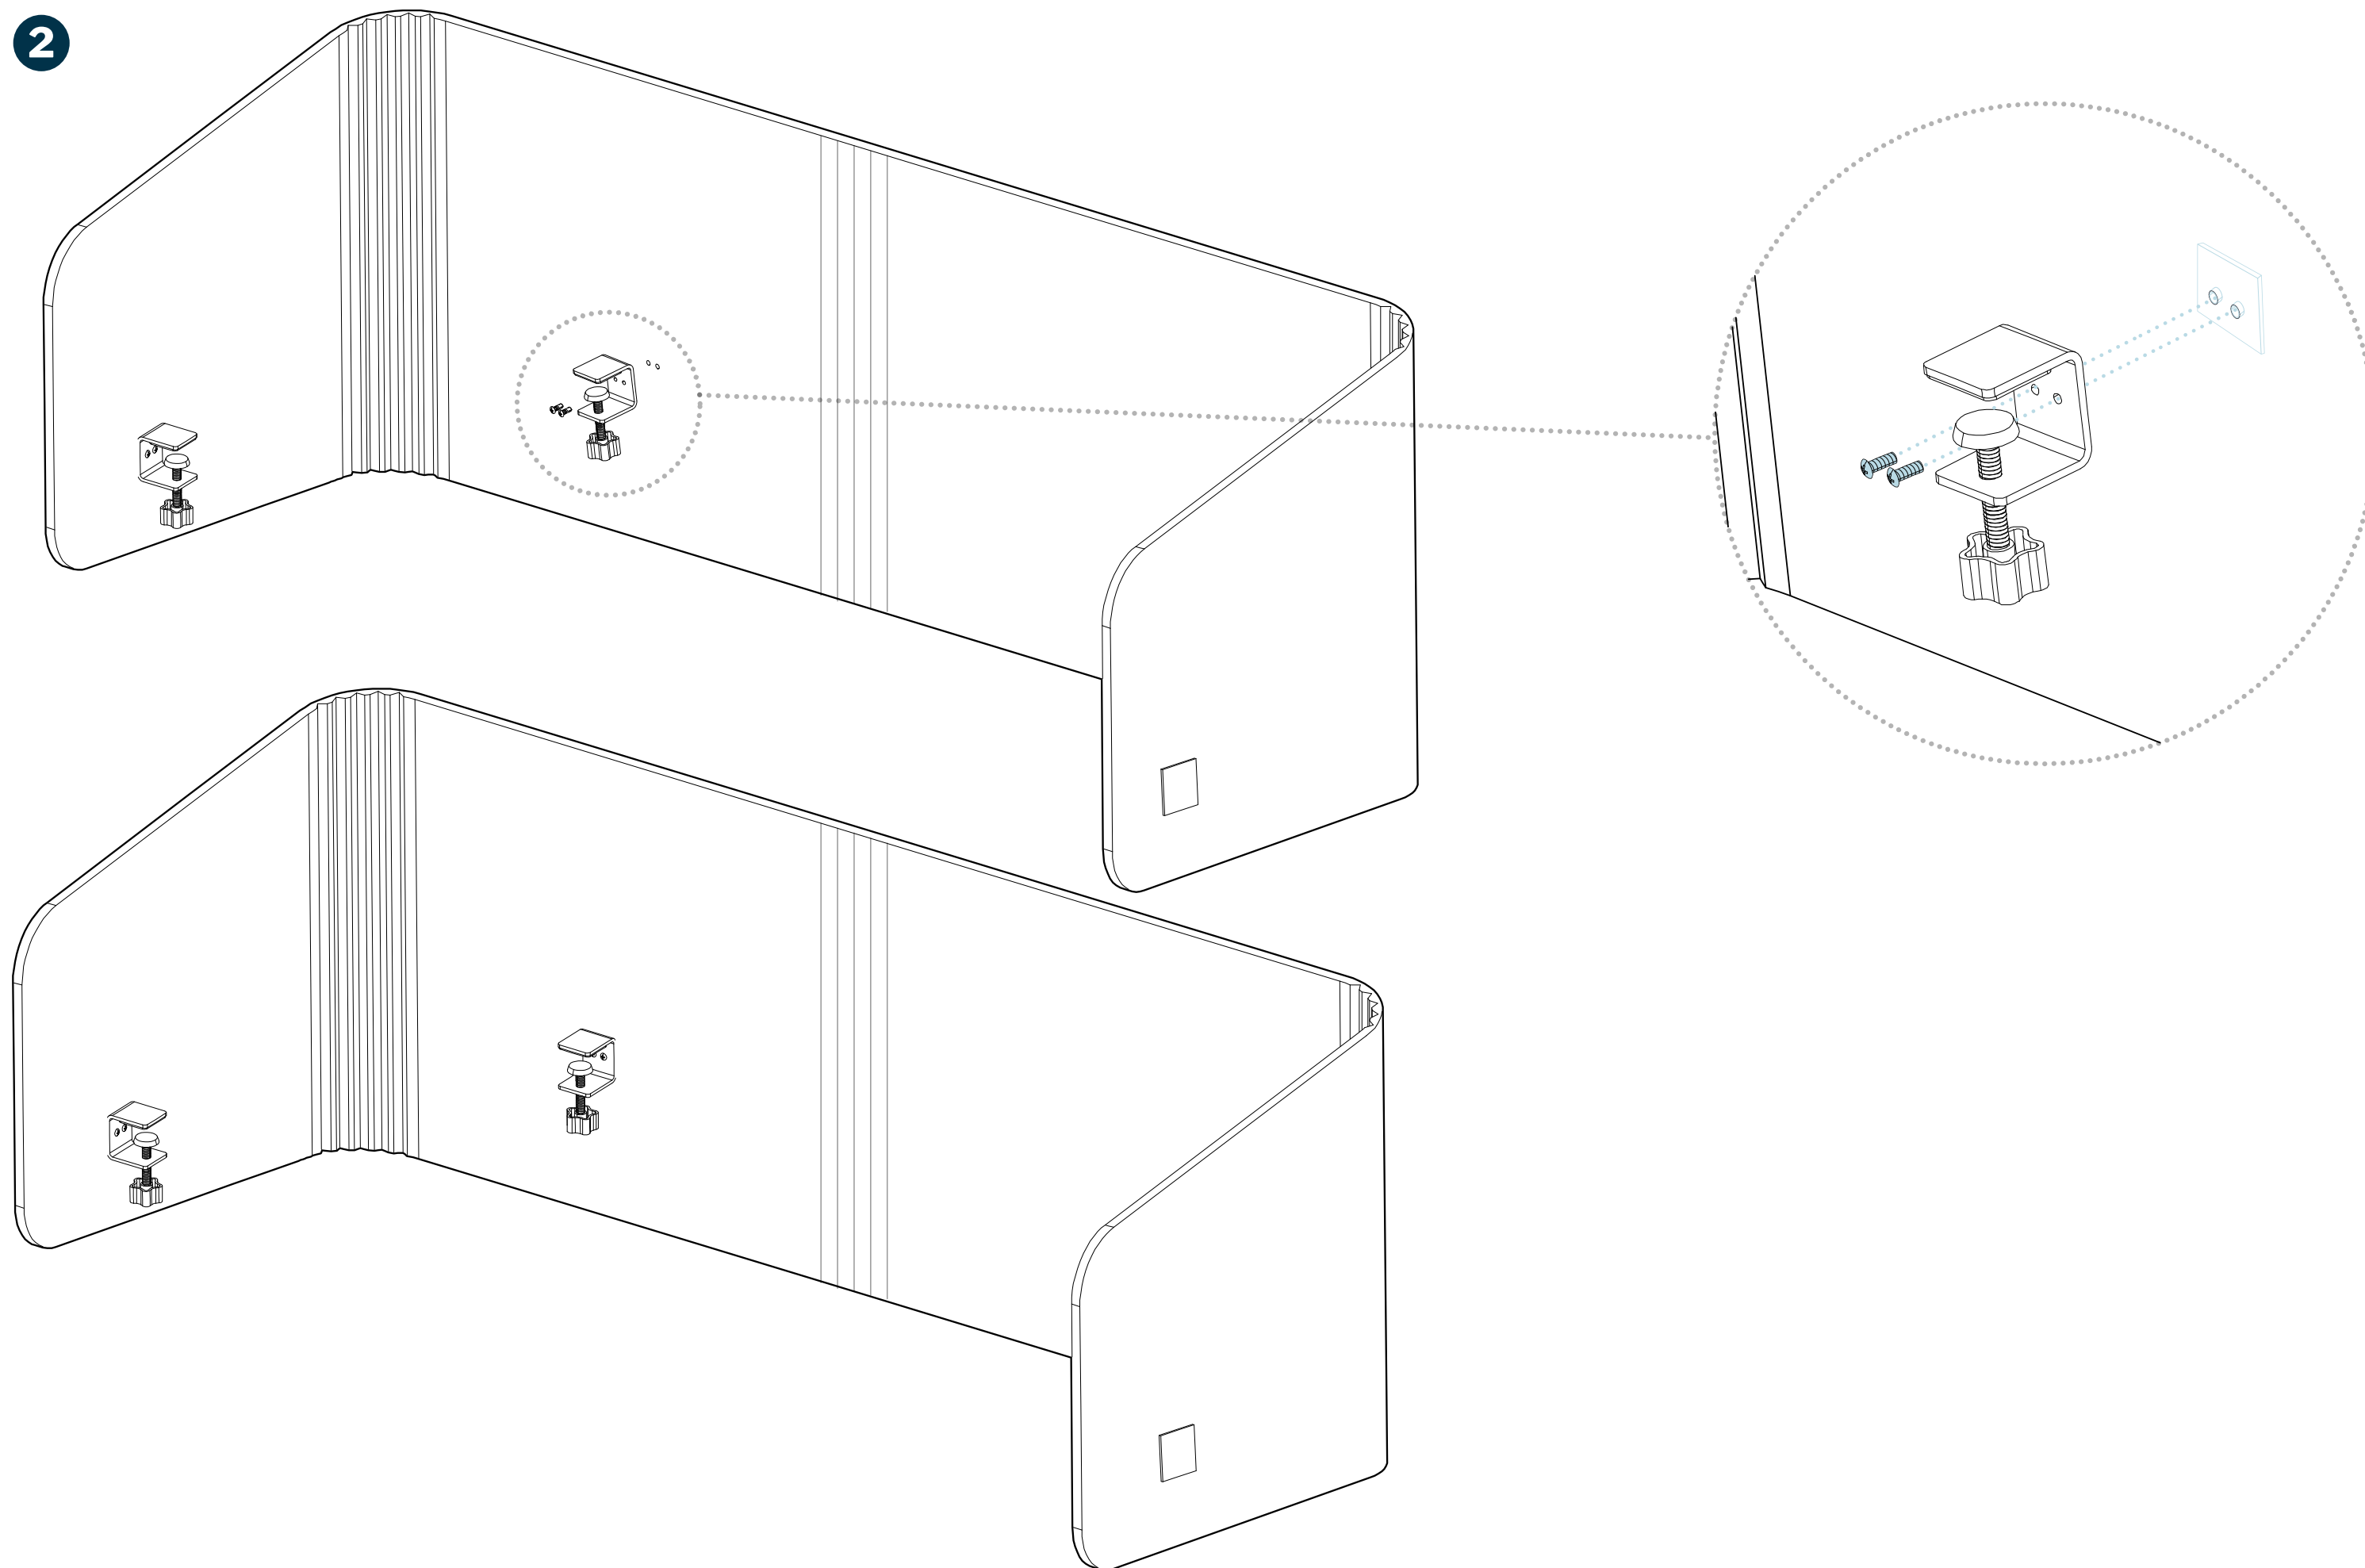


On the inside, align the two holes in the **CLAMP** and insert the **SCREWS**. Use a Phillips head screwdriver to tighten. Repeat this step for the remaining Clamps.

3

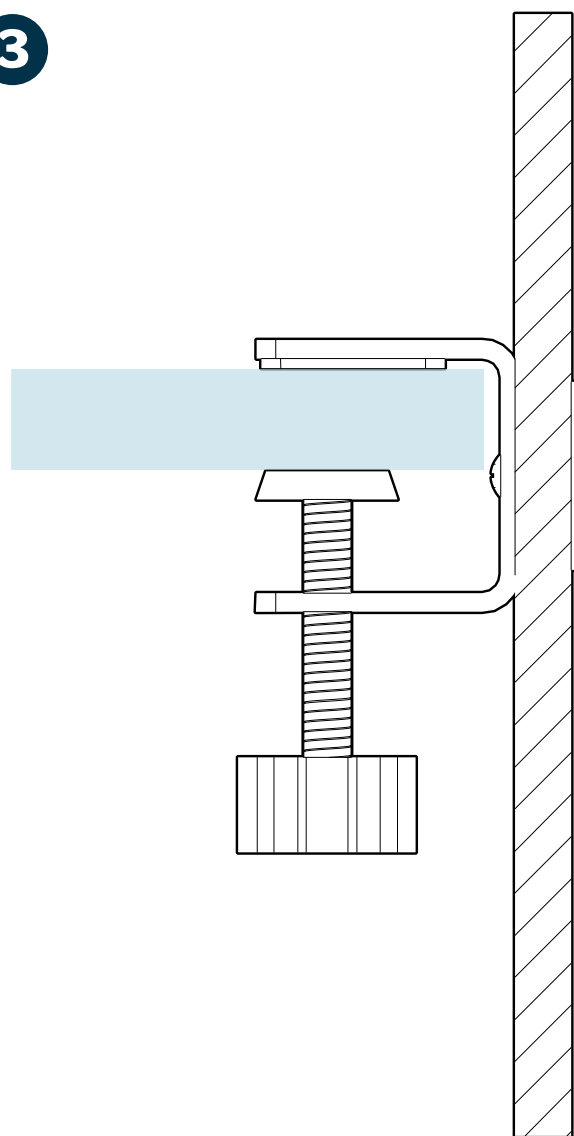



Turn the knobs on the **CLAMPS** to widen the bracket to match the thickness of the desk surface.

4

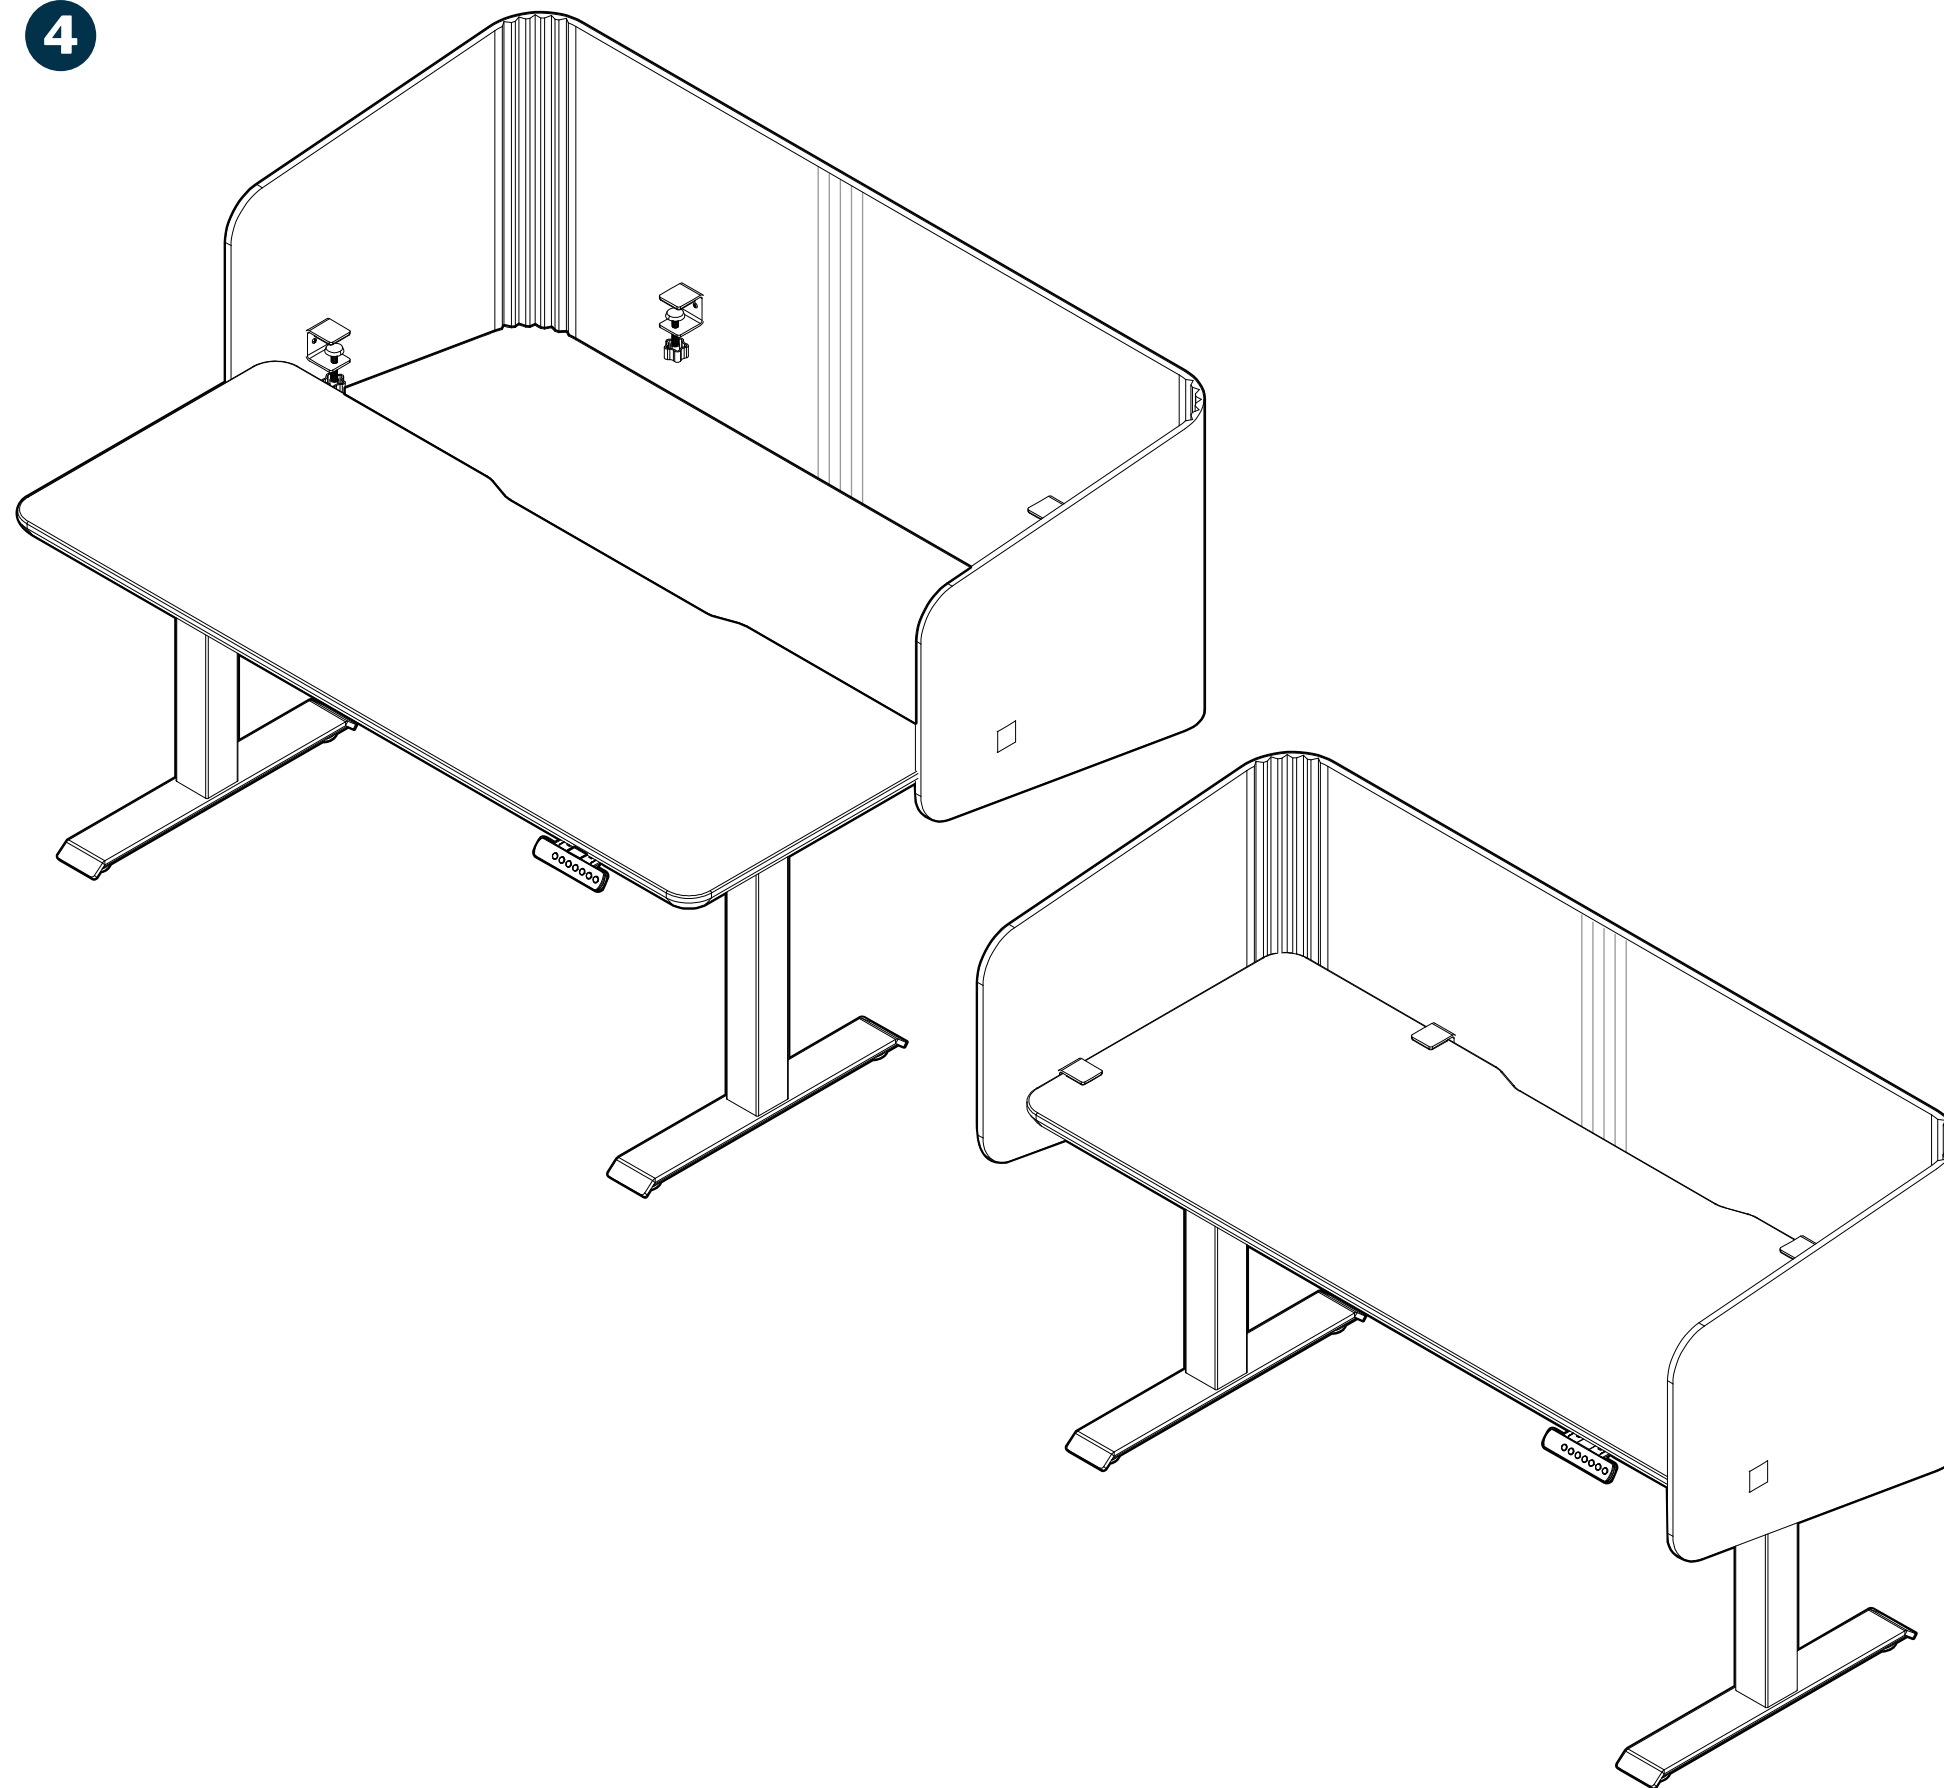

Slide the **CLAMPS** onto the edge of the worksurface and turn the knobs to secure the **DESK SURROUND** to the desk.

5

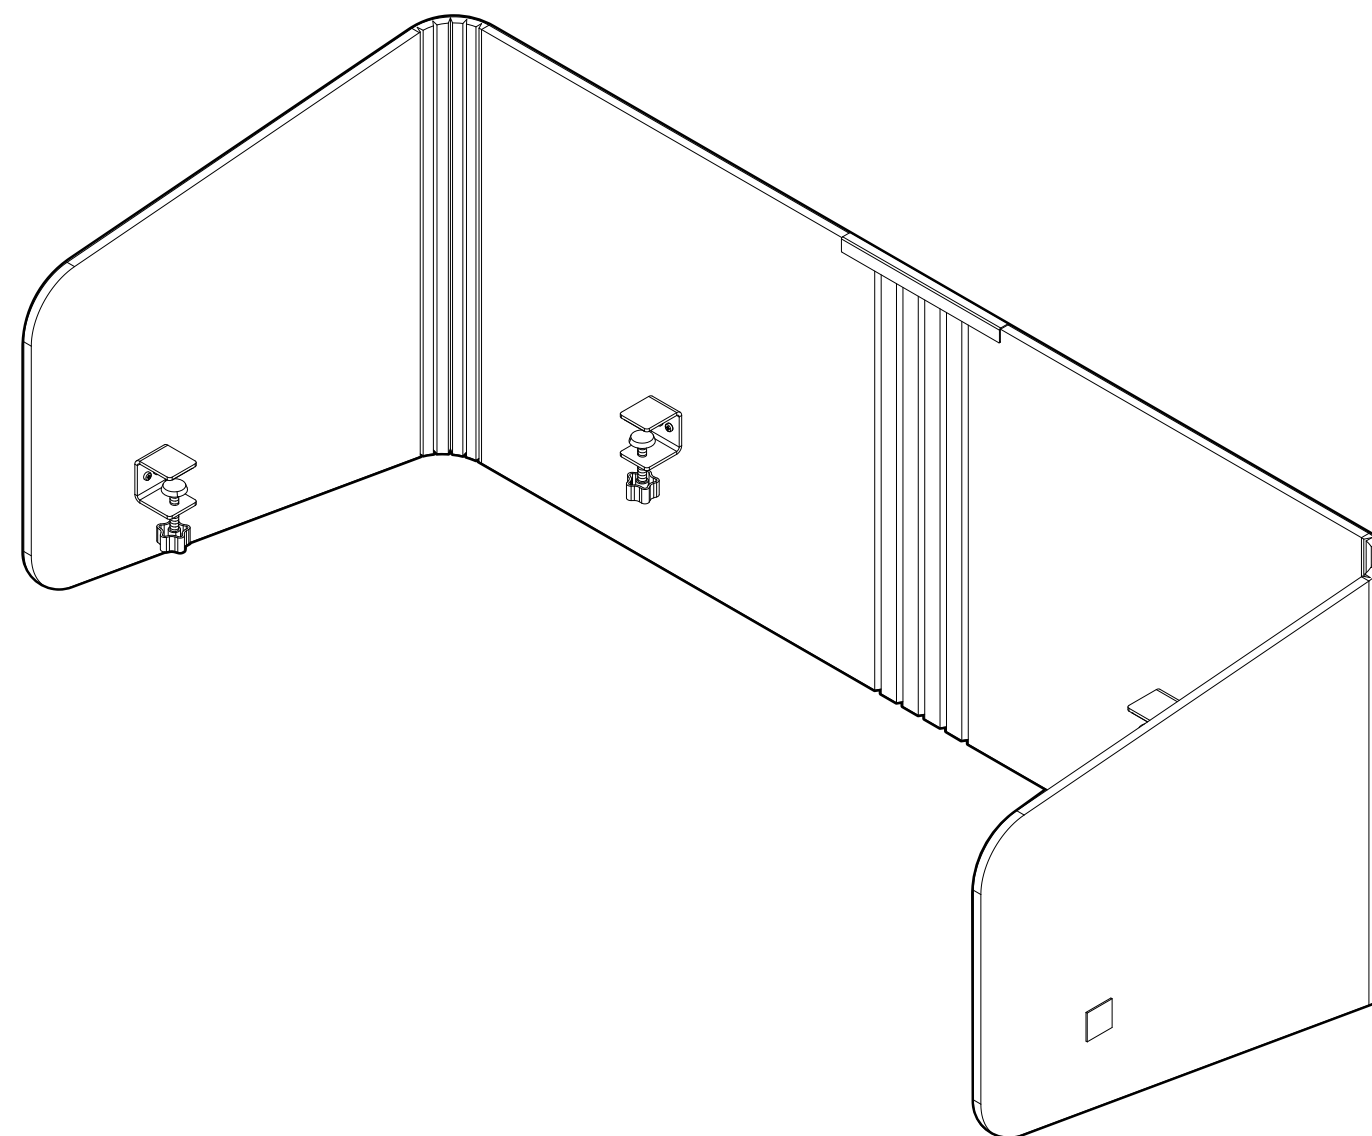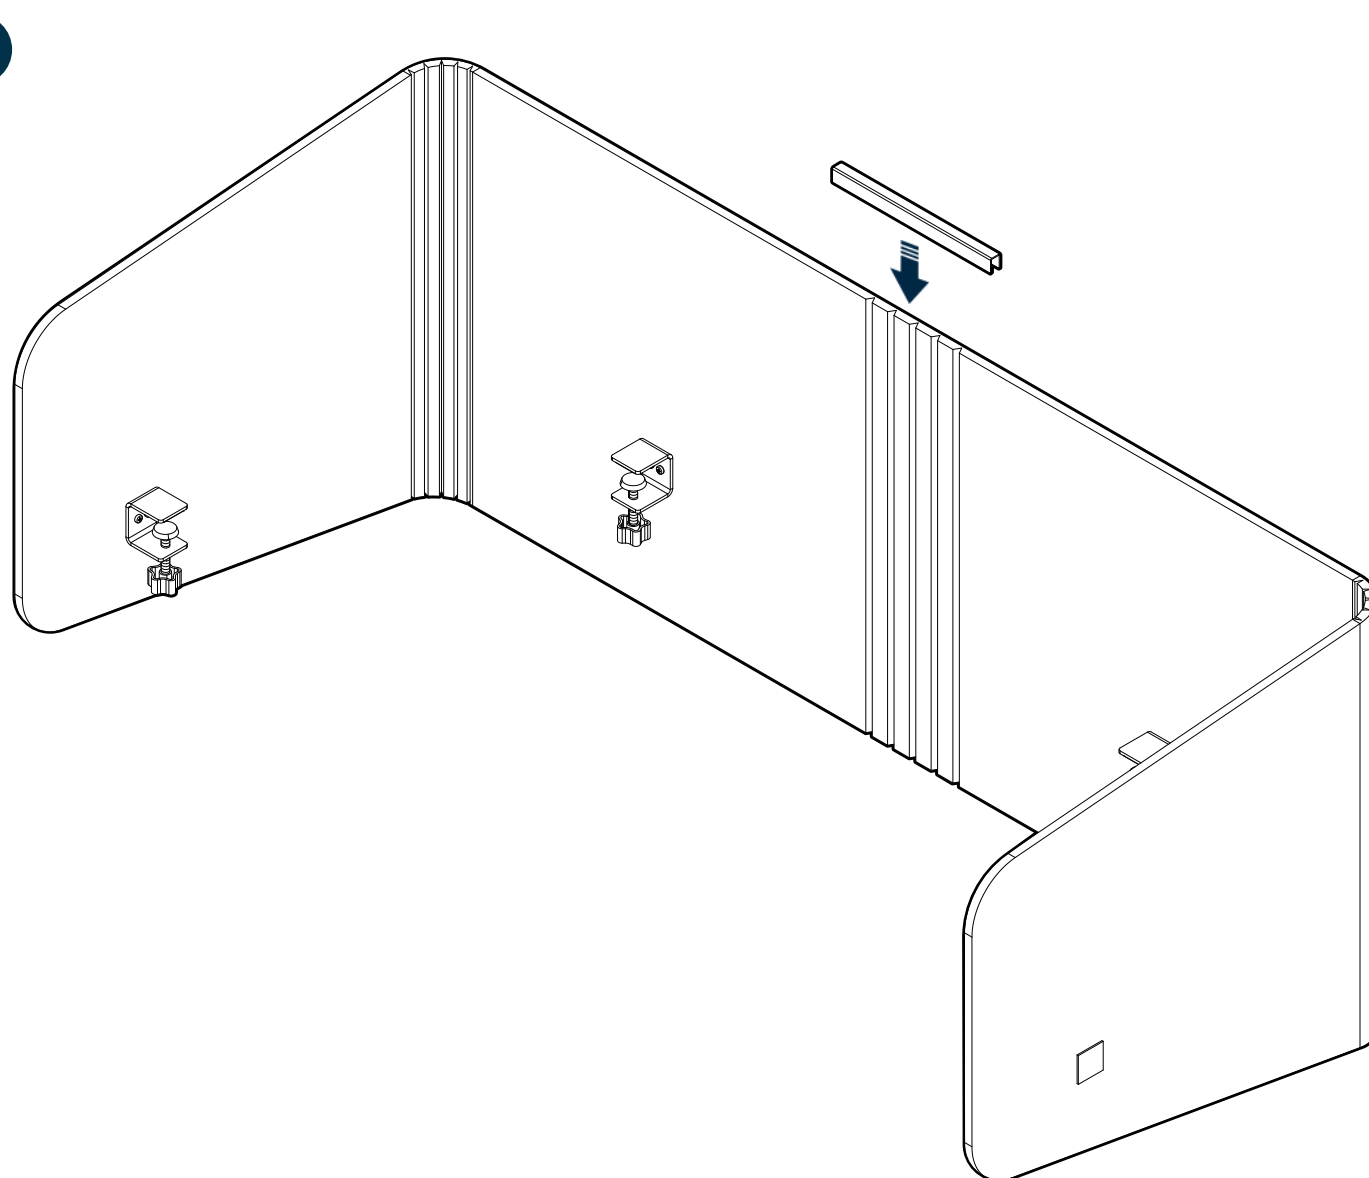

Slide the **CHANNEL COVER** onto the center of the **DESK SURROUND** to ensure it remains straight.



CAUTION: Inserting push pins, tacks, or hooks into the panels may cause surface damage and is not recommended.



(800) 207-2587