


PC Desk Mount

vari<sup>®</sup>



 (800) 207-2587

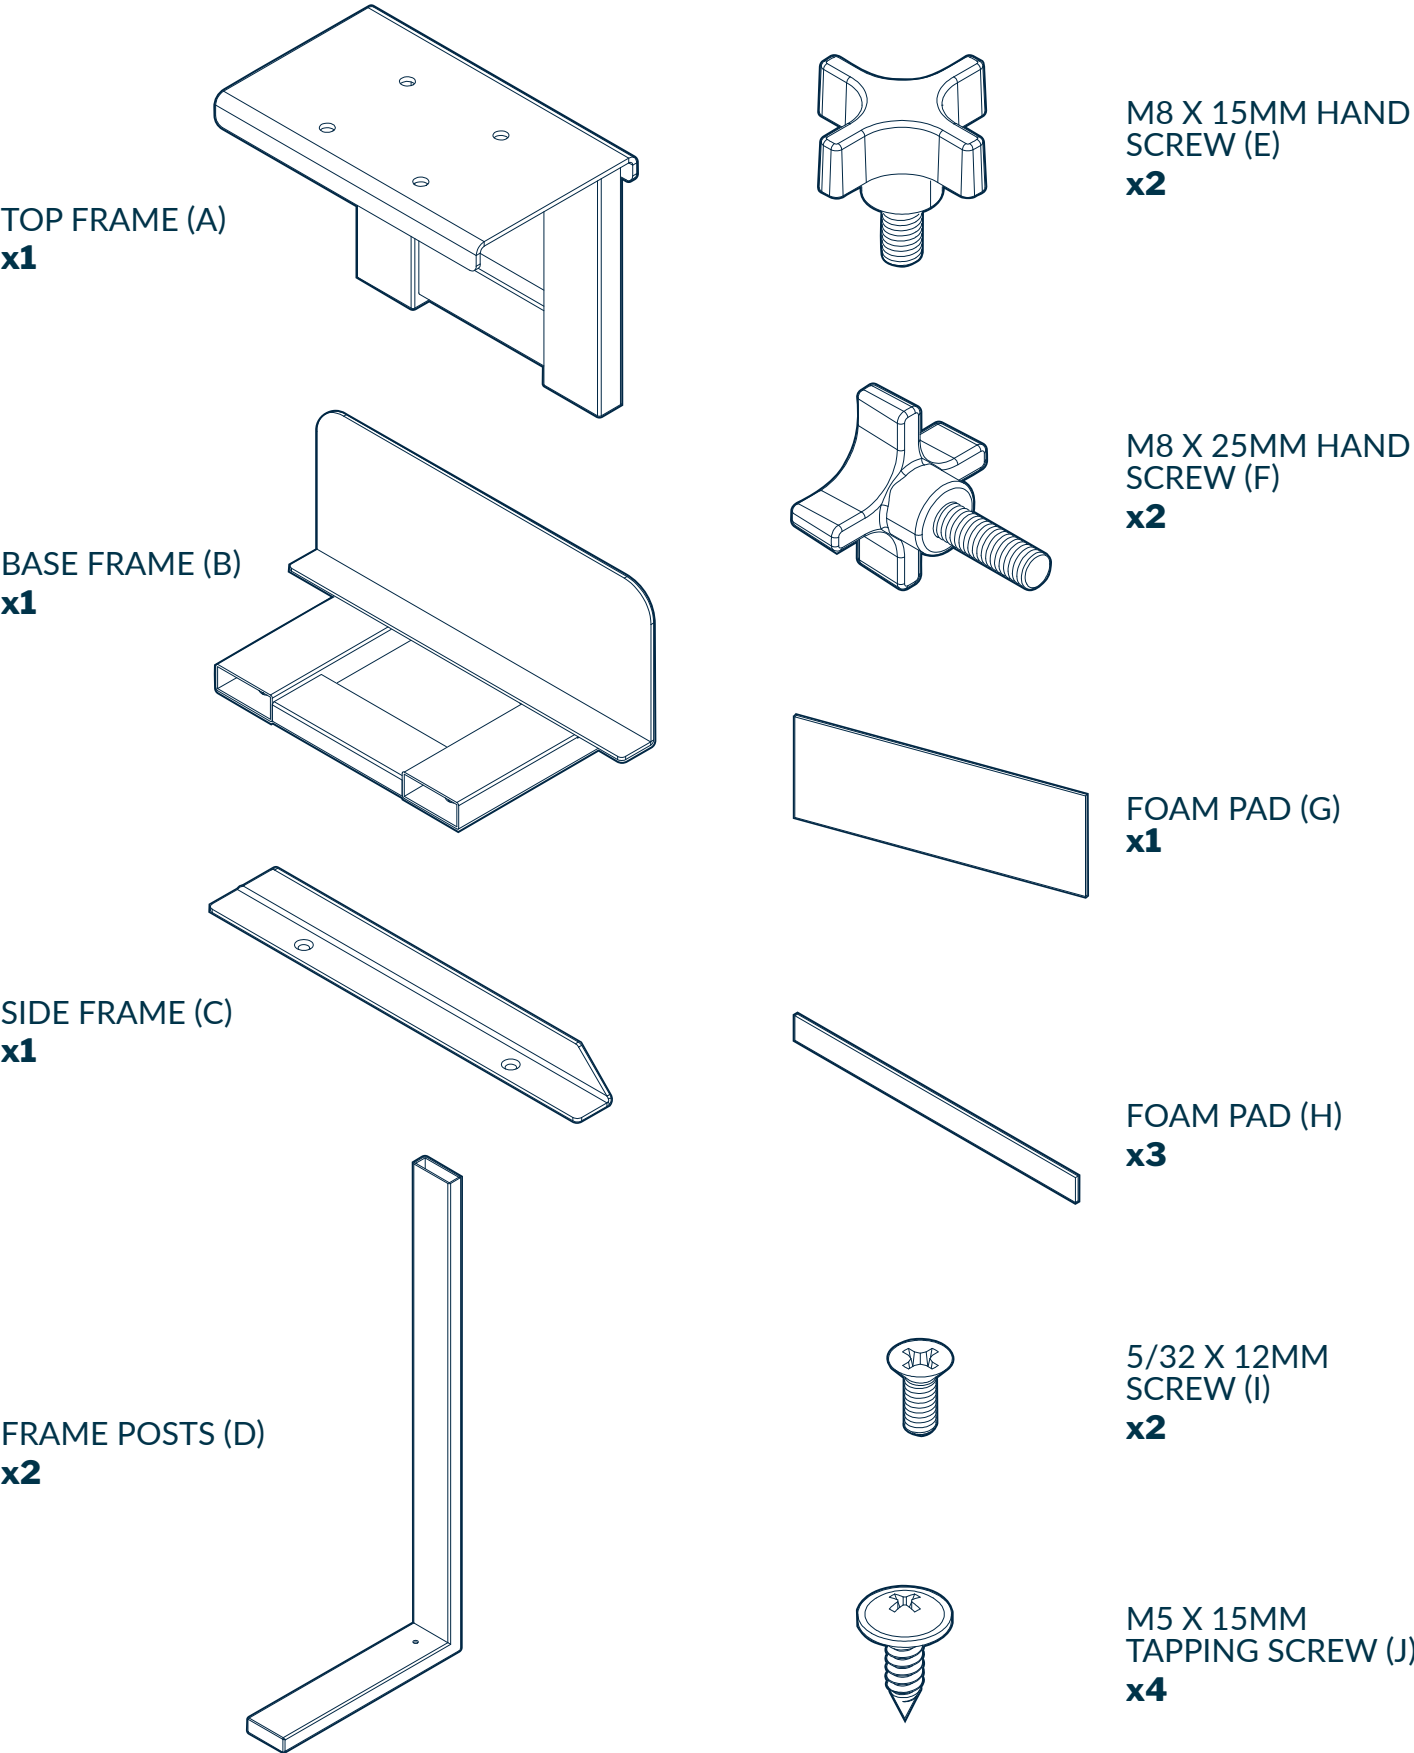

## TOOLS NEEDED



- Phillips Head Screwdriver (not included)
- Power Drill with a Phillips Head Drill Bit



## WEIGHT CAPACITY

35 lbs (15.87 kg)

1

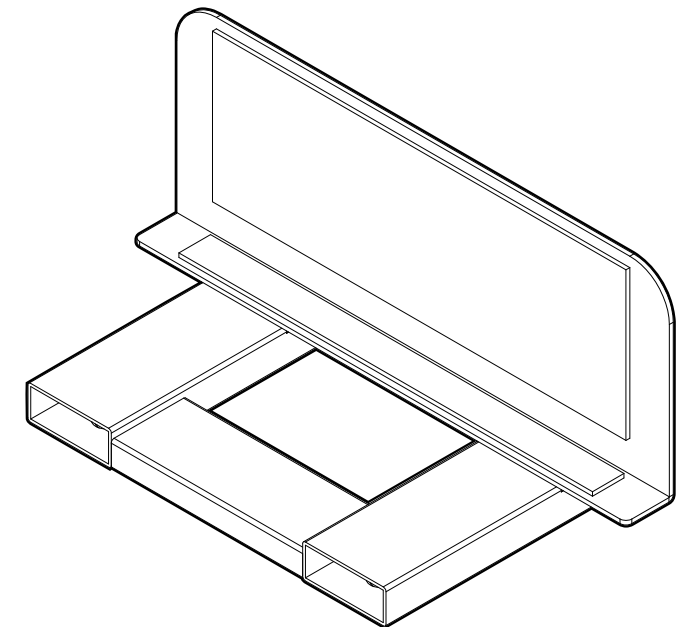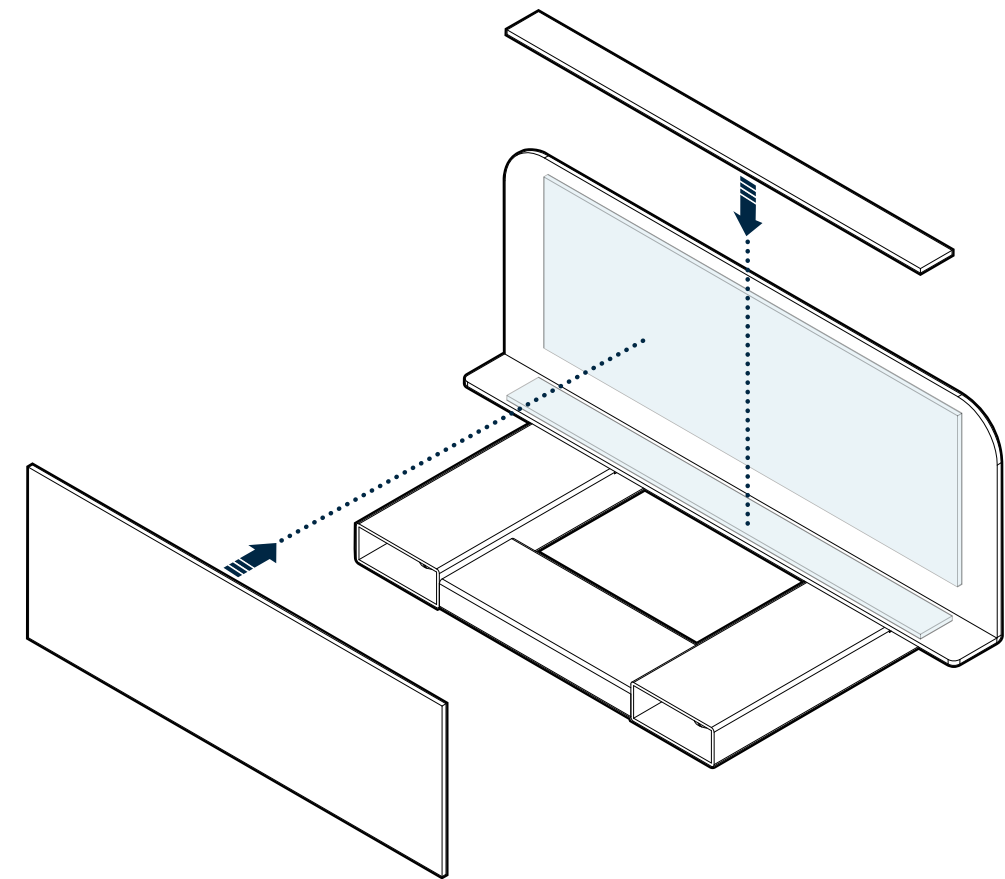


### STEP 1: Prepare the Base Frame

Take the **BASE FRAME (B)** and attach one adhesive **FOAM PAD (H)** to the frame. Press firmly to secure it in place.

Attach another adhesive **FOAM PAD (G)** to the side of the **BASE FRAME (B)**. Press firmly to secure it.

2

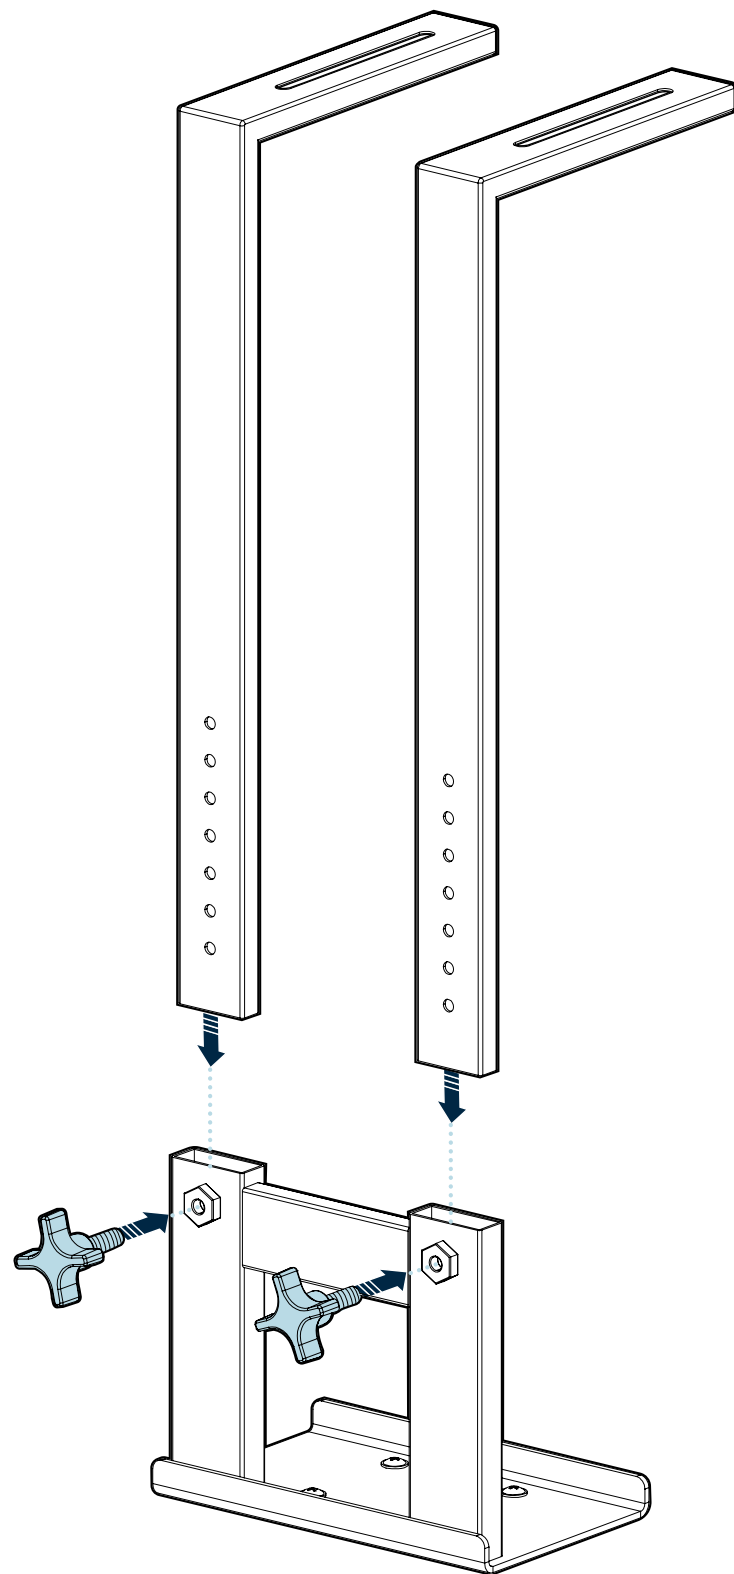

### STEP 2: Adjust for Your Computer Tower


Measure the height of your computer tower (CPU) to ensure the **FRAME POSTS (D)** can accommodate it.

Insert both **FRAME POSTS (D)** into the **TOP FRAME (A)**.

Adjust the height of the **FRAME POSTS (D)** to fit your CPU, aligning the holes on the posts with the threaded holes on the **TOP FRAME (A)**.

Secure the posts in place with two **HAND SCREWS (F)** by turning them until they firmly contact the frame posts.

3

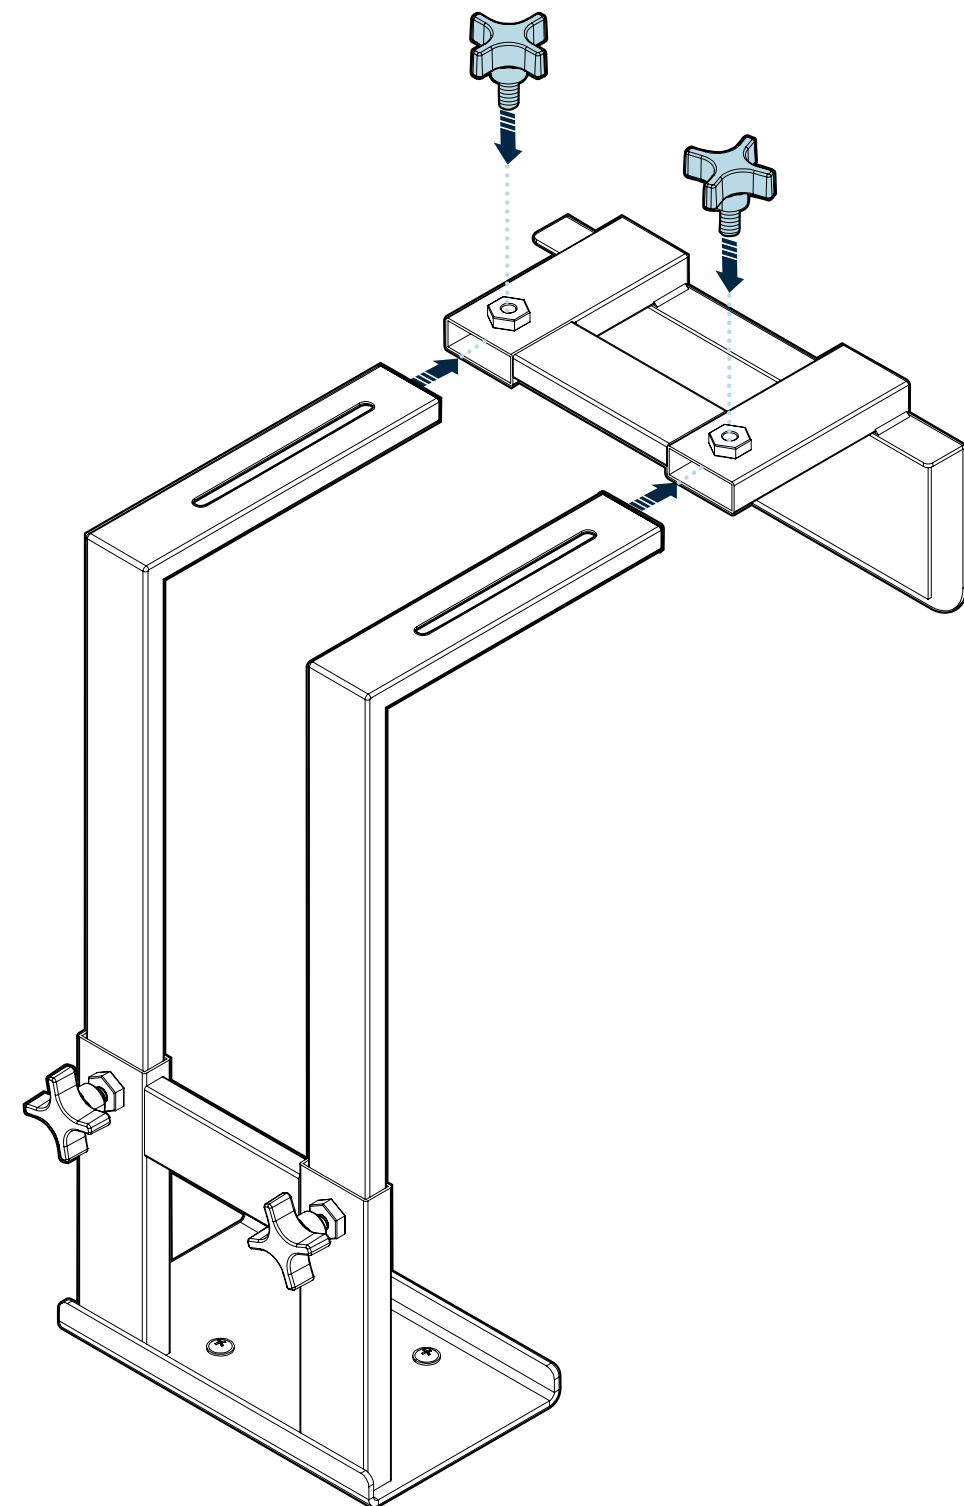


### STEP 3: Attach the Base Frame

Slide the **BASE FRAME (B)** into the tubes of the **FRAME POSTS (D)**.

Keep the hand screws slightly loose for easy adjustments. Tighten them fully once the CPU is in place.

4

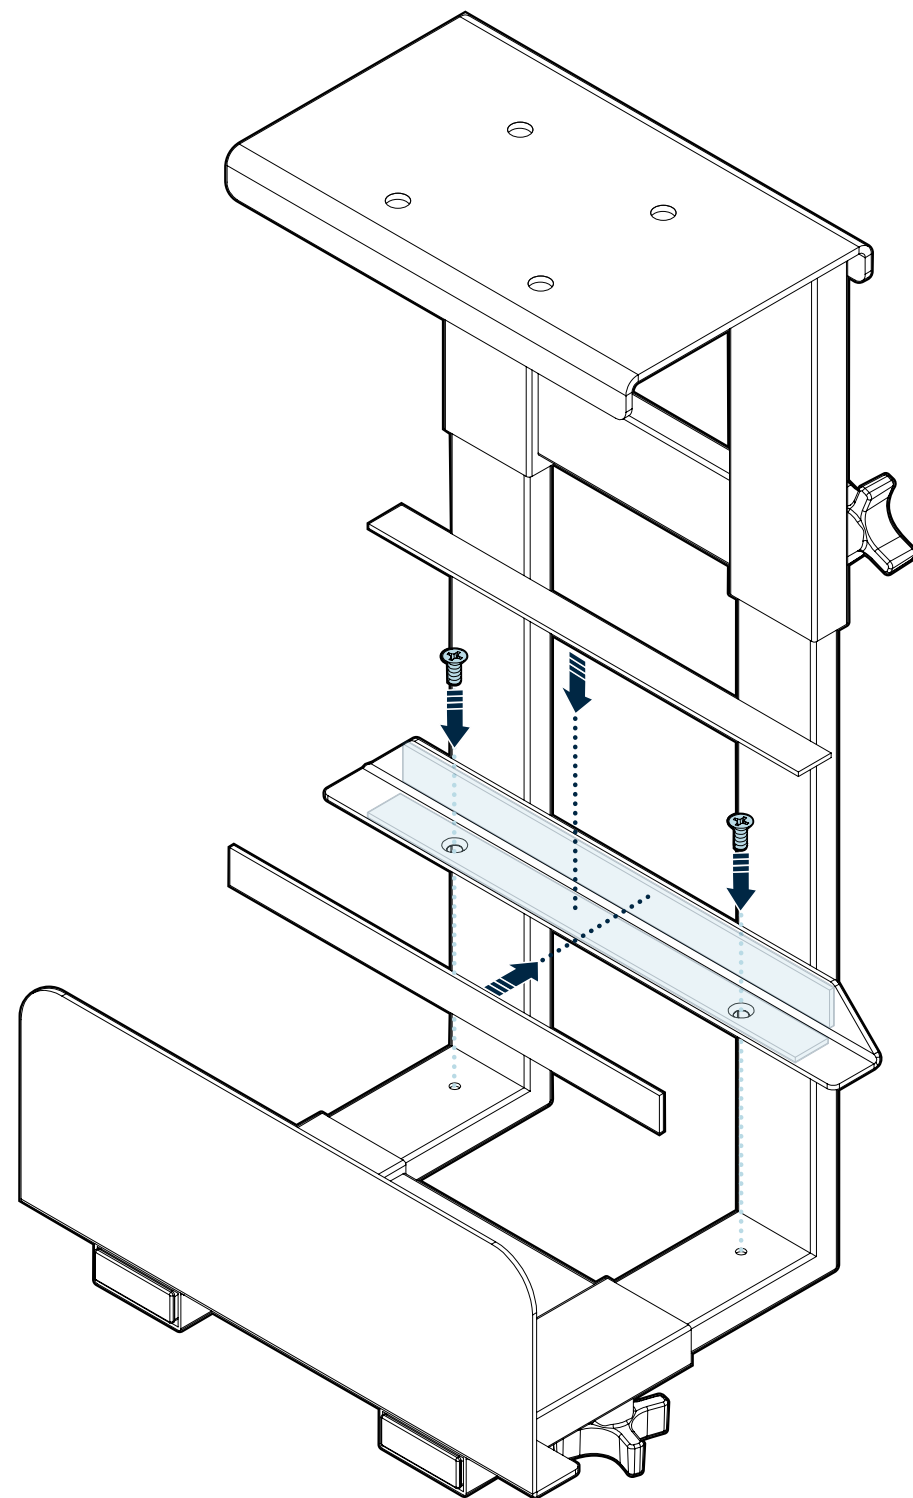


#### STEP 4: Install the Side Frame

Align the screw holes of the **SIDE FRAME (C)** with the holes on the **FRAME POSTS (D)**. Insert two **5/32 X 12MM SCREWS** and tighten securely using a Phillips Head Screwdriver (not included).

Adhere two adhesive **FOAM PADS (H)** to the **SIDE FRAME (C)**.

5

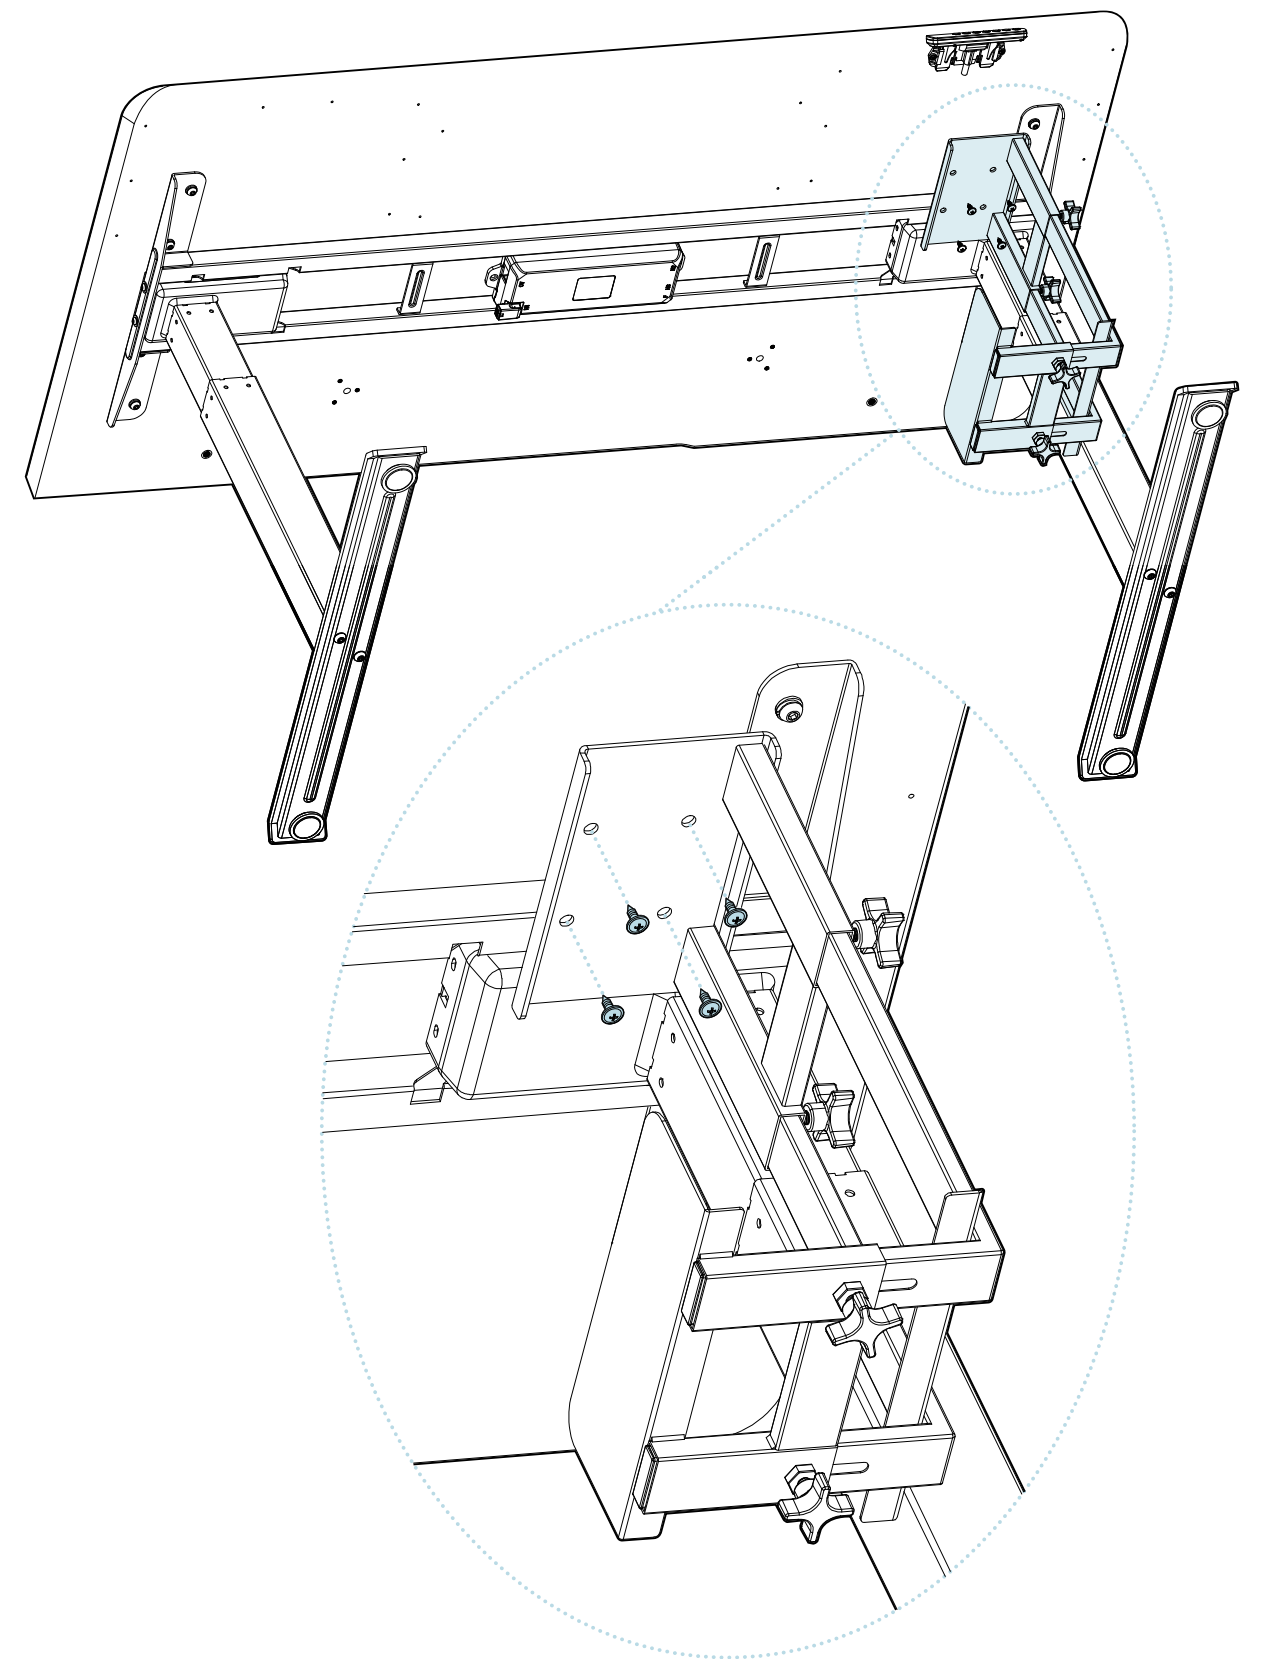

#### STEP 5: Mount Under the Desk

**IMPORTANT:** Before installation, check for any obstructions under the desktop. This product is optimized for Vari® Electric Standing Desks and Tables that have a **minimum depth of 26"**. If installing on a non-Vari product, ensure the desktop is at least 20mm (0.78") thick to prevent over-drilling.

Choose a location under your desk that is free of cables and other obstructions.

Using a Power Drill with a Phillips Head Drill Bit or a Phillips Head Screwdriver, insert four **M5 X 15MM TAPPING SCREWS (J)** into the **TOP FRAME (A)** and tighten securely.

Place your CPU in the PC Desk Mount and adjust the frame width and height by loosening or tightening the hand screws to securely hold the CPU in place.